



Power Master XT / Power Master / Master Q4
MI 2893 / MI 2892 / MI 2885
(HW: 9.0)

Instruction manual

Version 1.3.6 Code No. 20 753 179

Distributor:

Manufacturer:

METREL d.d.
Ljubljanska cesta 77
1354 Horjul
Slovenia

web site: <http://www.metrel.si>
e-mail: metrel@metrel.si



Mark on your equipment certifies that this equipment meets requirements of all subjected EU regulations.



Hereby, Metrel d.d. declares that the MI 2893, MI 2892, MI 2885 is in compliance with subjected EU directive. The full text of the EU declaration of conformity is available at the following internet address <http://www.metrel.si/DoC>.

© 2022 METREL

The trade names Metrel®, Smartec®, Eurotest®, Auto Sequence® are trademarks registered in Europe and other countries.

No part of this publication may be reproduced or utilized in any form or by any means without permission in writing from METREL.

| | | |
|-------------|---|-----------|
| 1 | Introduction | 14 |
| 1.1 | Main Features | 15 |
| 1.2 | Safety considerations | 16 |
| 1.3 | Applicable standards | 17 |
| 1.4 | Abbreviations | 18 |
| 2 | Description | 29 |
| 2.1 | Front panel | 29 |
| 2.2 | Connector panel | 30 |
| 2.3 | Bottom view | 31 |
| 2.4 | Accessories | 31 |
| 2.4.1 | Standard accessories | 31 |
| 2.4.2 | Optional accessories | 31 |
| 3 | Operating the instrument | 32 |
| 3.1 | Instrument status bar | 33 |
| 3.2 | Instrument keys | 34 |
| 3.3 | Instrument memory (microSD card) | 35 |
| 3.4 | Instrument Main Menu | 35 |
| 3.4.1 | Instrument submenus | 36 |
| 3.5 | U, I, f | 38 |
| 3.5.1 | Meter | 38 |
| 3.5.2 | Scope | 40 |
| 3.5.3 | Trend | 42 |
| 3.5.4 | Voltage and current trends | 42 |
| 3.6 | Power | 45 |
| 3.6.1 | Meter | 45 |
| 3.6.2 | Trend | 48 |
| 3.7 | Energy | 51 |
| 3.7.1 | Meter | 51 |
| 3.7.2 | Trend | 53 |
| 3.7.3 | Efficiency | 54 |
| 3.8 | Harmonics / inter-harmonics | 56 |
| 3.8.1 | Meter | 56 |
| 3.8.2 | Histogram (Bar) | 58 |
| 3.8.3 | Harmonics Average Histogram (Avg Bar) | 59 |
| 3.8.4 | Trend | 61 |
| 3.9 | Flickers | 63 |
| 3.9.1 | Meter | 63 |
| 3.9.2 | Trend | 64 |
| 3.10 | Phase Diagram | 65 |
| 3.10.1 | Phase diagram | 65 |
| 3.10.2 | Unbalance diagram | 66 |
| 3.10.3 | Unbalance trend | 68 |
| 3.11 | Temperature | 69 |
| 3.11.1 | Meter | 69 |
| 3.11.2 | Trend | 69 |
| 3.12 | Under deviation and over deviation | 70 |
| 3.12.1 | Meter | 70 |

| | | |
|-------------|---|------------|
| 3.12.2 | Trend | 71 |
| 3.13 | Signalling..... | 72 |
| 3.13.1 | Meter | 72 |
| 3.13.2 | Trend | 73 |
| 3.13.3 | Table | 75 |
| 3.14 | General Recorder..... | 76 |
| 3.15 | Waveform/Inrush recorder | 79 |
| 3.15.1 | Setup | 79 |
| 3.15.2 | Capturing waveform | 81 |
| 3.15.3 | Captured waveform | 83 |
| 3.16 | Transient recorder | 85 |
| 3.16.1 | Power Master XT - MI 2893 | 85 |
| 3.16.1.1 | Setup | 85 |
| 3.16.2 | Power Master/Master Q4 - MI 2892/MI 2885 | 88 |
| 3.16.2.1 | Setup | 88 |
| 3.16.3 | Capturing transients | 90 |
| 3.16.4 | Captured transients | 92 |
| 3.17 | Events table..... | 93 |
| 3.17.1 | Group view | 93 |
| 3.17.2 | Phase view | 95 |
| 3.18 | Alarms table..... | 97 |
| 3.19 | Rapid voltage changes (RVC) table | 99 |
| 3.20 | Inrush table | 100 |
| 3.21 | E-Meter recorder (MI 2892/MI 2885) | 101 |
| 3.22 | Memory List | 106 |
| 3.22.1 | General Record | 109 |
| 3.22.2 | Waveform snapshot..... | 112 |
| 3.22.3 | Waveform/inrush record | 113 |
| 3.22.4 | Transients record | 113 |
| 3.23 | Measurement Setup submenu | 114 |
| 3.23.1 | Connection setup | 114 |
| 3.23.2 | Event setup | 120 |
| 3.23.3 | Alarm setup..... | 121 |
| 3.23.4 | Signalling setup | 122 |
| 3.23.5 | Rapid voltage changes (RVC) setup | 123 |
| 3.23.6 | Measuring Methods setup..... | 124 |
| 3.23.7 | Transient setup | 125 |
| 3.24 | General Setup submenu..... | 127 |
| 3.24.1 | Communication..... | 127 |
| 3.24.2 | Time & Date | 129 |
| 3.24.3 | Language | 130 |
| 3.24.4 | Instrument info | 131 |
| 3.24.5 | Lock/Unlock | 132 |
| 3.24.6 | Colour model | 133 |
| 3.24.7 | Backlight..... | 134 |
| 4 | Recording Practice and Instrument Connection | 136 |
| 4.1 | Measurement campaign | 136 |
| 4.2 | Connection setup..... | 142 |
| 4.2.1 | Connection to the LV Power Systems | 142 |

| | | |
|------------|---|------------|
| 4.2.2 | Connection to the MV or HV Power System | 147 |
| 4.2.3 | Current clamp selection and transformation ratio setting | 151 |
| 4.2.4 | Connection check | 155 |
| 4.2.5 | Temperature probe connection | 157 |
| 4.2.6 | GPS time synchronization device connection | 158 |
| 4.2.1 | Printing support | 159 |
| 4.3 | Remote instrument connection (over Internet / Internet(3G/GPRS) / Intranet (LAN))..... | 160 |
| 4.3.1 | Communication principle | 160 |
| 4.3.2 | Instrument setup on remote measurement site | 161 |
| 4.3.3 | PowerView setup for instrument remote access..... | 163 |
| 4.3.4 | Remote connection | 164 |
| 4.4 | Number of measured parameters and connection type relationship | 174 |
| 5 | Theory and internal operation | 181 |
| 5.1 | Measurement methods | 181 |
| 5.1.1 | Measurement aggregation over time intervals | 181 |
| 5.1.2 | Voltage measurement (magnitude of supply voltage) | 181 |
| 5.1.3 | Current measurement (magnitude of supply current) | 182 |
| 5.1.4 | Frequency measurement | 183 |
| 5.1.5 | Modern Power measurement..... | 183 |
| 5.1.6 | Classic Vector and Arithmetic Power measurement | 188 |
| 5.1.7 | Energy..... | 191 |
| 5.1.8 | Harmonics and interharmonics | 192 |
| 5.1.9 | Signalling | 194 |
| 5.1.10 | Flicker | 195 |
| 5.1.11 | Voltage and current unbalance | 196 |
| 5.1.12 | Under-deviation and over-deviation | 196 |
| 5.1.13 | Voltage events | 197 |
| 5.1.14 | Alarms | 200 |
| 5.1.15 | Rapid voltage changes (RVC) | 201 |
| 5.1.16 | Data aggregation in GENERAL RECORDING | 202 |
| 5.1.17 | Flagged data..... | 206 |
| 5.1.18 | Waveform snapshot..... | 206 |
| 5.1.19 | Waveform recorder | 206 |
| 5.1.20 | Transient recorder | 210 |
| 5.2 | EN 50160 Standard Overview | 211 |
| 5.2.1 | Power frequency | 212 |
| 5.2.2 | Supply voltage variations | 212 |
| 5.2.3 | Supply voltage unbalance | 212 |
| 5.2.4 | THD voltage and harmonics | 212 |
| 5.2.5 | Interharmonic voltage..... | 213 |
| 5.2.6 | Mains signalling on the supply voltage | 213 |
| 5.2.7 | Flicker severity | 213 |
| 5.2.8 | Voltage dips..... | 213 |
| 5.2.9 | Voltage swells..... | 214 |
| 5.2.10 | Short interruptions of the supply voltage..... | 214 |
| 5.2.11 | Long interruptions of the supply voltage..... | 214 |
| 5.2.12 | MI 2893/MI 2892/MI 2885 recorder setting for EN 50160 survey..... | 214 |
| 6 | Technical specifications | 216 |
| 6.1 | General specifications..... | 216 |
| 6.2 | Measurements | 216 |

| | | |
|------------|---|------------|
| 6.2.1 | General description..... | 216 |
| 6.2.2 | Phase Voltages | 218 |
| 6.2.3 | Line voltages..... | 218 |
| 6.2.4 | Current | 220 |
| 6.2.5 | Frequency..... | 223 |
| 6.2.6 | Flickers..... | 223 |
| 6.2.7 | Transients..... | 223 |
| 6.2.8 | Combined power..... | 224 |
| 6.2.9 | Fundamental power | 224 |
| 6.2.10 | Nonfundamental power | 225 |
| 6.2.11 | Power factor (PF, PFe, PFv, PFa) | 226 |
| 6.2.12 | Displacement factor (DPF) or Cos ϕ | 226 |
| 6.2.13 | Energy | 226 |
| 6.2.14 | Voltage harmonics and THD | 227 |
| 6.2.15 | Current harmonics, THD and k-factor..... | 227 |
| 6.2.16 | Voltage interharmonics | 228 |
| 6.2.17 | Current interharmonics | 228 |
| 6.2.18 | Signalling | 229 |
| 6.2.19 | Unbalance | 229 |
| 6.2.20 | Overdeviation and Underdeviation | 229 |
| 6.2.21 | Time and duration uncertainty | 229 |
| 6.2.22 | Temperature probe | 229 |
| 6.2.23 | Phase angle | 230 |
| 6.2.24 | 400Hz systems specification | 230 |
| 6.2.25 | VFD (Variable frequency drive) systems specification..... | 230 |
| 6.2.26 | Differences in specification between 400Hz, VFD and 50/60 Hz systems..... | 230 |
| 6.3 | Recorders..... | 231 |
| 6.3.1 | General recorder | 231 |
| 6.3.2 | Waveform/inrush recorder | 232 |
| 6.3.3 | Waveform snapshot..... | 232 |
| 6.3.4 | Transient recorder..... | 232 |
| 6.4 | Standards compliance..... | 234 |
| 6.4.1 | Compliance to the IEC 61557-12..... | 234 |
| 6.4.2 | Compliance to the to the IEC 61000-4-30..... | 235 |
| 7 | Maintenance | 236 |
| 7.1 | Inserting batteries into the instrument..... | 236 |
| 7.2 | Batteries | 237 |
| 7.3 | Firmware upgrade | 238 |
| 7.3.1 | Requirements..... | 238 |
| 7.3.2 | Upgrade procedure | 239 |
| 7.4 | Power supply considerations | 242 |
| 7.5 | Cleaning | 242 |
| 7.6 | Periodic calibration..... | 243 |
| 7.7 | Service | 243 |
| 7.8 | Troubleshooting | 243 |
| 8 | Version of document | 243 |

List of tables:

| | |
|--|----|
| Table 1: MI 2893/MI 2892/MI 2885 standard accessories | 31 |
| Table 2: Instrument status bar description..... | 33 |
| Table 3: Shortcut Keys and other Function keys..... | 34 |
| Table 4: Instrument Main menu | 36 |
| Table 5: Keys in Main menu | 36 |
| Table 6: Keys in submenus..... | 38 |
| Table 7: Instrument screen symbols and abbreviations..... | 39 |
| Table 8: Keys in Meter screens | 40 |
| Table 9: Instrument screen symbols and abbreviations..... | 41 |
| Table 10: Keys in Scope screens..... | 41 |
| Table 11: Instrument screen symbols and abbreviations..... | 43 |
| Table 12: Keys in Trend screens..... | 43 |
| Table 13: Instrument screen symbols and abbreviations (see 5.1.5 for details) – instantaneous values.. | 46 |
| Table 14: Keys in Power (METER) screens | 47 |
| Table 15: Instrument screen symbols and abbreviations..... | 48 |
| Table 16: Keys in Power (TREND) screens | 50 |
| Table 17: Instrument screen symbols and abbreviations..... | 52 |
| Table 18: Keys in Energy (METER) screens | 52 |
| Table 19: Instrument screen symbols and abbreviations..... | 53 |
| Table 20: Keys in Energy (TREND) screens..... | 53 |
| Table 21: Instrument screen symbols and abbreviations..... | 54 |
| Table 22: Keys in Energy (TREND) screens..... | 55 |
| Table 23: Instrument screen symbols and abbreviations..... | 57 |
| Table 24: Keys in Harmonics / inter-harmonics (METER) screens..... | 57 |
| Table 25: Instrument screen symbols and abbreviations..... | 58 |
| Table 26: Keys in Harmonics / inter-harmonics (BAR) screens..... | 58 |
| Table 27: Instrument screen symbols and abbreviations..... | 60 |
| Table 28: Keys in Harmonics / inter-harmonics (AVG) screens | 60 |
| Table 29: Instrument screen symbols and abbreviations..... | 61 |
| Table 30: Keys in Harmonics / inter-harmonics (TREND) screens | 62 |
| Table 31: Instrument screen symbols and abbreviations..... | 63 |
| Table 32: Keys in Flickers (METER) screen | 63 |
| Table 33: Instrument screen symbols and abbreviations..... | 64 |
| Table 34: Keys in Flickers (TREND) screens..... | 65 |
| Table 35: Instrument screen symbols and abbreviations..... | 66 |
| Table 36: Keys in Phase diagram screen | 66 |
| Table 37: Instrument screen symbols and abbreviations..... | 67 |
| Table 38: Keys in Unbalance diagram screens..... | 67 |
| Table 39: Instrument screen symbols and abbreviations..... | 68 |
| Table 40: Keys in Unbalance trend screens | 68 |
| Table 41: Instrument screen symbols and abbreviations..... | 69 |
| Table 42: Keys in Temperature meter screen..... | 69 |
| Table 43: Instrument screen symbols and abbreviations..... | 70 |
| Table 44: Keys in Temperature trend screens | 70 |
| Table 45: Instrument screen symbols and abbreviations..... | 71 |
| Table 46: Keys in Under deviation and over deviation (METER) screen..... | 71 |
| Table 47: Instrument screen symbols and abbreviations..... | 71 |
| Table 48: Keys in Under deviation and Over deviation (TREND) screens..... | 72 |
| Table 49: Instrument screen symbols and abbreviations..... | 73 |
| Table 50: Keys in Signalling (METER) screen..... | 73 |

| | |
|--|-----|
| Table 51: Instrument screen symbols and abbreviations | 74 |
| Table 52: Keys in Signalling (TREND) screen | 74 |
| Table 53: Instrument screen symbols and abbreviations | 75 |
| Table 54: Keys in Signalling (TABLE) screen | 75 |
| Table 55: General recorder settings description and screen symbols | 76 |
| Table 56: Keys in General recorder setup screen | 78 |
| Table 57: Waveform recorder settings description and screen symbols | 79 |
| Table 58: Keys in Waveform recorder setup screen | 80 |
| Table 59: Instrument screen symbols and abbreviations | 82 |
| Table 60: Keys in Waveform recorder capture screen | 82 |
| Table 61: Instrument screen symbols and abbreviations | 83 |
| Table 62: Keys in captured waveform recorder screens | 83 |
| Table 63: Transients on the low voltage network | 85 |
| Table 64: Transient recorder settings description and screen symbols | 86 |
| Table 65: Keys in Transient recorder setup screen | 87 |
| Table 66: Transient recorder settings description and screen symbols | 88 |
| Table 67: Keys in Transient recorder setup screen | 90 |
| Table 68: Instrument screen symbols and abbreviations | 91 |
| Table 69: Keys in Transient recorder capture screen | 91 |
| Table 70: Instrument screen symbols and abbreviations | 92 |
| Table 71: Keys in captured transient recorder screens | 92 |
| Table 72: Instrument screen symbols and abbreviations | 94 |
| Table 73: Keys in Events table group view screens | 94 |
| Table 74: Instrument screen symbols and abbreviations | 96 |
| Table 75: Keys in Events table phase view screens | 96 |
| Table 76: Instrument screen symbols and abbreviations | 98 |
| Table 77: Keys in Alarms table screens | 98 |
| Table 78: Instrument screen symbols and abbreviations | 99 |
| Table 79: Keys in RVC Events table group view screens | 100 |
| Table 80: Instrument screen symbols and abbreviations | 100 |
| Table 81: E-Meter recorder settings description | 103 |
| Table 82: Functional Keys in E-Meter recorder setup screen | 103 |
| Table 83: E-Meter recorder setup settings description | 104 |
| Table 84: Instrument screen symbols and abbreviations | 106 |
| Table 85: Keys in Memory list (Folder) screen | 106 |
| Table 86: Instrument screen symbols and abbreviations | 107 |
| Table 87: Keys in Memory list screen | 108 |
| Table 88: Recorder settings description | 109 |
| Table 89: Keys in General record front page screen | 109 |
| Table 90: Instrument screen symbols and abbreviations | 110 |
| Table 91: Keys in Viewing recorder U,I,f TREND screens | 111 |
| Table 92: Recorder settings description | 112 |
| Table 93: Keys in Snapshot record front page screen | 112 |
| Table 94: Description of Measurement setup options | 114 |
| Table 95: Keys in Measurement setup submenu screen | 114 |
| Table 96: Description of Connection setup | 115 |
| Table 97: Keys in Connection setup menu | 119 |
| Table 98: Description of Event setup | 120 |
| Table 99: Keys in Event setup screen | 120 |
| Table 100: Description of Alarm setup | 121 |
| Table 101: Keys in Alarm setup screens | 122 |
| Table 102: Description of Signalling setup | 123 |

| | |
|---|-----|
| Table 103: Keys in Signalling setup screen | 123 |
| Table 104: Description of RVC setup | 124 |
| Table 105: Keys in RVC setup screen | 124 |
| Table 106: Description of Measuring Methods setup | 125 |
| Table 107: Keys in Measuring Methods setup screen | 125 |
| Table 108: Description of Transient setup..... | 126 |
| Table 109: Description of General setup options | 127 |
| Table 110: Keys in General setup submenu..... | 127 |
| Table 111: Description of Communication setup options | 128 |
| Table 112: Keys in Communication setup..... | 129 |
| Table 113: Description of Set date/time screen | 129 |
| Table 114: Keys in Set date/time screen | 130 |
| Table 115: Keys in Language setup screen | 130 |
| Table 116: Description of Instrument info screen | 131 |
| Table 117: Keys in Instrument info screen..... | 131 |
| Table 118: Description of Lock/Unlock screen | 132 |
| Table 119: Keys in Lock/Unlock screen..... | 132 |
| Table 120: Locked instrument functionality | 132 |
| Table 121: Keys in Colour model screens | 133 |
| Table 122: Description Backlight screen | 135 |
| Table 123: Keys in Backlight screen | 135 |
| Table 124: Keys in Smart clamps pop up window | 154 |
| Table 125: Connection check description and screen symbols | 155 |
| Table 126: Keys in Connection check screen | 157 |
| Table 127: GPS functionality | 158 |
| Table 128: Keys in Set time zone screen..... | 158 |
| Table 129: DPU 414 Dip switches settings are shown on table below: | 160 |
| Table 130: Internet setup parameters..... | 162 |
| Table 131: Internet status bar icons | 162 |
| Table 132: Instrument selection form parameters..... | 163 |
| Table 133: Quantities measured by instrument | 174 |
| Table 134: Quantities recorded by instrument (Standard Profile) | 176 |
| Table 135: Quantities recorded by instrument (Limited Profile)..... | 179 |
| Table 136: Summary and grouping of the phase power quantities | 184 |
| Table 137: Power summary and grouping of the total power quantities | 184 |
| Table 138: Summary and grouping of the phase power quantities | 189 |
| Table 139: Power summary and grouping of the total power quantities | 189 |
| Table 140: Alarm definition parameters..... | 201 |
| Table 141: Alarm signatures | 201 |
| Table 142: Data aggregation methods..... | 203 |
| Table 143: EN 50160 standard LV limits (continuous phenomena) | 211 |
| Table 144: Values of individual harmonic voltages at the supply | 212 |
| Table 145: Voltage dips classification | 214 |
| Table 146: Voltage swell classification | 214 |
| Table 147: General recording max. duration..... | 231 |

List of Figures:

| | |
|---|----|
| Figure 1: Power Master XT instrument..... | 14 |
| Figure 2: Front plates and marking labels..... | 15 |
| Figure 3: Front panel..... | 29 |
| Figure 4: Top connector panel | 30 |
| Figure 5: Side connector panel | 30 |
| Figure 6: Bottom view..... | 31 |
| Figure 7: Display symbols and keys description..... | 32 |
| Figure 8: Common display symbols and labels during measurement campaign | 32 |
| Figure 9: Instrument status bar | 33 |
| Figure 10: Inserting microSD card..... | 35 |
| Figure 11: "MAIN MENU" | 36 |
| Figure 12: Measurements submenu..... | 37 |
| Figure 13: Recorders submenu (MI 2893) | 37 |
| Figure 14: Recorders submenu (MI 2892/MI 2885) | 37 |
| Figure 15: Measurement setup submenu..... | 37 |
| Figure 16: General setup submenu..... | 38 |
| Figure 17: U, I, f meter phase table screens (L1, L2, L3, N)..... | 38 |
| Figure 18: U, I, f meter summary table screens..... | 39 |
| Figure 19: Voltage only waveform..... | 40 |
| Figure 20: Current only waveform..... | 40 |
| Figure 21: Voltage and current waveform (single mode)..... | 41 |
| Figure 22: Voltage and current waveform (dual mode) | 41 |
| Figure 23: Voltage trend (all voltages)..... | 42 |
| Figure 24: Voltage trend (single voltage)..... | 42 |
| Figure 25: Voltage and current trend (single mode) | 42 |
| Figure 26: Voltage and current trend (dual mode)..... | 42 |
| Figure 27: Trends of all currents..... | 43 |
| Figure 28: Frequency trend..... | 43 |
| Figure 29: Power measurements summary (combined) | 45 |
| Figure 30: Power measurements summary (nonfundamental) | 45 |
| Figure 31: Power measurements summary (fundamental)..... | 45 |
| Figure 32: Detailed power measurements at phase L1 | 46 |
| Figure 33: Detailed total power measurements..... | 46 |
| Figure 34: Power trend screen..... | 48 |
| Figure 35: Energy counters screen (General Recorder is running) | 51 |
| Figure 36: Energy counters screen (General Recorder is not running)..... | 52 |
| Figure 37: Energy trend screen | 53 |
| Figure 38: Energy efficiency screen | 54 |
| Figure 39: Harmonics and inter-harmonics (METER) screens | 56 |
| Figure 40: Phase harmonics presentation (U,I,P) | 56 |
| Figure 41: Harmonics histogram screen | 58 |
| Figure 42: Harmonics average histogram screen | 60 |
| Figure 43: Harmonics and inter-harmonics trend screen | 61 |
| Figure 44: Flickers table screen..... | 63 |
| Figure 45: Flickers trend screen | 64 |
| Figure 46: Phase diagram screen | 66 |
| Figure 47: Unbalance diagram screen | 67 |
| Figure 48: Symmetry trend screen | 68 |
| Figure 49: Temperature meter screen..... | 69 |
| Figure 50: Temperature trend screen..... | 70 |

| | |
|--|-----|
| Figure 51: Under deviation and over deviation table screen | 70 |
| Figure 52: Under-deviation and over-deviation TREND screen..... | 71 |
| Figure 53: Signalling meter screen..... | 73 |
| Figure 54: Signalling trend screen..... | 74 |
| Figure 55: Signalling table screen | 75 |
| Figure 56: General recorder setup screen | 76 |
| Figure 57: Triggering in waveform record | 79 |
| Figure 58: Waveform recorder setup screen..... | 79 |
| Figure 59: Waveform recorder capture screen | 81 |
| Figure 60: Waveform recorder screen..... | 81 |
| Figure 61: Waveform recorder scope screen | 82 |
| Figure 62: Captured waveform recorder screen..... | 83 |
| Figure 63: Transient recorder setup screen – MI 2893 | 86 |
| Figure 64: Transient recorder setup screen – MI 2892/MI 2885..... | 88 |
| Figure 65: Transient recorder capture screen (waiting phase/recording) – MI 2893 | 90 |
| Figure 66: Transient recorder capture screen (waiting phase/recording) – MI 2892/MI 2885 | 91 |
| Figure 67: Captured transient recorder screen | 92 |
| Figure 68: Voltage events in group view screen | 93 |
| Figure 69: Voltage event in detail view screen | 94 |
| Figure 70: Voltage events screens | 96 |
| Figure 71: Alarms list screen | 98 |
| Figure 72: RVC Events table group view screen..... | 99 |
| Figure 73: Inrush table group view screen..... | 100 |
| Figure 74: E - Meter measuring accuracy comparison methods | 101 |
| Figure 75: PQI setup connection and Connection check | 102 |
| Figure 76: E-Meter functionality under Recorder menu | 102 |
| Figure 77: E-Meter Recorder menu | 102 |
| Figure 78: E-Meter Recorder setup menu | 104 |
| Figure 79: Memory list screen (Folder structure) | 106 |
| Figure 80: Memory list screen (Recorder data) | 107 |
| Figure 81: Front page of General record in MEMORY LIST menu | 109 |
| Figure 82: Viewing recorder U,I,f TREND data..... | 110 |
| Figure 83: Front page of Snapshot in MEMORY LIST menu | 112 |
| Figure 84: U,I,f meter screen in recalled snapshot record | 113 |
| Figure 85: MEASUREMENT SETUP submenu | 114 |
| Figure 86: “CONNECTION SETUP” screen | 115 |
| Figure 87: Event setup screen..... | 120 |
| Figure 88: Alarm setup screens..... | 121 |
| Figure 89: Signalling setup screen | 123 |
| Figure 90: RVC setup screen | 124 |
| Figure 91: Measuring Methods setup screen – MI 2893 | 124 |
| Figure 92: Measuring Methods setup screen – MI 2892/MI 2885 | 125 |
| Figure 93: Transient setup screen – MI 2893 | 126 |
| Figure 94: Transient setup screen – MI 2892/MI 2885 | 126 |
| Figure 95: GENERAL SETUP submenu | 127 |
| Figure 96: Communication setup screen | 128 |
| Figure 97: Set date/time screen | 129 |
| Figure 98: Language setup screen | 130 |
| Figure 99: Instrument info screen – MI 2893 | 131 |
| Figure 100: Instrument info screen – MI 2892/MI 2885 | 131 |
| Figure 101: Lock/Unlock screen..... | 132 |
| Figure 102: Locked instrument screen..... | 133 |

| | |
|--|-----|
| Figure 103: Colour representation of phase voltages | 133 |
| Figure 104: Backlight screen | 134 |
| Figure 105: Recommended measurement practice | 139 |
| Figure 106: Connection setup menu..... | 142 |
| Figure 107: Choosing 3-phase 4-wire system on instrument | 142 |
| Figure 108: 3-phase 4-wire system..... | 143 |
| Figure 109: Choosing 3-phase 3-wire system on instrument | 143 |
| Figure 110: 3-phase 3-wire system..... | 143 |
| Figure 111: Choosing Open Delta (Aaron) 3-wire system on instrument..... | 144 |
| Figure 112: Open Delta (Aaron) 3-wire system | 144 |
| Figure 113: Choosing 1-phase 3-wire system on instrument | 144 |
| Figure 114: 1-phase 3-wire system..... | 145 |
| Figure 115: Choosing 2-phase 4-wire system on instrument | 145 |
| Figure 116: 2-phase 4-wire system..... | 146 |
| Figure 117: Choosing single- phase Inverter system on instrument | 146 |
| Figure 118: Single – phase inverter system | 146 |
| Figure 119: Choosing three- phase Inverter system on instrument..... | 147 |
| Figure 120: Three – phase inverter system | 147 |
| Figure 121: Voltage ratio for 11 kV / 110 transformer example | 148 |
| Figure 122: Connecting instrument to the existing current transformers in medium voltage system (Aaron / OpenDelta) | 148 |
| Figure 123: Connecting instrument to the existing current transformers in medium voltage system (Delta – Delta)..... | 149 |
| Figure 124: Connecting instrument to the existing current transformers in medium voltage system (Delta – Star)..... | 149 |
| Figure 125: Connecting instrument to the existing current transformers in medium voltage system (Star – Star)..... | 150 |
| Figure 126: Connecting instrument to the existing current transformers in medium voltage system (star – delta)..... | 150 |
| Figure 127: Smart current clamps auto range selection..... | 151 |
| Figure 128: Parallel feeding of large load | 152 |
| Figure 129: Current clamps selection for indirect current measurement..... | 153 |
| Figure 130: Selecting 10% of current clamps range..... | 153 |
| Figure 131: Automatically recognised clamps setup | 154 |
| Figure 132: Automatically recognised clamps status..... | 154 |
| Figure 133: Set time zone screen..... | 158 |
| Figure 134: Connecting printer DPU 414 with instrument | 159 |
| Figure 135: SCOPE screen print | 159 |
| Figure 136: Schematic view on the remote measurements..... | 161 |
| Figure 137: Internet connection setup screen..... | 162 |
| Figure 138: PowerView v3.0 remote connection settings form | 163 |
| Figure 139: PowerView v3.0 remote connection monitor | 164 |
| Figure 140: PowerView connection to LAN and Metrel Server established (Steps 1 & 2) | 165 |
| Figure 141: Remote instrument connection to Metrel Server established (Step 3) | 166 |
| Figure 142: Remote instrument connection to PowerView v3.0 established (Step 4)..... | 167 |
| Figure 143: Active connection indication | 167 |
| Figure 144: Remote connection icon..... | 168 |
| Figure 145: Detection of the instrument type..... | 168 |
| Figure 146: Selecting records from a list for download..... | 169 |
| Figure 147: Real time scope window in remote connection, with several channels selected | 170 |
| Figure 148: Remote Instrument Configuration form..... | 171 |
| Figure 149: Remote Recorder configuration | 172 |

| | |
|--|-----|
| Figure 150: Recording in progress | 173 |
| Figure 151: Phase and Phase-to-phase voltage | 182 |
| Figure 152: IEEE 1459 phase power measurement organisation (phase) | 183 |
| Figure 153: IEEE 1459 phase power measurement organisation (totals)..... | 184 |
| Figure 154: Vector representation of total power calculus..... | 189 |
| Figure 155: Arithmetic representation of total power calculus | 189 |
| Figure 156: Energy counters and quadrant relationship | 192 |
| Figure 157: Instrument energy counters | 192 |
| Figure 158: Current and voltage harmonics | 193 |
| Figure 159: Illustration of harmonics / interharmonics subgroup for 50 Hz supply..... | 194 |
| Figure 160: Voltage fluctuation | 195 |
| Figure 161: $U_{Rms(1/2)}$ 1-cycle measurement | 197 |
| Figure 162: Voltage events definition..... | 198 |
| Figure 163: Voltage dip related screens on the instrument..... | 199 |
| Figure 164: Voltage interrupts related screens on the instrument..... | 200 |
| Figure 165: RVC event description..... | 202 |
| Figure 166: Synchronization and aggregation of 10/12 cycle intervals..... | 203 |
| Figure 167: Avg vs. Avgon, switching load current | 205 |
| Figure 168: Consumed/generated and inductive/capacitive phase/polarity diagram..... | 205 |
| Figure 169: Flagging data indicate that aggregated value might be unreliable | 206 |
| Figure 170: Triggering and pre-triggering description..... | 207 |
| Figure 171: Voltage Event Triggering..... | 208 |
| Figure 172: Voltage Level Triggering..... | 208 |
| Figure 173: Current Level Triggering (Inrush) | 209 |
| Figure 174: Waveform recorder setup for triggering on voltage events..... | 209 |
| Figure 175: Level triggering | 210 |
| Figure 176: Triggering slope..... | 210 |
| Figure 177: Transients trigger detection (envelope) | 211 |
| Figure 178: Transients trigger detection (level)..... | 211 |
| Figure 179: Mains signalling voltage level limits according to EN50160 | 213 |
| Figure 180: Predefined EN50160 recorder configuration..... | 215 |
| Figure 181: General Recorder setup to allow auto-recording restart, when reaches maximum file length | 232 |
| Figure 182: Battery compartment | 236 |
| Figure 183: Closing the battery compartment cover..... | 237 |
| Figure 184: PowerView update function | 238 |
| Figure 185: Selecting USB communication | 239 |
| Figure 186: Check for Firmware menu | 239 |
| Figure 187: Check for Firmware menu | 239 |
| Figure 188: New firmware is available for download..... | 240 |
| Figure 189: FlashMe firmware upgrade software | 240 |
| Figure 190: FlashMe configuration screen | 241 |
| Figure 191: FlashMe programming screen | 242 |

1 Introduction

MI 2893/MI 2892/MI 2885 are handheld multifunction instrument for power quality analysis, high speed transient capturing (MI 2893), transient capturing (MI 2892/MI 2885) and troubleshooting as well as energy efficiency measurements.



Figure 1: Power Master XT instrument

Product differentiation:

MI 2893/2892/2885 sharing same measuring hardware and firmware platform.

MI 2893 – Class A Power Quality Instrument with additional transient measuring board with sampling period 1 MHz

MI 2892 - Class A Power Quality Instrument with transient measurement on measuring board with sampling period 49 kHz

MI 2885 - Class S specified Power Quality Instrument with transient measurement on measuring board with sampling period 49 kHz

Note:

The appearance of the product is outwardly the same. The only differences are in the marking labels and the front plates.



Figure 2: Front plates and marking labels

1.1 Main Features

- Full compliance with power quality standard IEC 61000-4-30 Class A (**MI 2893/MI 2892**)
- Full compliance with power quality standard IEC 61000-4-30 Class S (**MI 2885**)
- Simple and powerful recorder with microSD memory card (sizes up to 32 GB are supported).
- 4 voltage channels with wide measurement range: up to 1000 Vrms, CAT III / 1000 V, with support for medium and high voltage systems.
- Simultaneous voltage and current (8 channels) sampling, 16-bit AD conversion for accurate power measurements and minimal phase shift error.
- 4 current channels with support for automatic clamp recognition and automatic range selection.
- Compliance with IEC 61557-12 and IEEE 1459 (Combined, fundamental, nonfundamental power) and IEC 62053-21 (Energy).
- High speed transient sampling > 1MSamples/sec simultaneously on all 8 channels (4xU & 4xI) (**MI 2893**)
- Transient selection between N /GND (**MI 2893**)
- Transient recorder with envelope or level triggering, with sampling frequency 49 kHz (**MI 2892 /MI 2885**)
- 4.3" TFT colour display.
- Waveform/inrush recorder, which can be triggered on Event/Alarms/Level U/Level I/Interval; transient recorder for phase/neutral lines (voltage and current simultaneously) with level and envelope trigger selection run simultaneously with general recorder.

- Support for 50Hz, 60Hz, 400Hz system frequency and direct VFD (variable frequency drives) measurement
- Measuring the accuracy of electric meters (electronic and mechanical) **(MI 2892/MI 2885)**
- PC Software **PowerView v3.0** is an integral part of a measuring system which provides easiest way to download, view and analyse measured data or print reports.
 - PowerView v3.0 analyser exposes a simple but powerful interface for downloading instrument data and getting quick, intuitive and descriptive analysis. Interface has been organized to allow quick selection of data using a Windows Explorer-like tree view.
 - User can easily download recorded data, and organize it into multiple sites with many sub-sites or locations.
 - Generate charts, tables and graphs for your power quality data analysing, and create professional printed reports.
 - Export or copy / paste data to other applications (e.g. spreadsheet) for further analysis.
 - Multiple data records can be displayed and analysed simultaneously.
 - Merge different logging data into one measurement, synchronize data recorded with different instruments with time offsets, split logging data into multiple measurements, or extract data of interest.
 - Instrument remote access over internet connection.

1.2 Safety considerations

To ensure operator safety while using the MI 2893/MI 2892/MI 2885 instruments and to minimize the risk of damage to the instrument, please note the following general warnings:



The instrument has been designed to ensure maximum operator safety. Usage in a way other than specified in this manual may increase the risk of harm to the operator!



Do not use the instrument and/or accessories if any visible damage is noticed!



The instrument contains no user serviceable parts. Only an authorized dealer can carry out service or adjustment!



All normal safety precautions have to be taken in order to avoid risk of electric shock when working on electrical installations!



Only use approved accessories which are available from your distributor!



Instrument contains rechargeable NiMH batteries. The batteries should only be replaced with the same type as defined on the battery placement label or in this manual. Do not use standard batteries while power supply adapter/charger is connected, otherwise they may explode!



Hazardous voltages exist inside the instrument. Disconnect all test leads, remove the power supply cable and switch off the instrument before removing battery compartment cover.



Maximum nominal voltage between any phase and neutral input is 1000 V_{RMS}. Maximum nominal voltage between phases is 1730 V_{RMS}.



Always short unused voltage inputs (L1, L2, L3, GND) with neutral (N) input to prevent measurement errors and false event triggering due to noise coupling.



Do not remove microSD memory card while instrument is recording or reading data. Record damage and card failure can occur.

1.3 Applicable standards

The MI 2893/MI 2892/MI 2885 are designed and tested in accordance with the following standards:

| | |
|--|---|
| <i>Electromagnetic compatibility (EMC)</i> | |
| EN 61326-2-2: 2013 | Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 2-2: Particular requirements - Test configurations, operational conditions and performance criteria for portable test, measuring and monitoring equipment used in low-voltage distribution systems <ul style="list-style-type: none"> • Emission: Class A equipment (for industrial purposes) • Immunity for equipment intended for use in industrial locations |
| <i>Safety (LVD)</i> | |
| EN 61010-1: 2010 | Safety requirements for electrical equipment for measurement, control and laboratory use – Part 1: General requirements |
| EN 61010-2-030: 2017 | Safety requirements for electrical equipment for measurement, control and laboratory use – Part 2-030: Particular requirements for testing and measuring circuits |
| EN 61010-031: 2015 | Safety requirements for electrical equipment for measurement, control and laboratory use – Part 031: Safety requirements for hand-held probe assemblies for electrical measurement and test |
| EN 61010-2-032: 2012 | Safety requirements for electrical equipment for measurement, control and laboratory use Part 032: Particular requirements for hand-held and hand-manipulated current sensors for electrical test and measurement |
| <i>Measurement methods</i> | |
| IEC 61000-4-30: 2015 Class A | Electromagnetic Compatibility (EMC) – Part 4-30: Testing and measurement techniques - Power quality measurement methods |
| IEC 61557-12: 2018 | Electrical safety in low voltage distribution systems up to 1 000 V a.c. and 1 500 V d.c. - Equipment for testing, measuring or monitoring of protective measures – Part 12: Performance measuring and monitoring devices (PMD) |
| IEC 61000-4-7: 2002 + A1: 2008 | Electromagnetic compatibility (EMC) – Part 4-7: Testing and measurement techniques –General guide on harmonics and inter-harmonics measurements and instrumentation for power supply systems and equipment connected thereto |
| IEC 61000-4-15: 2010/ISH1:2017 | Electromagnetic compatibility (EMC) – Part 4-15: Testing and measurement techniques – Flicker meter – Functional and design specifications |

| | |
|--------------------|---|
| IEC 62053-21: 2003 | Electricity metering equipment (a.c.) - Particular requirements - Part 21: Static meters for active energy (classes 1 and 2) |
| IEC 62053-23: 2003 | Electricity metering equipment (a.c.) - Particular requirements - Part 23: Static meters for reactive energy (classes 2 and 3) |
| IEEE 1459: 2010 | IEEE Standard Definitions for the Measurement of Electric Power Quantities Under Sinusoidal, Non-sinusoidal, Balanced, or Unbalanced Conditions |
| EN 50160: 2010 | Voltage characteristics of electricity supplied by public electricity networks |
| GOST R 54149: 2010 | Electric energy. Electromagnetic compatibility of technical equipment. Power quality limits in the public power supply systems |

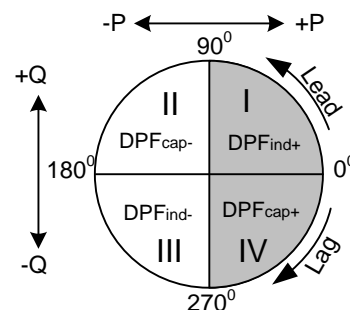
Note about EN and IEC standards:

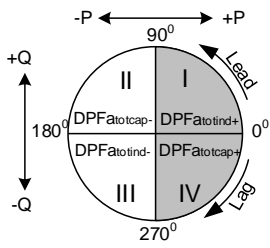
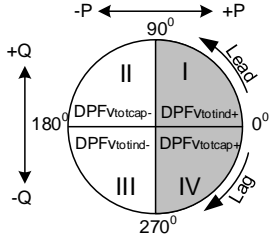
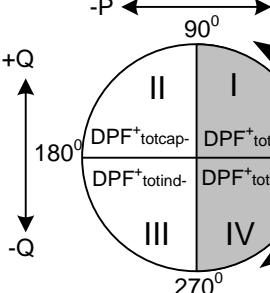
Text of this manual contains references to European standards. All standards of EN 6XXXX (e.g. EN 61010) series are equivalent to IEC standards with the same number (e.g. IEC 61010) and differ only in amended parts required by European harmonization procedure.

1.4 Abbreviations



In this document following symbols and abbreviations are used:

| | |
|--|---|
| CF_I | Current crest factor, including CF_{Ip} (phase p current crest factor) and CF_{IN} (neutral current crest factor). See 5.1.3 for definition. |
| CF_U | Voltage crest factor, including CF_{Upq} (phase p to phase q voltage crest factor) and CF_{Up} (phase p to neutral voltage crest factor). See 5.1.2 for definition. |
| $\pm DPF_{ind/cap}$ | Instantaneous phase power displacement (fundamental) power factor or $\cos \varphi$, including $\pm DPF_{pind}$ (phase p power displacement). Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. |
| $DPF_{ind/cap}^{\pm}$ | Recorded phase displacement (fundamental) power factor or $\cos \varphi$, including $DPF_{pind/cap}^{\pm}$ (phase p power displacement). Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/ capacitive character. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.5 for definition. |
| $\pm DPFa_{totind}$ $\pm DPFa_{totcap}$ | Instantaneous total arithmetic displacement (fundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. See 5.1.6 for definition. |
| $DPFa_{totind}^{\pm}$ | Recorded total arithmetic fundamental power factor. |





| | | |
|------------------------|--|---|
| $DPFa_{totcap}^{\pm}$ | <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. This parameter is recorded separately as shown on figure. See 5.1.6 for definition.</p> |  |
| $\pm DPFv_{totind}$ | <p>Instantaneous positive sequence total vector displacement (fundamental) power factor.</p> | |
| $\pm DPFv_{totcap}$ | <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. See 5.1.6 for definition.</p> | |
| $DPFv_{totind}^{\pm}$ | <p>Recorded total vector fundamental power factor.</p> | |
| $DPFv_{totcap}^{\pm}$ | <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. This parameter is recorded separately as shown on figure. See 5.1.6 for definition.</p> |  |
| $\pm DPF^+_{totind}$ | <p>Instantaneous positive sequence fundamental power factor.</p> | |
| $\pm DPF^+_{totcap}$ | <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. See 5.1.5 for definition.</p> | |
| $DPF^+_{totind}^{\pm}$ | <p>Recorded total positive sequence fundamental power factor.</p> | |
| $DPF^+_{totcap}^{\pm}$ | <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. This parameter is recorded separately as shown on figure. See 5.1.5 for definition.</p> |  |
| D_I | <p>Phase current distortion power, including D_{ip} (phase p current distortion power). See 5.1.5 section: Modern Power measurement</p> <p>Standard compliance: IEEE 1459-2010 for definition.</p> | |
| De_I | <p>Total effective current distortion power. See 5.1.5 section: Modern Power measurement</p> <p>Standard compliance: IEEE 1459-2010 for definition.</p> | |
| DH | <p>Phase harmonics distortion power, including DH_p (phase p harmonics distortion power). See 5.1.5 section: Modern Power measurement</p> <p>Standard compliance: IEEE 1459-2010 for definition.</p> | |



| | |
|------------------|--|
| DeH | Total effective harmonics distortion power. See 5.1.5 section: Total nonfundamental power measurements for definition. |
| Dv | Phase voltage distortion power, including Dvp (phase p voltage distortion power). See 5.1.5 section: Modern Power measurement Standard compliance: IEEE 1459-2010 for definition. |
| Dev_{tot} | Total effective voltage distortion power. See 5.1.5 section: Modern Power measurement Standard compliance: IEEE 1459-2010 for definition. |
| Ep^{\pm} | Recorded phase combined (fundamental and nonfundamental) active energy, including $Ep_p^{+/-}$ (phase p active energy). Minus sign indicates generated energy and plus sign indicates consumed energy. See 5.1.6 for definition. |
| Ep_{tot}^{\pm} | Recorded total combined (fundamental and nonfundamental) active energy. Minus sign indicates generated and plus sign indicates consumed energy. See 5.1.6 for definition. |
| Eq^{\pm} | Recorded phase fundamental reactive energy, including $Eq_p^{+/-}$ (phase p reactive energy). Minus sign indicates generated and plus sign indicates consumed energy. See 5.1.6 for definition. |
| Eq_{tot}^{\pm} | Recorded total fundamental reactive energy. Minus sign indicates generated and plus sign indicates consumed energy. See 5.1.6 for definition. |
| Eff_{inv} | Photovoltaic inverter efficiency |
| $f, freq$ | Frequency, including $freq_{U12}$ (voltage frequency on U_{12}), $freq_{U1}$ (voltage frequency on U_1 and $freq_{I1}$ (current frequency on I_1). See 5.1.4 for definition. |
| i^{-} | Negative sequence current ratio (%). See 5.1.11 for definition. |
| i^0 | Zero sequence current ratio (%). See 5.1.11 for definition. |
| i^{+} | Positive sequence current component on three phase systems. See 5.1.11 for definition. |
| i^{-} | Negative sequence current component on three phase systems. See 5.1.11 for definition. |
| i^0 | Zero sequence current components on three phase systems. See 5.1.11 for definition. |
| $I_{Rms(1/2)}$ | RMS current measured over 1 cycle, commencing at a fundamental zero crossing on an associated voltage channel, and refreshed each half-cycle, including $I_{pRms(1/2)}$ (phase p current), $I_{NRms(1/2)}$ (neutral RMS current) |
| $Ifund$ | Fundamental RMS current I_{h1} (on 1 st harmonics), including $Ifund_p$ (phase p fundamental RMS current) and $Ifund_N$ (neutral RMS fundamental current). See 5.1.8 for definition |
| Ih_n | n^{th} current RMS harmonic component including I_{ph_n} (phase p; n^{th} RMS current harmonic component) and I_{Nh_n} (neutral n^{th} RMS current harmonic component). See 5.1.8 for definition |
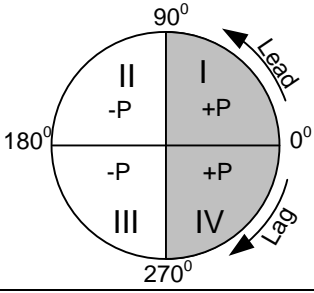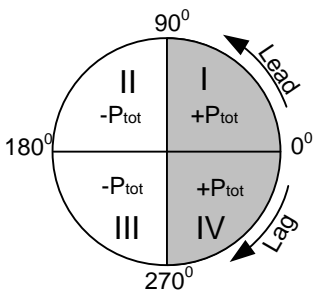
| | | |
|---------------------------------|---|---|
| i_{ih_n} | n^{th} current RMS inter-harmonic component including $I_{p i h_n}$ (phase p; n^{th} RMS current inter-harmonic component) and $I_{N i h_n}$ (neutral n^{th} RMS current inter-harmonic component). See 5.1.8 for definition | |
| I_{Nom} | Nominal current. Current of clamp-on current sensor for 1 Vrms at output. | |
| I_{Pk} | Peak current, including I_{pPk} (phase p current) including I_{NPK} (neutral peak current) | |
| I_{Rms} | RMS current, including I_{pRms} (phase p current), I_{NRms} (neutral RMS current). See 5.1.3 for definition. | |
| I_{rmsinv} | Photovoltaic inverter RMS current | |
| I_{acinv} | Photovoltaic inverter AC current | |
| I_{dcinv} | Photovoltaic inverter DC current | |
| $\pm P$ | Instantaneous phase active combined (fundamental and nonfundamental) power, including $\pm P_p$ (phase p active power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. |  |
| P^{\pm} | Recorded phase active (fundamental and nonfundamental) power, including P_p^{\pm} (phase p active power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. | |
| $\pm P_{\text{tot}}$ | Instantaneous total active combined (fundamental and nonfundamental) power. Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. |  |
| P_{tot}^{\pm} | Recorded total active (fundamental and nonfundamental) power. Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. | |
| $\pm P_{\text{fund}}$ | Instantaneous active fundamental power, including $\pm P_{\text{fund}p}$ (phase p active fundamental power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. | |
| P_{fund}^{\pm} | Recorded phase active fundamental power, including $P_{\text{fund}p}^{\pm}$ (phase p active fundamental power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. | |
| $\pm P^+, \pm P_{\text{tot}}^+$ | Instantaneous positive sequence of total active fundamental power. Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. | |



| | |
|--|---|
| P_{tot}^{\pm} | Recorded positive sequence of total active fundamental power. Minus sign indicates generated and plus sign indicates positive sequence of consumed power. See 5.1.5 for definitions. |
| $\pm P_H$ | Instantaneous phase active harmonic power, including $\pm P_{Hp}$ (phase p active harmonic power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. |
| P_H^{\pm} | Recorded phase active harmonics power, including P_{Hp}^{\pm} (phase p active harmonic power). Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. |
| $\pm P_{Htot}$ | Instantaneous total active harmonic power. Minus sign indicates generated and plus sign indicates consumed power. See 5.1.5 for definitions. |
| $\pm PF_{ind}$ $\pm PF_{cap}$ | Instantaneous phase combined (fundamental and nonfundamental) power factor, including $\pm PF_{pind/cap}$ (phase p power factor). Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. Note: PF = DPF when harmonics are not present. See 5.1.5 for definition. |
| PF_{ind}^{\pm} PF_{cap}^{\pm} | Recorded phase combined (fundamental and nonfundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/ capacitive character. This parameter is recorded separately for each quadrant as shown on figure. |
| $\pm PFa_{totind}$ $\pm PFa_{totcap}$ | Instantaneous total arithmetic combined (fundamental and nonfundamental) power factor. Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. See 5.1.6 for definition. |

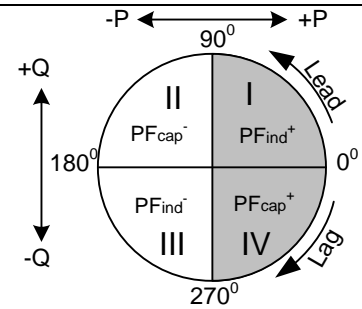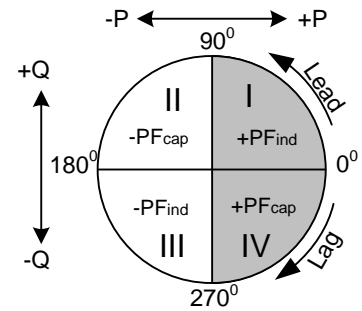

| | | |
|--|---|--|
| PFa_{totind}^{\pm} PFa_{totcap}^{\pm} | <p>Recorded total arithmetic combined (fundamental and nonfundamental) power factor.</p> <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. This parameter is recorded separately for each quadrant as shown on figure.</p> | |
| $\pm PFe_{totind}$ $\pm PFe_{totcap}$ | <p>Instantaneous total effective combined (fundamental and nonfundamental) power factor.</p> <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. See 5.1.5 for definition.</p> | |
| PFe_{totind}^{\pm} PFe_{totcap}^{\pm} | <p>Recorded total effective combined (fundamental and nonfundamental) power factor.</p> <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. This parameter is recorded separately for each quadrant as shown on figure.</p> | |
| $\pm PFv_{totind}$ $\pm PFv_{totcap}$ | <p>Instantaneous total vector combined (fundamental and nonfundamental) power factor.</p> <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. See 5.1.6 for definition.</p> | |
| PFv_{totind}^{\pm} PFv_{totcap}^{\pm} | <p>Recorded total vector combined (fundamental and nonfundamental) power factor.</p> <p>Minus sign indicates generated power and plus sign indicates consumed power. Suffix <i>ind/cap</i> represents inductive/capacitive character. This parameter is recorded separately for each quadrant as shown on figure.</p> | |
| P_{inv+} | Photovoltaic inverter Active Power positive | |
| P_{inv-} | Photovoltaic inverter Active Power negative | |
| P_{dcinv+} | Photovoltaic inverter Active Power DC positive | |
| P_{dcinv-} | Photovoltaic inverter Active Power DC negative | |
| R.F. | Ripple Factor – ratio between rms AC component value and DC component; presented at INV-1W and INV-3W connection | |
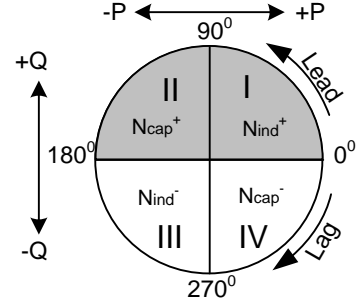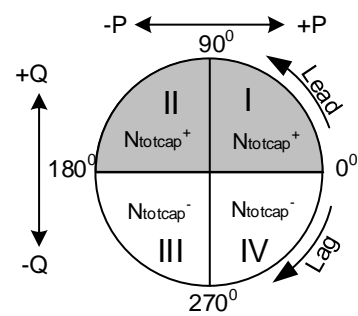
| | |
|--|--|
| S_{acinv+} | Photovoltaic inverter Apparent Power AC positive |
| S_{acinv-} | Photovoltaic inverter Apparent Power AC negative |
| P_{lt} | Phase long term flicker (2 hours), including P_{ltpg} (phase p to phase g long term voltage flicker) and P_{ltp} (phase p to neutral long-term voltage flicker). See 5.1.10 for definition. |
| P_{st} | Short term flicker (10 minutes) including P_{stpg} (phase p to phase g short term voltage flicker) and P_{stp} (phase p to neutral voltage flicker). See 5.1.10 for definition. |
| $P_{st(1min)}$ | Short term flicker (1 minute) including $P_{st(1min)pg}$ (phase p to phase g short term voltage flicker) and $P_{st(1min)p}$ (phase p to neutral voltage flicker). See 5.1.10 for definition. |
| P_{inst} | Instantaneous flicker including P_{instpg} (phase p to phase g instantaneous voltage flicker) and P_{instp} (phase p to instantaneous voltage flicker). See 5.1.10 for definition. |
| $\pm N$ | Instantaneous combined (fundamental and nonfundamental) nonactive phase power including $\pm N_p$ (phase p nonactive phase power). Minus sign indicates generated and plus sign indicate consumed nonactive power. See 5.1.5 for definition. |
| N_{ind}^{\pm} N_{cap}^{\pm} | <p>Recorded phase combined (fundamental and nonfundamental) nonactive power including $N_{cap/indp}$ (phase p nonactive phase power). Suffix <i>ind/cap</i> represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.5 for definition.</p>  |
| $\pm N_{tot}$ | Instantaneous combined (fundamental and nonfundamental) nonactive total vector power. Minus sign indicates generated and plus sign indicate consumed nonactive power. See 5.1.5 for definition. |
| N_{totind}^{\pm} N_{totcap}^{\pm} | <p>Recorded total vector combined (fundamental and nonfundamental) nonactive power. Suffix <i>ind/cap</i> represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed combined nonactive power. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.5 for definition.</p>  |
| $\pm Na_{tot}$ | Instantaneous combined (fundamental and nonfundamental) nonactive total arithmetic power. Minus sign indicates generated and plus sign indicate consumed nonactive power. See 5.1.6 for definition. |

| | |
|--|--|
| Na_{totind}^{\pm} Na_{totcap}^{\pm} | Recorded total arithmetic combined (fundamental and nonfundamental) nonactive power. Minus sign indicates generated and plus sign indicates consumed combined nonactive power. This parameter is recorded separately for generated and consumed nonactive power. |
| $\pm Q_{fund}$ | Instantaneous fundamental reactive phase power including $\pm Q_p$ (phase p reactive phase power). Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. See 5.1.5 for definition. |
| $Q_{fundind}^{\pm}$ $Q_{fundcap}^{\pm}$ | Recorded phase fundamental reactive power. Suffix <i>ind/cap</i> represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.5 for definition. |
| $\pm Q_{vfundtot}$ | Instantaneous fundamental total vector reactive power. Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. See 5.1.6 for definition. |
| $Q_{vfundtotind}^{\pm}$ $Q_{vfundtotcap}^{\pm}$ | Recorded total fundamental vector reactive power. Suffix <i>ind/cap</i> represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed fundamental reactive power. This parameter is recorded separately for each quadrant as shown on figure. See 5.1.6 for definition. |
| $Q_{afundtot}$ | Instantaneous fundamental total arithmetic reactive power. See 5.1.6 for definition. |
| $Q_{afundtot}$ $Q_{afundtot}$ | Recorded fundamental total arithmetic reactive power. See 5.1.6 for definition. |
| $\pm Q^{+}_{totcap}$ $\pm Q^{+}_{totind}$ | Instantaneous positive sequence of total fundamental reactive power. Suffix <i>ind/cap</i> represents inductive/ capacitive character. Minus sign indicates generated and plus sign indicates consumed reactive power. See 5.1.5 for definition. |
| $Q^{+}_{totind}^{\pm}$ $Q^{+}_{totcap}^{\pm}$ | Recorded positive sequence of total fundamental reactive power. Suffix <i>ind/cap</i> represents inductive/capacitive character. Minus sign indicates generated and plus sign indicates consumed reactive power. This parameter is recorded separately for each quadrant. |

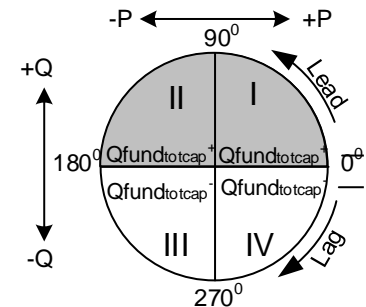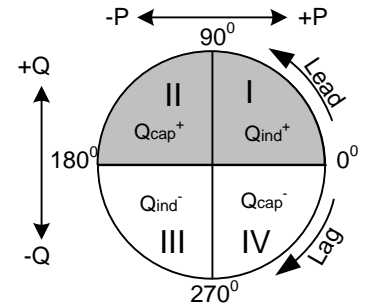

| | |
|----------------|---|
| S | Combined (fundamental and nonfundamental) phase apparent power including S_p (phase p apparent power). See 5.1.5 for definition. |
| Sa_{tot} | Combined (fundamental and nonfundamental) total arithmetic apparent power. See 5.1.6 for definition. |
| Se_{tot} | Combined (fundamental and nonfundamental) total effective apparent power. See 5.1.5 for definition. |
| Sv_{tot} | Combined (fundamental and nonfundamental) total vector apparent power. See 5.1.6 for definition. |
| $Sfund$ | Phase fundamental apparent power, including $Sfund_p$ (phase p fundamental apparent power). See 5.1.5 for definition. |
| $Safund_{tot}$ | Fundamental total arithmetic apparent power. See 5.1.6 for definition. |
| $Svfund_{tot}$ | Fundamental total vector apparent power. See 5.1.6 for definition. |
| S^+_{tot} | Positive sequence of total fundamental apparent power. See 5.1.5 for definition. |
| $Sufund_{tot}$ | Unbalanced fundamental apparent power. See 5.1.5 for definition. |
| SN | Phase nonfundamental apparent power, including SN_p (phase p nonfundamental apparent power). See 5.1.5 for definition. |
| Sen | Total nonfundamental effective apparent power. See 5.1.5 for definition. |
| SH | Phase harmonic apparent power, including SH_p (phase p harmonic apparent power). See 5.1.5 for definition. |
| SeH_{tot} | Total harmonic effective apparent power. See 5.1.5 for definition. |
| THD_I | Total harmonic distortion current (in % or A), including THD_{Ip} (phase p current THD) and THD_{IN} (neutral current THD). See 5.1.8 for definition |
| THD_U | Total harmonic distortion voltage related (in % or V) including THD_{Up_g} (phase p to phase g voltage THD) and THD_{Up} (phase p to neutral voltage THD). See 5.1.11 for definition. |
| u^- | Negative sequence voltage ratio (%). See 5.1.11 for definition. |
| u^0 | Zero sequence voltage ratio (%). See 5.1.11 for definition. |
| U, U_{Rms} | RMS voltage, including U_{pg} (phase p to phase g voltage) and U_p (phase p to neutral voltage). See 5.1.2 for definition. |
| U_{rmsinv} | Photovoltaic inverter RMS voltage |
| U_{acinv} | Photovoltaic inverter AC voltage |
| U_{dcinv} | Photovoltaic inverter DC voltage |
| U^+ | Positive sequence voltage component on three phase systems. See 5.1.11 for definition. |
| U^- | Negative sequence voltage component on three phase systems. See 5.1.11 for definition. |

| | |
|------------------|---|
| U^0 | Zero sequence voltage component on three phase systems. See 5.1.11 for definition. |
| U_{Dip} | Minimal $U_{Rms(1/2)}$ voltage measured during dip occurrence |
| U_{fund} | Fundamental RMS voltage (U_{h_1} on 1 st harmonics), including $U_{fund_{pg}}$ (phase p to phase g fundamental RMS voltage) and U_{fund_p} (phase p to neutral fundamental RMS voltage). See 5.1.8 for definition |
| U_{h_N} | n th voltage RMS harmonic component including $U_{pg h_N}$ (phase p to phase g voltage n th RMS harmonic component) and $U_{p h_N}$ (phase p to neutral voltage n th RMS harmonic component). See 5.1.8 for definition. |
| U_{ih_N} | n th voltage RMS interharmonic voltage component including $U_{pg ih_N}$ (phase p to phase g voltage n th RMS interharmonic component) and $U_{p ih_N}$ (phase p to neutral voltage n th RMS interharmonic component). See 5.1.8 for definition. |
| U_{Int} | Minimal $U_{Rms(1/2)}$ voltage measured during interrupt occurrence. |
| U_{Nom} | Nominal voltage, normally a voltage by which network is designated or identified. |
| U_{Over} | Voltage over-deviation, difference between the measured value and the nominal value of a voltage, only when the measured value is greater than the nominal value. Voltage over-deviation measured over recorded interval, expressed in % of nominal voltage including U_{pgOver} (phase p to phase g voltage) and U_{pOver} (phase p to neutral voltage). See 5.1.12 for details. |
| U_{Pk} | Peak voltage, including U_{pgPk} (phase p to phase g voltage) and U_{pPk} (phase p to neutral voltage) |
| $U_{Rms(1/2)}$ | RMS voltage refreshed each half-cycle, including $U_{pgRms(1/2)}$ (phase p to phase g half-cycle voltage) and $U_{pRms(1/2)}$ (phase p to neutral half-cycle voltage). See 5.1.12 for definition. |
| U_{Swell} | Maximal $U_{Rms(1/2)}$ voltage measured during swell occurrence. |
| U_{Sig} | Mains signalling RMS voltage, including U_{Sigpg} (phase p to phase g half-cycle signalling voltage) and U_{Sigp} (phase p to neutral half-cycle signalling voltage). Signalling is a burst of signals, often applied at a non-harmonic frequency, that remotely control equipment. See 5.2.6 for details. |
| U_{Under} | Voltage under-deviation, difference between the measured value and the nominal value of a voltage, only when the voltage is lower than the nominal value. Voltage under-deviation measured over recorded interval and expressed in % of nominal voltage, including $U_{pgUnder}$ (phase p to phase g voltage) and U_{pUnder} (phase p to neutral voltage). See 5.1.12 for details. |
| ΔU_{max} | Maximum absolute difference between any of the $U_{Rms(1/2)}$ values during the RVC event and the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event. For poly-phase systems, the ΔU_{max} is the largest ΔU_{max} on any channel. See 5.1.15 for details. |

ΔU_{ss}

Absolute difference between the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event and the first arithmetic mean 100/120 $U_{Rms(1/2)}$ value after the RVC event. For poly-phase systems, the ΔU_{ss} is the largest ΔU_{ss} on any channel. See 5.1.15 for details.

2 Description

2.1 Front panel

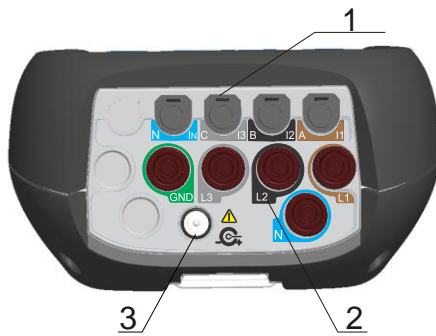


Figure 3: Front panel

Front panel layout:

- | | |
|----------------------------|--|
| 1. LCD | Colour TFT display, 4.3-inch, 480 x 272 pixels. |
| 2. F1 – F4 | Function keys. |
| 3. ARROW keys | Moves cursor and select parameters. |
| 4. ENTER key | Step into submenu. |
| 5. ESC key | Exits any procedure, confirms new settings. |
| 6. SHORTCUT keys | Quick access to main instrument functions. |
| 7. LIGHT key (BEEP OFF) | Adjust LCD backlight intensity: high/low//off If the <i>LIGHT</i> key is pressed for more than 1.5 seconds, beeper will be disabled. Press & hold again to enable it. |
| 8. ON-OFF key | Turns on/off the instrument. |
| 9. COVER | Communication ports and microSD card slot protection. |

2.2 Connector panel



⚠ Warnings!

- ⚠ Use safety test leads only!
- ⚠ Max. permissible nominal voltage between voltage input terminals and ground is 1000 V_{RMS} !
- ⚠ Max. short-term voltage of external power supply adapter is 14 V!

Figure 4: Top connector panel

Top connector panel layout:

- 1 Clamp-on current transformers (I₁, I₂, I₃, I_N) input terminals.
- 2 Voltage (L₁, L₂, L₃, N, GND) input terminals.
- 3 12 V external power socket.

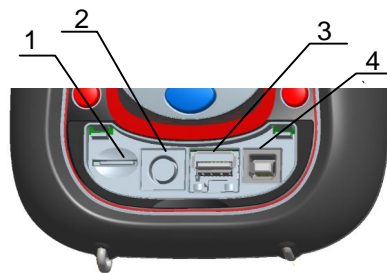


Figure 5: Side connector panel

Side connector panel layout:

- 1 MicroSD card slot.
- 2 GPS serial / Photo – scanning head connector.
- 3 Ethernet connector.
- 4 USB connector.

2.3 Bottom view

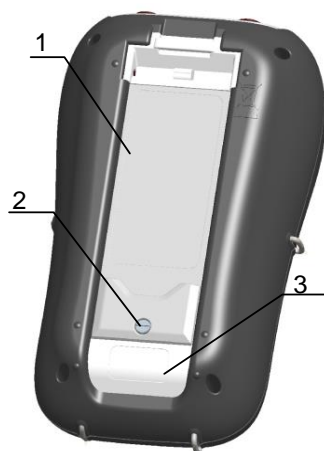


Figure 6: Bottom view

Bottom view layout:

1. Battery compartment cover.
2. Battery compartment screw (unscrew to replace the batteries).
3. Serial number label.

2.4 Accessories

2.4.1 Standard accessories

Table 1: MI 2893/MI 2892/MI 2885 standard accessories

| Description | Pieces |
|---|--------|
| Flexible current clamp 3000 A / 300 A / 30 A (A 1227/A 1502) | 4 |
| Temperature probe (A 1354) | 1 |
| Colour coded test probe | 5 |
| Colour coded crocodile clip | 5 |
| Colour coded voltage measurement lead | 5 |
| USB cable | 1 |
| RS232 cable | 1 |
| Ethernet cable | 1 |
| 12 V / 3 A Power supply adapter | 1 |
| NiMH rechargeable battery, type HR 6 (AA) | 6 |
| Professional protective waterproof case (A 1685) (MI 2893/MI 2892) | 1 |
| Soft carrying bag (MI 2885) | 1 |
| Compact disc (CD) with PowerView v3.0 and manuals | 1 |

2.4.2 Optional accessories

See the attached sheet for a list of optional accessories that are available on request from your distributor.

3 Operating the instrument

This section describes how to operate the instrument. The instrument front panel consists of a colour LCD display and keypad. Measured data and instrument status are shown on the display. Basic display symbols and keys description is shown on figure below.



Figure 7: Display symbols and keys description

During measurement campaign various screens can be displayed. Most screens share common labels and symbols. These are shown on figure below.



Figure 8: Common display symbols and labels during measurement campaign

3.1 Instrument status bar












Instrument's status bar is placed on the top of the screen. It indicates different instrument states. Icon descriptions are shown on table below.



Figure 9: Instrument status bar

Table 2: Instrument status bar description

| | |
|--|--|
| | Indicates battery charge level. |
| | Indicates that charger is connected to the instrument. Batteries will be charged automatically when charger is present. |
| | Instrument is locked (see section 3.24.5 for details). |
| | AD converter over range. Selected Nominal voltage or current clamps range is too small. |
| 18:07 | Current time. |
| <u>GPS module status (Optional accessory A 1355):</u> | |
| | GPS module detected but reporting invalid time and position data. (Searching for satellites or too weak satellite signal). |
| | GPS time valid – valid satellite GPS time signal. |
| | Instrument act as host USB, and is ready to accept USB memory stick. |
| | One of the current clamps has opposite direction from the expected. |
| <u>Internet connection status (see section 4.3 for details):</u> | |
| | Internet connection is not available. |
| | Instrument is connected to the internet and ready for communication. |
| | Instrument is connected to the PowerView. |
| <u>Recorder status:</u> | |
| | General recorder is active, waiting for trigger. |
| | General recorder is active, recording in progress. |
| | Waveform recorder is active, waiting for trigger. |
| | Waveform recorder is active, recording in progress. |
| | Transient recorder is active, waiting for trigger. |
| | Transient recorder is active, recording in progress. |
| | E-Meter recorder is active, waiting for trigger. |

| | |
|---|---|
|  | E-Meter recorder is active, E-Meter accuracy test in progress. |
|  | Alarm detected, recording in progress |
|  | Event detected, recording in progress |
|  | Inrush detected, recording in progress |
|  | RVC detected, recording in progress |
|  | Signalling detected, recording in progress |
|  | Transient detected, recording in progress |
|  | Memory list recall. Shown screen is recalled from instrument memory. |
|  | Flagged data mark. While observing recorded data this mark will indicate that observed measurement results for given time interval can be compromised due to interrupt, dip or swells occurrence. See section 5.1.17 for further explanation. |
|  | Signalling voltage is present on voltage line at monitored frequencies. See sections 3.13 and 3.23.4 for further explanation. |
|  | USB stick communication mode. In this mode selected record can be transferred from microSD card to USB stick. USB communication with PC is disabled while in this mode. See section 3.22 for details. |

3.2 Instrument keys

Instrument keyboard is divided into four subgroups:

- Function keys
- Shortcut keys
- Menu/zoom manipulation keys: Cursors, Enter, Escape
- Other keys: Light and Power on/off keys











Function keys



are multifunctional. Their current function is shown at the bottom of the screen and depends on selected instrument function.

Shortcut keys are shown in table below. They provide quick access to the most common instrument functions.

Table 3: Shortcut Keys and other Function keys

| | |
|---|---|
|  | Shows UIF Meter screen from MEASUREMENT submenu |
|  | Shows Power meter screen from MEASUREMENT submenu |
|  | Shows Harmonics meter screen from MEASUREMENT submenu |
|  | Shows Connection Setup screen from MEASUREMENT SETUP submenu |
|  | Shows Phase diagram screen from MEASUREMENT submenu |
|  | Hold  key for 2 seconds to trigger WAVEFORM SNAPSHOT. Instrument will record all measured parameters into file, which can be then analysed by PowerView. |
|  | Set backlight intensity (high/low/off). |
|  | Hold  key for 2 s to disable/enable beeper sound signals. |



Switch On/off the instrument.

Note: instrument will not power off if any recorder is active.

Note: Hold key for 5 seconds in order to reset instrument, in case of failure.

Cursor, Enter and Escape keys are used for moving through instrument menu structure, entering various parameters. Additionally, cursor keys are used for zooming graphs and moving graph cursors.

3.3 Instrument memory (microSD card)

MI 2893/MI 2892/MI 2885 use microSD card for storing records. Prior instrument use, microSD card should be formatted to a single partition FAT32 file system and inserted into the instrument, as shown on figure below.

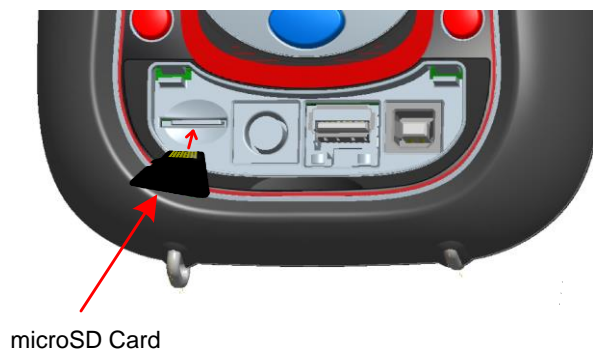


Figure 10: Inserting microSD card

1. Open instrument cover
2. Insert microSD card into a slot on the instrument (card should be putted upside down, as shown on figure)
3. Close instrument cover

Note: Do not turn off the instrument while microSD card is accessed:

- during record session
- observing recorded data in MEMORY LIST menu

Doing so may cause data corruption, and permanent data lost.

Note: SD Card should have single FAT32 partition. Do not use SD cards with multiple partitions.

3.4 Instrument Main Menu

After powering on the instrument, the “MAIN MENU” is displayed. From this menu all instrument functions can be selected.



Figure 11: “MAIN MENU”

Table 4: Instrument Main menu





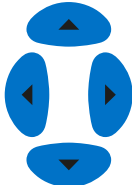

| | |
|---|---|
|  | MEASUREMENT submenu. Provide access to various instrument measurement screens |
|  | RECORDER submenu. Provide access to instrument recorders configuration and storage. |
|  | MEASUREMENT SETUP submenu. Provide access to the measurement settings. |
|  | GENERAL SETUP submenu. Provide access to the various instrument settings. |

Table 5: Keys in Main menu

| | |
|---|--------------------------|
|  | Selects submenu. |
|  | Enters selected submenu. |

3.4.1 Instrument submenus

By pressing ENTER key in Main menu, user can select one of four submenus:

- Measurements – set of basic measurement screens,
- Recorders – setup and view of various recordings,
- Measurement setup – measurement parameters setup,
- General setup – configuring common instrument settings.

List of all submenus with available functions are presented on following figures.

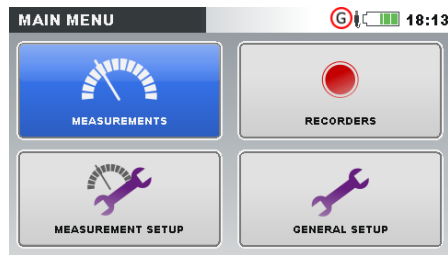


Figure 12: Measurements submenu

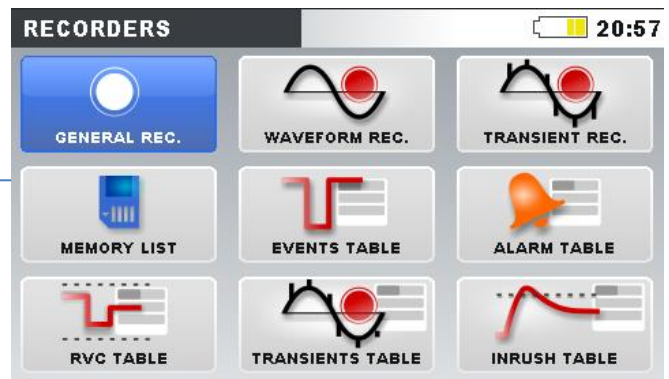


Figure 13: Recorders submenu (MI 2893)



Figure 14: Recorders submenu (MI 2892/MI 2885)

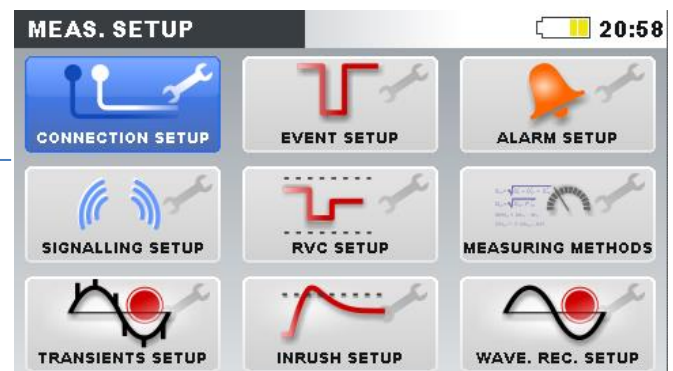


Figure 15: Measurement setup submenu



Figure 16: General setup submenu

Table 6: Keys in submenus

| | |
|--|---------------------------------------|
| | Selects function within each submenu. |
| | Enters selected function. |
| | Returns to the “MAIN MENU”. |

3.5 U, I, f

Voltage, current and frequency parameters can be observed in the “U, I, f” screens. Measurement results can be viewed in a tabular (METER) or a graphical form (SCOPE, TREND). TREND view is active only in RECORDING mode. See section 3.14 for details.

3.5.1 Meter

By entering U, I, f option, the U, I, f – METER tabular screen is shown (see figures below).

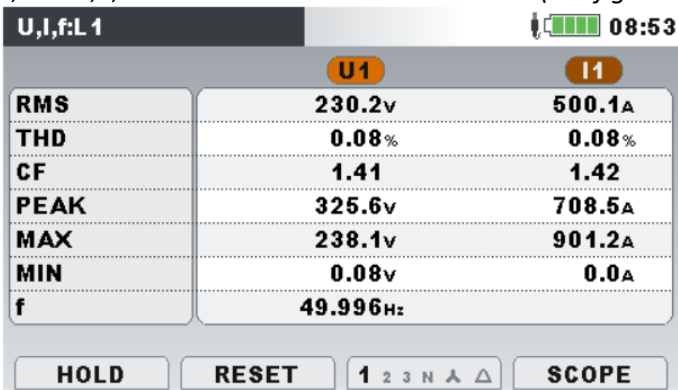


Figure 17: U, I, f meter phase table screens (L1, L2, L3, N)

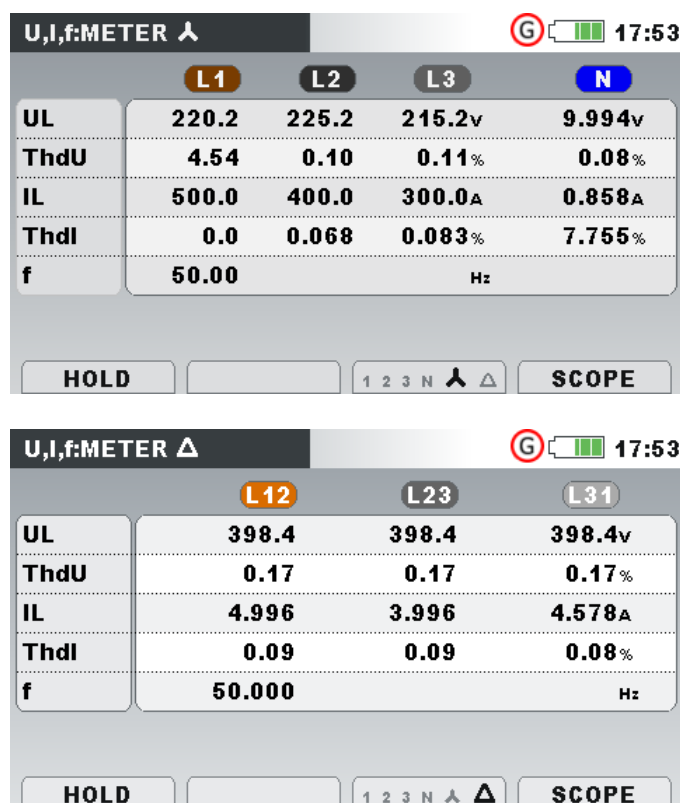


Figure 18: U, I, f meter summary table screens

In those screens on-line voltage and current measurements are shown. Descriptions of symbols and abbreviations used in this menu are shown in table below.

Table 7: Instrument screen symbols and abbreviations

| | |
|------|---|
| RMS | |
| UL | True effective value U_{Rms} and I_{Rms} |
| IL | |
| THD | |
| ThdU | Total harmonic distortion THD_U and THD_I |
| ThdI | |
| CF | Crest factor CF_U and CF_I |
| PEAK | Peak value U_{Pk} and I_{Pk} |
| MAX | Maximal $U_{Rms(1/2)}$ voltage and maximal $I_{Rms(1/2)}$ current, measured after RESET (key: F2) |
| MIN | Minimal $U_{Rms(1/2)}$ voltage and minimal $I_{Rms(1/2)}$ current, measured after RESET (key: F2) |
| f | Frequency on reference channel |


Note: In case of overloading current or overvoltage on AD converter, icon  will be displayed in the status bar of the instrument.

Table 8: Keys in Meter screens

| | | |
|------------|-------------------------------------|--|
| F1 | HOLD | Holds measurement on display. Hold clock time will be displayed in the right top corner. |
| | RUN | Runs held measurement. |
| F2 | RESET | Resets MAX and MIN values ($U_{Rms(1/2)}$ and $I_{Rms(1/2)}$). |
| F3 | 1 2 3 N Δ | Shows measurements for phase L1. |
| | 1 2 3 N Δ | Shows measurements for phase L2. |
| | 1 2 3 N Δ | Shows measurements for phase L3. |
| | 1 2 3 N Δ | Shows measurements for neutral channel. |
| | 1 2 3 N Δ | Shows measurements for all phases. |
| | 1 2 3 N Δ | Shows measurements for all phase-to-phase voltages. |
| | 12 23 31 Δ | Shows measurements for phase-to-phase voltage L12. |
| | 12 23 31 Δ | Shows measurements for phase-to-phase voltage L23. |
| | 12 23 31 Δ | Shows measurements for phase-to-phase voltage L31. |
| F4 | 12 23 31 Δ | Shows measurements for all phase-to-phase voltages. |
| | METER | Switches to METER view. |
| | SCOPE | Switches to SCOPE view. |
| | TREND | Switches to TREND view (available only during recording). |
| | | Triggers Waveform snapshot. |
| ESC | | Returns to the "MEASUREMENTS" submenu. |

3.5.2 Scope

Various combinations of voltage and current waveforms can be displayed on the instrument, as shown below.

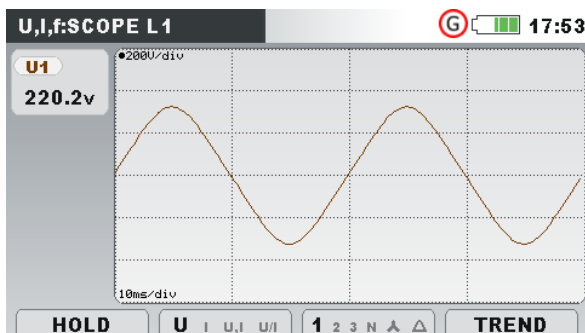


Figure 19: Voltage only waveform

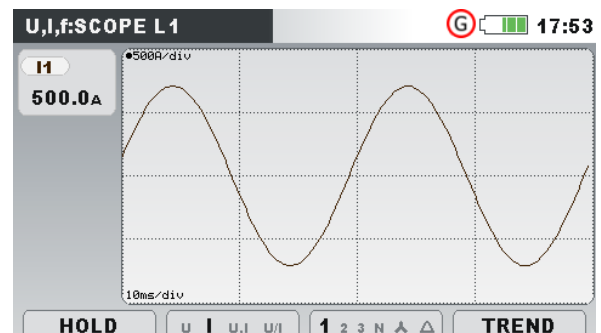


Figure 20: Current only waveform

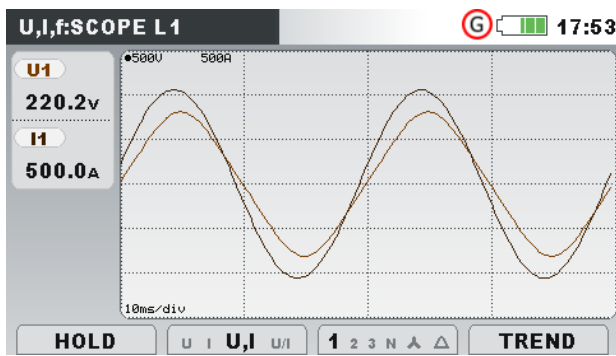


Figure 21: Voltage and current waveform (single mode)

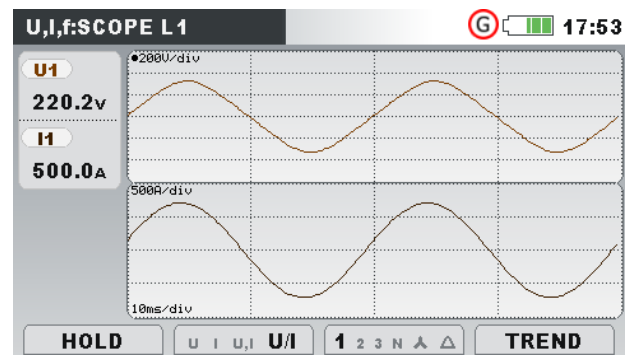


 
 

Figure 22: Voltage and current waveform (dual mode)

Table 9: Instrument screen symbols and abbreviations

| | |
|----------------|--|
| U1, U2, U3, Un | True effective value of phase voltage: U_1, U_2, U_3, U_N |
| U12, U23, U31 | True effective value of phase-to-phase voltage: U_{12}, U_{23}, U_{31} |
| I1, I2, I3, In | True effective value of current: I_1, I_2, I_3, I_N |

Table 10: Keys in Scope screens

| | | |
|----|--------------------|---|
| F1 | HOLD | Holds measurement on display. |
| | RUN | Runs held measurement. |
| F2 | U I U,I U/I | Selects which waveforms to show: |
| | U I U,I U/I | Shows voltage waveform. |
| | U I U,I U/I | Shows current waveform. |
| | U I U,I U/I | Shows voltage and current waveform (single graph). |
| F3 | U I U,I U/I | Shows voltage and current waveform (dual graph). |
| | | Selects between phase, neutral, all-phases and line view: |
| | 1 2 3 N ^ Δ | Shows waveforms for phase L1. |
| | 1 2 3 N ^ Δ | Shows waveforms for phase L2. |
| | 1 2 3 N ^ Δ | Shows waveforms for phase L3. |
| | 1 2 3 N ^ Δ | Shows waveforms for neutral channel. |
| | 1 2 3 N ^ Δ | Shows all phase waveforms. |
| | 1 2 3 N ^ Δ | Shows all phase-to-phase waveforms. |
| | 12 23 31 Δ | Shows waveforms for phase L12. |
| | 12 23 31 Δ | Shows waveforms for phase L23. |
| | 12 23 31 Δ | Shows waveforms for phase L31. |
| | 12 23 31 Δ | Shows all phase waveforms. |
| | METER | Switches to METER view. |
| | SCOPE | Switches to SCOPE view. |

| | | |
|---|--------------|---|
| F4 | TREND | Switches to TREND view (available only during recording). |
| ENTER | | Selects which waveform to zoom (only in U/I or U+I). |
|  | | Sets vertical zoom. |
|  | | Sets horizontal zoom. |
|  | | Triggers Waveform snapshot. |
| ESC | | Returns to the "MEASUREMENTS" submenu. |

3.5.3 Trend

While GENERAL RECORDER is active, TREND view is available (see section 3.14 for instructions how to start recorder).

3.5.4 Voltage and current trends

Current and voltage trends can be observed by cycling function key F4 (METER-SCOPE-TREND).

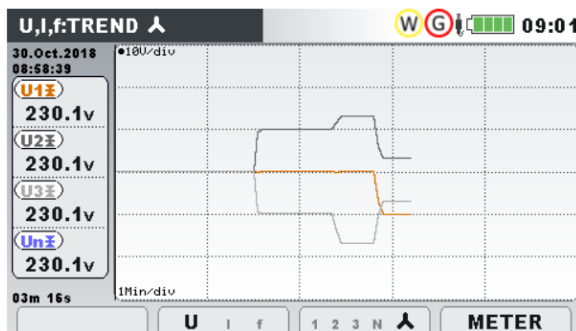


Figure 23: Voltage trend (all voltages)



Figure 24: Voltage trend (single voltage)

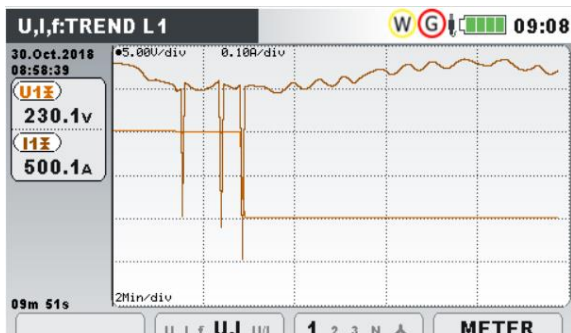


Figure 25: Voltage and current trend (single mode)

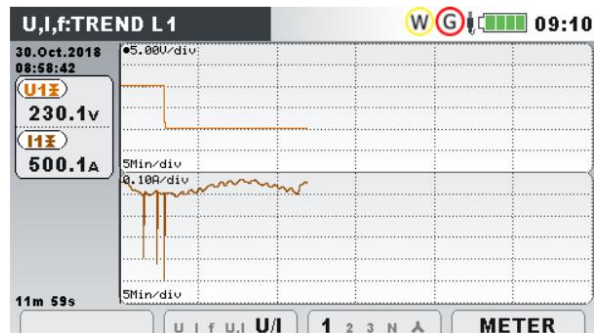


Figure 26: Voltage and current trend (dual mode)

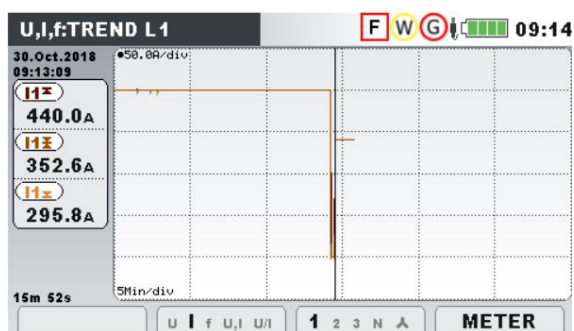


Figure 27: Trends of all currents

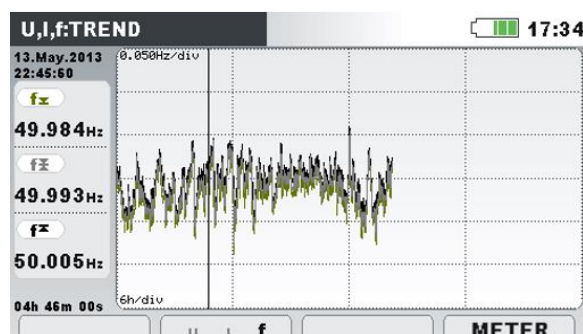


 




 

Figure 28: Frequency trend

Table 11: Instrument screen symbols and abbreviations

| | |
|----------------------------------|--|
| U1, U2, U3, Un, U12, U23, U31 | Maximal (▲), average (⊞) and minimal (▼) value of phase RMS voltage U ₁ , U ₂ , U ₃ , U _N or line voltage U ₁₂ , U ₂₃ , U ₃₁ for time interval (IP) selected by cursor. |
| I1, I2, I3, In | Maximal (▲), average (⊞) and minimal (▼) value of current I ₁ , I ₂ , I ₃ , I _N for time interval (IP) selected by cursor. |
| f | Maximal (▲), active average (⊞) and minimal (▼) value of frequency at synchronization channel for time interval (IP) selected by cursor. |
| 10.May.2013 02:02:00 | Timestamp of interval (IP) selected by cursor. |
| 32m 00s | Current GENERAL RECORDER time (d - days, h - hours, m - minutes, s - seconds) |

Table 12: Keys in Trend screens

| | | |
|----|---------------|---|
| F2 | U I f U,I U/I | Selects between the following options: |
| | U I f U,I U/I | Shows voltage trend. |
| | U I f U,I U/I | Shows current trend. |
| | U I f U,I U/I | Shows frequency trend. |
| | U I f U,I U/I | Shows voltage and current trend (single mode). |
| F3 | U I f U,I U/I | Shows voltage and current trend (dual mode). |
| | 1 2 3 N ▲ | Selects between phases, neutral channel, all-phases view: |
| | 1 2 3 N ▲ | Shows trend for phase L1. |
| | 1 2 3 N ▲ | Shows trend for phase L2. |
| | 1 2 3 N ▲ | Shows trend for phase L3. |
| | 1 2 3 N ▲ | Shows trend for neutral channel. |
| | 1 2 3 N ▲ | Shows all phases trends. |
| | 12 23 31 Δ | Shows trend for phases L12. |
| | 12 23 31 Δ | Shows trend for phases L23. |
| | 12 23 31 Δ | Shows trend for phases L31. |

| | | |
|---|---|--|
| |  | Shows all phase-to-phase trends. |
| |  | Switches to METER view. |
|  |  | Switches to SCOPE view. |
| |  | Switches to TREND view. |
|  | | Moves cursor and selects time interval (IP) for observation. |
|  | | Returns to the “MEASUREMENTS” submenu. |

3.6 Power

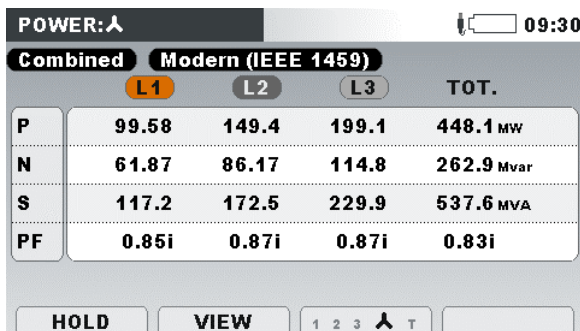
In POWER screens instrument shows measured power parameters. Results can be seen in a tabular (METER) or a graphical form (TREND). TREND view is active only while GENERAL RECORDER is active. See section 3.14 for instructions how to start recorder. In order to fully understand meanings of particular power parameter see sections 5.1.5.

Note: MI 2893/MI 2892/MI 2885 always save data according IEEE 1459 and data presentation could be also selected under PowerView.

3.6.1 Meter


By entering POWER option from Measurement's submenu, the tabular POWER (METER) screen is shown (see figure below). Which measurement is present on display depends on following settings:

- Power measurement method: Modern (IEEE 1459), Classic (Vector) or Classic (Arithmetic) – see section 3.21.6
- Connection type: 1W, 2W, 3W...
- Selected VIEW: Combined, Fundamental or Nonfundamental




| | L1 | L2 | L3 | TOT. |
|----|-------|-------|-------|------------|
| P | 99.58 | 149.4 | 199.1 | 448.1 MW |
| N | 61.87 | 86.17 | 114.8 | 262.9 Mvar |
| S | 117.2 | 172.5 | 229.9 | 537.6 MVA |
| PF | 0.85i | 0.87i | 0.87i | 0.83i |

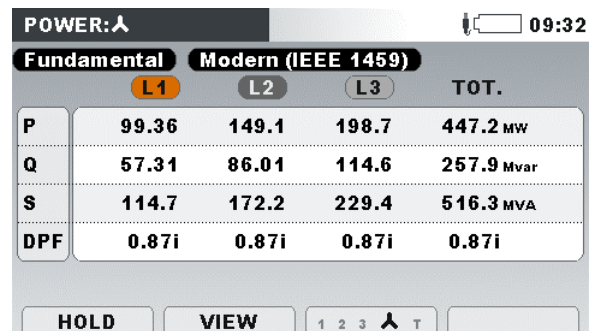Figure 29: Power measurements summary (combined)



| | L1 | L2 | L3 | TOT. |
|-----|-------|-------|-------|------------|
| P | 99.36 | 149.1 | 198.7 | 447.2 MW |
| Q | 57.31 | 86.01 | 114.6 | 257.9 Mvar |
| S | 114.7 | 172.2 | 229.4 | 516.3 MVA |
| DPF | 0.87i | 0.87i | 0.87i | 0.87i |

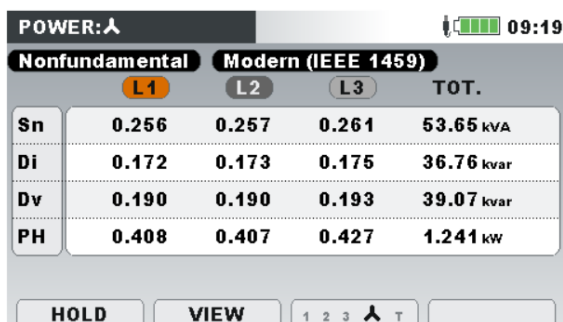Figure 31: Power measurements summary (fundamental)



| | L1 | L2 | L3 | TOT. |
|----|-------|-------|-------|------------|
| Sn | 0.256 | 0.257 | 0.261 | 53.65 kVA |
| Di | 0.172 | 0.173 | 0.175 | 36.76 kvar |
| Dv | 0.190 | 0.190 | 0.193 | 39.07 kvar |
| PH | 0.408 | 0.407 | 0.427 | 1.241 kW |

Figure 30: Power measurements summary (nonfundamental)

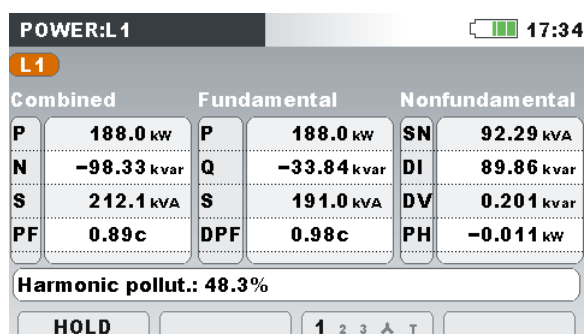


Figure 32: Detailed power measurements at phase L1

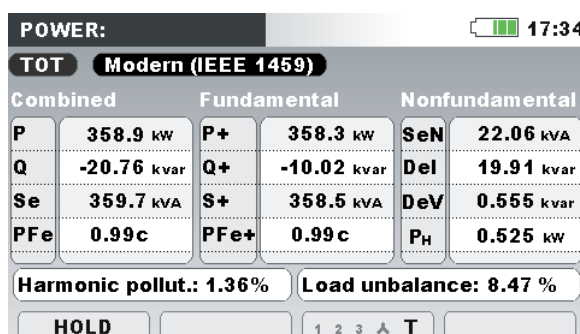


Figure 33: Detailed total power measurements




Description of symbols and abbreviations used in POWER (METER) screens are shown in table below.

Table 13: Instrument screen symbols and abbreviations (see 5.1.5 for details) – instantaneous values

| | |
|----|--|
| P | Depending on the screen position: |
| | In Combined column: Combined (fundamental and nonfundamental) active power ($\pm P_1, \pm P_2, \pm P_3, \pm P_{tot}$) |
| | In Fundamental column: Fundamental active phase power ($\pm P_{fund1}, \pm P_{fund2}, \pm P_{fund3}$) |
| N | Combined (fundamental and nonfundamental) nonactive phase power ($\pm N_1, \pm N_2, \pm N_3$) and nonactive total vector ($\pm N_{tot}$) |
| Na | Combined (fundamental and nonfundamental) nonactive arithmetic total power ($\pm Na_{tot}$) |
| Q | Fundamental reactive phase power ($\pm Q_{fund1}, \pm Q_{fund2}, \pm Q_{fund3}$) |
| Qa | Fundamental total arithmetic reactive power ($Q_{afund_{tot}}$) |
| Qv | Fundamental total vector reactive power ($\pm Q_{vfund_{tot}}$) |
| S | Depending on the screen position: |
| | In Combined column: Combined (fundamental and nonfundamental) apparent phase power (S_1, S_2, S_3) |
| | In Fundamental column: Fundamental apparent phase power ($S_{fund1}, S_{fund2}, S_{fund3}$) |
| Sa | Depending on the screen position: |
| | In Combined column: Combined (fundamental and nonfundamental) total arithmetic apparent power (Sa_{tot}) |
| | In Fundamental column: Fundamental total arithmetic apparent power ($Sa_{fund_{tot}}$) |
| Sv | Depending on the screen position: |
| | In Combined column: Combined (fundamental and nonfundamental) total vector apparent power (Sv_{tot}) |
| | In Fundamental column: Fundamental total vector apparent power ($Sv_{fund_{tot}}$) |

| | |
|------------------|---|
| P+ | Positive sequence of total active fundamental power ($\pm P_{tot}^+$) |
| Q+ | Positive sequence of total reactive fundamental power ($\pm Q_{tot}^+$) |
| S+ | Positive sequence of total apparent fundamental power ($\pm S_{tot}^+$) |
| DPF+ | Positive sequence power factor (fundamental, total) |
| Se | Combined (fundamental and nonfundamental) total effective apparent power (Se_{tot}) |
| SN | Phase nonfundamental apparent power (SN_1, SN_2, SN_3) |
| Sen | Total effective nonfundamental apparent power (Sen_{tot}) |
| DI | Phase current distortion power (DI_1, DI_2, DI_3) |
| DeI | Total effective current distortion power (DeI_{tot}) |
| Dv | Phase voltage distortion power (DV_1, DV_2, DV_3) |
| Dev | Total effective voltage distortion power (Dev_{tot}) |
| PH | Phase and total harmonic active power ($P_{H1}^+, P_{H2}^+, P_{H3}^+, \pm P_{Htot}$) |
| PF | Phase combined (fundamental and nonfundamental) power factor ($\pm PF_1, \pm PF_2, \pm PF_3$) |
| PFa | Total arithmetic combined (fundamental and nonfundamental) power factor ($\pm PFa$) |
| PFe | Total effective combined (fundamental and nonfundamental) power factor ($\pm PFe$) |
| PFv | Total vector combined (fundamental and nonfundamental) power factor ($\pm PFv$). |
| DPF | Phase fundamental power factor ($\pm DPF_1, \pm DPF_2, \pm DPF_3$) and positive sequence total power factor ($\pm DPF^+$) |
| DPFa | Total arithmetic fundamental power factor ($\pm DPFa$). |
| DPFv | Total vector fundamental power factor ($\pm DPFv$). |
| Harmonic Pollut. | Harmonic pollution according to the standard IEEE 1459 |
| Load unbalance | Load unbalance according to the standard IEEE 1459 |

Table 14: Keys in Power (METER) screens

| | | |
|---|------------------|--|
|  | HOLD | Holds measurement on display. Hold clock time will be displayed in the right top corner. |
| | RUN | Runs held measurement. |
|  | VIEW | Switches between Combined, Fundamental and Nonfundamental view. |
|  | 1 2 3 ^ T | Shows measurements for phase L1. |
| | 1 2 3 ^ T | Shows measurements for phase L2. |
| | 1 2 3 ^ T | Shows measurements for phase L3. |

| | |
|--|--|
| | Shows brief view on measurements on all phases in a single screen. |
| | Shows measurement results for TOTAL power measurements. |
| | Switches to METER view. |
| | Switches to TREND view (available only during recording). |
| | Triggers Waveform snapshot. |
| | Returns to the "MEASUREMENTS" submenu. |

3.6.2 Trend

During active recording TREND view is available (see section 3.14 for instructions how to start GENERAL RECORDER).

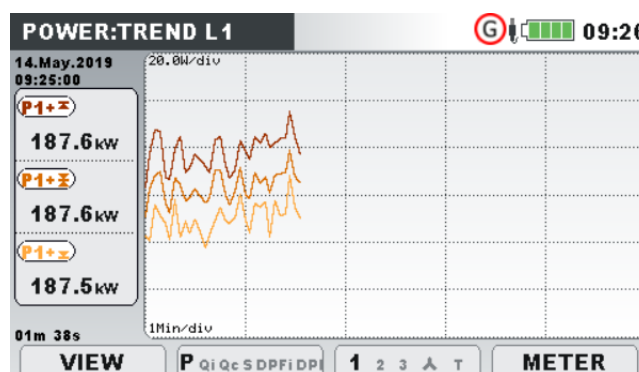
 
 
 
 
 
 
 

 
 
 
 
 

 


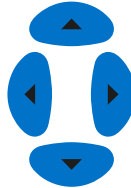


Figure 34: Power trend screen

Table 15: Instrument screen symbols and abbreviations

| | |
|---------------------------|--|
| P1±, P2±, P3±, Pt± | View: Combined power Maximal () , average () and minimal () value of consumed (P_1^+ , P_2^+ , P_3^+ , P_{tot}^+) or generated (P_1^- , P_2^- , P_3^- , P_{tot}^-) active combined power for time interval (IP) selected by cursor. |
| P1±, P2±, P3±, P± | View: Fundamental power Maximal () , average () and minimal () value of consumed ($Pfund_1^+$, $Pfund_2^+$, $Pfund_3^+$, P_{tot}^+) or generated ($Pfund_1^-$, $Pfund_2^-$, $Pfund_3^-$, P_{tot}^-) active fundamental power for time interval (IP) selected by cursor. |
| Ni1±, Ni2±, Ni3±, Nit± | View: Combined power Maximal () , average () and minimal () value of consumed (N_{1ind}^+ , N_{2ind}^+ , N_{3ind}^+ , N_{totind}^+) or generated (N_{1ind}^- , N_{2ind}^- , N_{3ind}^- , N_{totind}^-) inductive combined nonactive power for time interval (IP) selected by cursor. |
| Nc1±, Nc2±, Nc3±, Nct± | View: Combined power Maximal () , average () and minimal () value of consumed (N_{1cap}^+ , N_{2cap}^+ , N_{3cap}^+ , N_{totcap}^+) or generated (N_{1cap}^- , N_{2cap}^- , N_{3cap}^- , N_{totcap}^-) capacitive combined nonactive power for time interval (IP) selected by cursor. |
| S1, S2, S3, Se | View: Combined power Maximal () , average () and minimal () value of combined apparent power (S_1 , S_2 , S_3 , S_{tot}) for time interval (IP) selected by cursor. |

| | |
|--|---|
| S1, S2, S3, S+ | <p>View: Fundamental power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of fundamental apparent power (S_{fund1}, S_{fund2}, S_{fund3}, S_{tot}^+) for time interval (IP) selected by cursor.</p> |
| PFI1 \pm , PFI2 \pm , PFI3 \pm , PFit \pm | <p>View: Combined power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of inductive power factor (1st quadrant: PF_{1ind}^+, PF_{2ind}^+, PF_{3ind}^+, PF_{totind}^+ and 3rd quadrant: PF_{1ind}^-, PF_{2ind}^-, PF_{3ind}^-, PF_{totind}^-) for time interval (IP) selected by cursor.</p> |
| PFc1 \pm , PFc2 \pm , PFc3 \pm , PFct \pm | <p>View: Combined power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of capacitive power factor (4th quadrant: PF_{1cap}^+, PF_{2cap}^+, PF_{3cap}^+, PF_{totcap}^+ and 2nd quadrant: PF_{1cap}^-, PF_{2cap}^-, PF_{3cap}^-, PF_{totcap}^-) for time interval (IP) selected by cursor.</p> |
| Qi1 \pm , Qi2 \pm , Qi3 \pm , Q+i \pm | <p>View: Fundamental power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of consumed ($Q_{1ind}^+$, Q_{2ind}^+, Q_{3ind}^+, Q_{totind}^+) or generated (Q_{1ind}^-, Q_{2ind}^-, Q_{3ind}^-, Q_{totind}^-) fundamental reactive inductive power for time interval (IP) selected by cursor.</p> |
| Qc1 \pm , Qc2 \pm , Qc3 \pm , Q+c \pm | <p>View: Fundamental power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of consumed ($Q_{1cap}^+$, Q_{2cap}^+, Q_{3cap}^+, Q_{captot}^+) or generated (Q_{1cap}^-, Q_{2cap}^-, Q_{3cap}^-, Q_{captot}^-) fundamental reactive capacitive power for time interval (IP) selected by cursor.</p> |
| DPFI1 \pm , DPFI2 \pm , DPFI3 \pm , DPF+it \pm | <p>View: Fundamental power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of inductive displacement power factor (1st quadrant: DPF_{1ind}^+, DPF_{2ind}^+, DPF_{3ind}^+, DPF_{totind}^+, and 3rd quadrant: DPF_{1ind}^-, DPF_{2ind}^-, DPF_{3ind}^-, DPF_{totind}^-,) for time interval (IP) selected by cursor.</p> |
| DPFc1 \pm , DPFc2 \pm , DPFc3 \pm , DPF+ct \pm | <p>View: Fundamental power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of capacitive displacement power factor (4th quadrant: DPF_{1cap}^+, DPF_{2cap}^+, DPF_{3cap}^+, DPF_{totcap}^+, and 2nd quadrant: DPF_{1cap}^-, DPF_{2cap}^-, DPF_{3cap}^-, DPF_{totcap}^-) for time interval (IP) selected by cursor.</p> |
| Sn1, Sn2, Sn3, Sen | <p>View: Nonfundamental power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of consumed or generated nonfundamental apparent power (SN_1, SN_2, SN_3, Sen_{tot}) for time interval (IP) selected by cursor.</p> |
| Di1, Di2, Di3, Dei | <p>View: Nonfundamental power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of consumed or generated phase current distortion power (DI_1, DI_2, DI_3, Dei_{tot}) for time interval (IP) selected by cursor.</p> |
| Dv1, Dv2, Dv3, Dev | <p>View: Nonfundamental power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of consumed or generated phase voltage distortion power (DV_1, DV_2, DV_3, Dev_{tot}) for time interval (IP) selected by cursor.</p> |
| Ph1 \pm , Ph2 \pm , Ph3 \pm , Pht \pm | <p>View: Nonfundamental power</p> <p>Maximal ($\mathbf{\overline{\Delta}}$), average ($\mathbf{\overline{\Sigma}}$) and minimal ($\mathbf{\overline{\Delta}}$) value of consumed ($P_{H1}^+$, P_{H2}^+, P_{H3}^+, P_{Htot}^+) or generated (P_{H1}^-, P_{H2}^-, P_{H3}^-, P_{Htot}^-) active harmonic power for time interval (IP) selected by cursor.</p> |

Table 16: Keys in Power (TREND) screens

| | | |
|--|-----------|--|
| | | Selects which measurement should instrument represent on graph: |
| | | <ul style="list-style-type: none">Consumed or Generated Measurements related to consumed (suffix: +) or generated power (suffix: -).Combined, Fundamental or Nonfundamental Measurement related to fundamental power, nonfundamental power or combined. |
| F1 | VIEW | Keys in VIEW window: |
|  | | Selects option. |
|  | | Confirms selected option. |
|  | | Exits selection window without change. |
| | | If Combined power is selected: |
| P Ni Nc S PFi Pfc | | Shows combined active power trend. |
| P Ni Nc S PFi Pfc | | Shows combined inductive nonactive power trend. |
| P Ni Nc S PFi Pfc | | Shows combined capacitive nonactive power trend. |
| P Ni Nc S PFi Pfc | | Shows combined apparent power trend. |
| P Ni Nc S PFi Pfc | | Shows inductive power factor trend. |
| P Ni Nc S Pfi PFC | | Shows capacitive power factor trend. |
| | | If Fundamental power is selected: |
| P Qi Qc S DPFi DPfc | | Shows fundamental active power trend. |
| P Qi Qc S DPFi DPfc | | Shows fundamental inductive reactive power trend. |
| P Qi QC S DPFi DPfc | | Shows fundamental capacitive reactive power trend. |
| P Qi Qc S DPFi DPfc | | Shows fundamental apparent power trend. |
| P Qi Qc S DPFi DPfc | | Shows inductive displacement power factor trend. |
| P Qi Qc S DPfi DPFC | | Shows capacitive displacement power factor trend. |
| | | If Nonfundamental power is selected: |
| Sn Di Dv Ph | | Shows nonfundamental apparent power trend. |
| Sn Di Dv Ph | | Shows nonfundamental current distortion power. |
| Sn Di Dv Ph | | Shows nonfundamental voltage distortion power. |
| Sn Di Dv Ph | | Shows nonfundamental active power. |
| F3 | 1 2 3 ^ T | Selects between phase, all-phases and Total power view: Shows power parameters for phase L1. |

| | | |
|--|------------------|--|
| | 1 2 3 ^ T | Shows power parameters for phase L2. |
| | 1 2 3 ^ T | Shows power parameters for phase L3. |
| | 1 2 3 ^ T | Shows power parameters for phases L1, L2 and L3 on the same graph. |
| | 1 2 3 ^ T | Shows Total power parameters. |
| | METER | Switches to METER view. |
| | TREND | Switches to TREND view (available only during recording). |
| | | Moves cursor and selects time interval (IP) for observation. |
| | | Returns to the "MEASUREMENTS" submenu. |

3.7 Energy

3.7.1 Meter

Instrument shows status of energy counters in energy menu. Results can be seen in a tabular (METER) form. The meter screens are shown on figures below.



Figure 35: Energy counters screen (General Recorder is running)



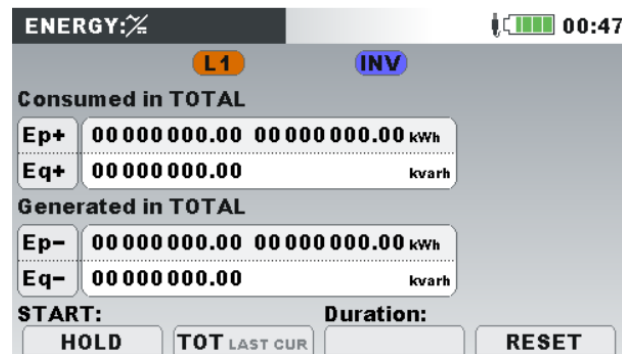


Figure 36: Energy counters screen (General Recorder is not running)

Table 17: Instrument screen symbols and abbreviations

| | |
|----------|--|
| Ep+ | Consumed (+) phase (Ep_1^+ , Ep_2^+ , Ep_3^+) or total (Ep_{tot}^+) active energy |
| Ep- | Generated (-) phase (Ep_1^- , Ep_2^- , Ep_3^-) or total (Ep_{tot}^-) active energy |
| Eq+ | Consumed (+) phase (Eq_1^+ , Eq_2^+ , Eq_3^+) or total (Eq_{tot}^+) fundamental reactive energy |
| Eq- | Generated (-) phase (Eq_1^- , Eq_2^- , Eq_3^-) or total (Eq_{tot}^-) fundamental reactive energy |
| Start | Recorder start time and date |
| Duration | Recorder elapsed time |

Table 18: Keys in Energy (METER) screens

| | | |
|-----|--------------------------|--|
| F1 | HOLD | Holds measurement on display. |
| | RUN | Runs held measurement. |
| F2 | TOT LAST CUR | Shows energy registers for whole record. |
| | TOT LAST CUR | Shows energy registers for last interval. |
| | TOT LAST CUR | Shows energy registers for current interval. |
| F3 | 1 2 3 \wedge T | Shows energy parameters for phase L1. |
| | 1 2 3 \wedge T | Shows energy parameters for phase L2. |
| | 1 2 3 \wedge T | Shows energy parameters for phase L3. |
| | 1 2 3 \blacktriangle T | Shows all phases energy. |
| | 1 2 3 \blacktriangle T | Shows energy parameters for Totals. |
| F4 | METER | Switches to METER view. |
| | TREND | Switches to TREND view. |
| | EFF | Switches to EFFICIENCY view. |
| | RESET | Reset energy counters |
| | | Triggers Waveform snapshot. |
| ESC | | Returns to the "MEASUREMENTS" submenu. |

3.7.2 Trend

TREND view is available only during active recording (see section 3.14 for instructions how to start GENERAL RECORDER).

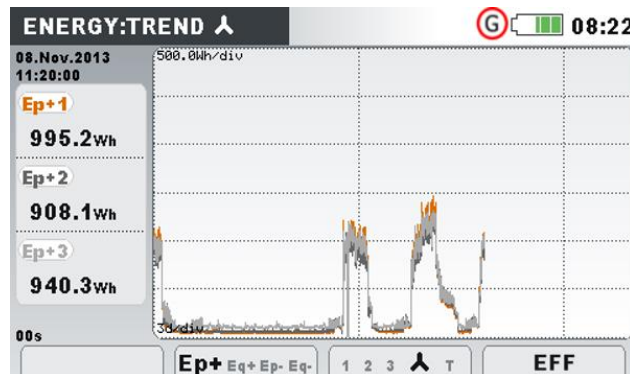


Figure 37: Energy trend screen

Table 19: Instrument screen symbols and abbreviations

| | |
|----------|--|
| Ep+ | Consumed (+) phase (Ep_1^+ , Ep_2^+ , Ep_3^+) or total (Ep_{tot}^+) active energy |
| Ep- | Generated (-) phase (Ep_1^- , Ep_2^- , Ep_3^-) or total (Ep_{tot}^-) active energy |
| Eq+ | Consumed (+) phase (Eq_1^+ , Eq_2^+ , Eq_3^+) or total (Eq_{tot}^+) fundamental reactive energy |
| Eq- | Generated (-) phase (Eq_1^- , Eq_2^- , Eq_3^-) or total (Eq_{tot}^-) fundamental reactive energy |
| Start | Recorder start time and date |
| Duration | Recorder elapsed time |

Table 20: Keys in Energy (TREND) screens

| | | |
|-----|-----------------|--|
| F2 | Ep+ Eq+ Ep- Eq- | Shows active consumed energy for time interval (IP) selected by cursor. |
| | Ep+ Eq+ Ep- Eq- | Shows reactive consumed energy for time interval (IP) selected by cursor. |
| | Ep+ Eq+ Ep- Eq- | Shows active generated energy for time interval (IP) selected by cursor. |
| | Ep+ Eq+ Ep- Eq- | Shows reactive generated energy for time interval (IP) selected by cursor. |
| F3 | 1 2 3 ^ T | Shows energy records for phase L1. |
| | 1 2 3 ^ T | Shows energy records for phase L2. |
| | 1 2 3 ^ T | Shows energy records for phase L3. |
| | 1 2 3 ^ T | Shows all phases energy records. |
| | 1 2 3 ^ T | Shows energy records for Totals. |
| F4 | METER | Switches to METER view. |
| | TREND | Switches to TREND view. |
| | EFF | Switches to EFFICIENCY view. |
| ESC | | Returns to the "MEASUREMENTS" submenu. |

3.7.3 Efficiency

EFFICIENCY view is available only during active recording (see section 3.14 for instructions how to start GENERAL RECORDER).

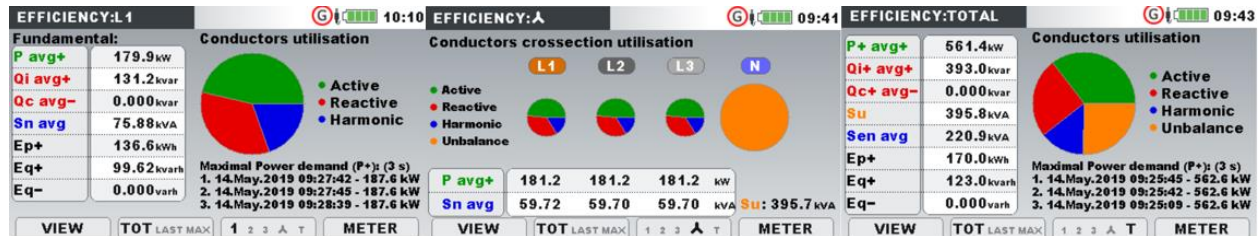


Figure 38: Energy efficiency screen

Table 21: Instrument screen symbols and abbreviations

| | |
|----------|--|
| P avg+ | Consumed phase fundamental active power (P_{fund1}^+ , P_{fund2}^+ , P_{fund3}^+) |
| P+ avg+ | Positive sequence of total fundamental consumed active power (P_{tot}^+) |
| P avg- | Generated phase fundamental active power (P_{fund1}^- , P_{fund2}^- , P_{fund3}^-) |
| P+ avg- | Positive sequence of total fundamental generated active power (P_{tot}^-) Shown active power is averaged over chosen time interval (key: F2) <ul style="list-style-type: none"> TOT – shows total average (for complete record) active power LAST – shows average active power in the last interval MAX – shows average active power in interval where E_p was maximal. |
| Qi avg+ | Consumed phase fundamental inductive reactive power ($Q_{fund_{ind1}}^+$, $Q_{fund_{ind2}}^+$, $Q_{fund_{ind3}}^+$) |
| Qi+ avg+ | Positive sequence of total inductive fundamental consumed reactive power (Q_{tot}^+) |
| Qi avg- | Generated phase fundamental inductive reactive power ($Q_{fund_{ind1}}^-$, $Q_{fund_{ind2}}^-$, $Q_{fund_{ind3}}^-$) |
| Qi+ avg- | Positive sequence of total inductive fundamental generated reactive power (Q_{tot}^-) Shown fundamental inductive reactive power is averaged over chosen time interval (key: F2) <ul style="list-style-type: none"> TOT – shows total average (for complete record) fundamental inductive reactive power LAST – shows average fundamental inductive reactive power in the last interval MAX – shows average fundamental inductive reactive power in interval where E_p was maximal. |
| Qc avg+ | Consumed phase fundamental capacitive reactive power ($Q_{fund_{cap1}}^+$, $Q_{fund_{cap2}}^+$, $Q_{fund_{cap3}}^+$) |
| Qc+ avg+ | Positive sequence of total capacitive fundamental consumed reactive power (Q_{tot}^+) |
| Qc avg- | Generated phase fundamental capacitive reactive power ($Q_{fund_{cap1}}^-$, $Q_{fund_{cap2}}^-$, $Q_{fund_{cap3}}^-$) |
| Qc+ avg- | Positive sequence of total capacitive fundamental generated reactive power (Q_{tot}^-) Shown fundamental capacitive reactive power is averaged over chosen time interval (key: F2) <ul style="list-style-type: none"> TOT – shows total average (for complete record) fundamental capacitive reactive power LAST – shows average fundamental capacitive reactive power in the last interval MAX – shows average fundamental capacitive reactive power in interval where E_p was maximal. |









| | |
|--|--|
| Sn avg | Phase nonfundamental apparent power (SN_1, SN_2, SN_3) |
| Sen avg | Total effective nonfundamental apparent power (Sen). |
| <p>Shown nonfundamental apparent power is averaged over chosen time interval (key: F2)</p> <ul style="list-style-type: none"> TOT – shows total average (for complete record) of nonfundamental apparent power LAST – shows average nonfundamental apparent power in the last interval MAX – shows average nonfundamental apparent power in interval where Ep was maximal. | |
| Su | Fundamental unbalanced power, according to the IEEE 1459-2010 |
| Ep+ | Consumed phase (Ep_1^+, Ep_2^+, Ep_3^+) or total (Ep_{tot}^+) active energy |
| Ep- | Generated phase (Ep_1^-, Ep_2^-, Ep_3^-) or total (Ep_{tot}^-) active energy |
| <p>Shown active energy depends on chosen time interval (key: F2)</p> <ul style="list-style-type: none"> TOT – shows accumulated energy for complete record LAST – shows accumulated energy in last interval MAX – shows maximal accumulated energy in any interval | |
| Eq+ | Consumed (+) phase (Eq_1^+, Eq_2^+, Eq_3^+) or total (Eq_{tot}^+) fundamental reactive energy |
| Eq- | Generated (-) phase (Eq_1^-, Eq_2^-, Eq_3^-) or total (Eq_{tot}^-) fundamental reactive energy |
| <p>Shown reactive energy depends on chosen time interval (key: F2)</p> <ul style="list-style-type: none"> TOT – shows accumulated energy for complete record LAST – shows accumulated energy in last interval MAX – shows accumulated reactive energy in interval where Ep was maximal. | |
| Conductors utilisation | <p>Shows conductor cross section utilisation for chosen time interval (TOT/LAST/MAX):</p> <ul style="list-style-type: none"> GREEN colour – represents part of conductor cross section (wire) used for active energy transfer (Ep) RED colour – represents part of conductor cross section (wire) used for fundamental reactive energy transfer (Eq) BLUE colour – represents part of conductor cross section (wire) used for nonfundamental (harmonic) apparent energy transfer (SN) BROWN colour – represents unbalanced power (S_u) portion flowing in polyphase system in respect to phase power flow. |
|  | |
| Date | End time of shown interval. |
| Max. Power Demand | <p>Shows three intervals where measured fundamental active power was maximal.</p> <p>According to the selected channel (key: F3), and VIEW (key: F1) consumed phase and total fundamental active power is shown ($Pfund_1^+, Pfund_2^+, Pfund_3^+, P_{tot}^+$) or generated phase and total fundamental active power is shown ($Pfund_1^-, Pfund_2^-, Pfund_3^-, P_{tot}^-$)</p> |

Table 22: Keys in Energy (TREND) screens

| | | |
|---|---|--|
|  | VIEW | Switches between Consumed (+) and Generated (-) energy view. |
|  | TOT LAST MAX | Shows parameters for complete record duration |
| | TOT LAST MAX | Shows parameters for last (complete) recorded interval |
| | TOT LAST MAX | Shows parameters for interval, where active energy was maximal |
|  | 1 2 3  T | Shows energy records for phase L1. |
| | 1 2 3  T | Shows energy records for phase L2. |
| | 1 2 3  T | Shows energy records for phase L3. |
| | 1 2 3  T | Shows all phases energy records. |

| | |
|------------------|--|
| 1 2 3 Δ T | Shows energy records for Totals. |
| METER | Switches to METER view. |
| F4 TREND | Switches to TREND view. |
| EFF | Switches to EFFICIENCY view. |
| ESC | Returns to the "MEASUREMENTS" submenu. |

3.8 Harmonics / inter-harmonics

Harmonics presents voltage and current signals as a sum of sinusoids of power frequency and its integer multiples. Sinusoidal wave with frequency k-times higher than fundamental (k is an integer) is called harmonic wave and is denoted with amplitude and a phase shift (phase angle) to a fundamental frequency signal. If a signal decomposition with Fourier transformation results with presence of a frequency that is not integer multiple of fundamental, this frequency is called inter-harmonic frequency and component with such frequency is called inter-harmonic. See 5.1.8 for details.

3.8.1 Meter

By entering HARMONICS option from Measurement's submenu, the tabular HARMONICS (METER) screen is shown (see figure below). In this screens' voltage and current harmonics or inter-harmonics and THD are shown.

| HARMONICS: Δ 00:06 | | | | | | | INTERHARM.: Δ 00:10 | | | | | | |
|---------------------------|-------|-------|------------------|-------|-------|-------|----------------------------|-------|-------|------------------|-------|-------|-------|
| V, A | U1 | I1 | U2 | I2 | U3 | I3 | V, A | U1 | I1 | U2 | I2 | U3 | I3 |
| RMS | 230.3 | 497.6 | 229.9 | 740.4 | 229.9 | 987.2 | RMS | 230.3 | 497.6 | 229.9 | 740.4 | 229.9 | 987.1 |
| THD | 14.16 | 61.43 | 0.18 | 0.711 | 0.18 | 0.742 | THD | 14.15 | 61.45 | 0.18 | 0.738 | 0.17 | 0.675 |
| k | | 1.4 | | 1.0 | | 1.0 | ih 0 | 0.00 | 0.0 | 0.00 | 0.0 | 0.00 | 0.0 |
| DC | 0.00 | 1.220 | 0.02 | 0.0 | 1.18 | 1.095 | ih 1 | 0.00 | 0.0 | 0.00 | 0.0 | 0.00 | 0.0 |
| h 1 | 229.6 | 493.3 | 229.6 | 739.7 | 229.6 | 986.2 | ih 2 | 0.04 | 0.079 | 0.04 | 0.100 | 0.04 | 0.141 |
| h 2 | 0.00 | 0.0 | 0.00 | 0.0 | 0.00 | 0.0 | ih 3 | 0.05 | 0.100 | 0.04 | 0.186 | 0.05 | 0.223 |
| HOLD | VIEW | | 1 2 3 N Δ | | BAR | | HOLD | VIEW | | 1 2 3 N Δ | | BAR | |

Figure 39: Harmonics and inter-harmonics (METER) screens

For phase harmonics presentation, there are also Power harmonics presented, for each phase separately:

HARMONICS: L1

U1

I1

P1

| | | | |
|-----|---------|---------|----------|
| RMS | 237.6 v | 206.6 A | 45.42 kW |
| THD | 59.45 v | 51.93 A | 1.086 kW |
| DC | 0.09 v | 0.745 A | 0.000 kW |
| h 1 | 229.8 v | 199.7 A | 44.34 kW |
| h 2 | 0.00 v | 0.0 A | 0.000 kW |
| h 3 | 34.40 v | 29.96 A | 0.763 kW |

HOLD

VIEW

1 2 3 N

BAR



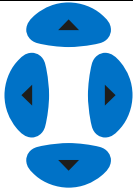



 
 
 
 
 



 
Figure 40: Phase harmonics presentation (U,I,P)



Description of symbols and abbreviations used in METER screens are shown in table below.

Table 23: Instrument screen symbols and abbreviations

| | |
|--------------|---|
| RMS | RMS voltage / current value |
| THD | Total voltage / current harmonic distortion THD_U and THD_I in % of fundamental voltage / current harmonic or in RMS V, A. |
| k | k-factor (unit-less) indicates the amount of harmonics that load generate |
| DC | Voltage or current DC component in % of fundamental voltage / current harmonic or in RMS V, A. |
| h1 ... h50 | n-th harmonic voltage U_{h_n} or current I_{h_n} component in % of fundamental voltage / current harmonic or in RMS V, A. |
| ih0 ... ih50 | n-th inter-harmonic voltage U_{ih_n} or current I_{ih_n} component in % of fundamental voltage / current harmonic or in RMS V, A. |

Table 24: Keys in Harmonics / inter-harmonics (METER) screens

| | | |
|---|---|---|
|  | HOLD | Holds measurement on display. Hold clock time will be displayed in the right top corner. |
| | RUN | Runs held measurement. |
| | | Switches view between Harmonics and Inter-harmonics. Switches units between: <ul style="list-style-type: none"> • RMS (Volts, Amperes) • % of fundamental harmonic |
|  | VIEW | Keys in VIEW window: |
| | |  Selects option. |
| | |  Confirms selected option. |
| | |  Exits selection window without change. |
|  | | Selects between single phase, neutral, all-phases and line harmonics / inter-harmonics view. |
| |  | Shows harmonics / inter-harmonics components for phase L1. |
| |  | Shows harmonics / inter-harmonics components for phase L2. |
| |  | Shows harmonics / inter-harmonics components for phase L3. |
| |  | Shows harmonics / inter-harmonics components for neutral channel. |
| |  | Shows harmonics / inter-harmonics components for all phases on single screen. |
| |  | Shows harmonics / inter-harmonics components for phase L12. |
| |  | Shows harmonics / inter-harmonics components for phase L23. |
| |  | Shows harmonics / inter-harmonics components for phase L31. |
| |  | Shows harmonics / inter-harmonics components for phase-to-phase voltages. |

| | | |
|---|--------------|---|
| | METER | Switches to METER view. |
| | BAR | Switches to BAR view. |
| F4 | AVG | Switches to AVG (average) view (available only during recording). |
| | TREND | Switches to TREND view (available only during recording). |
|  | | Shifts through harmonic / interharmonic components. |
|  | | Triggers Waveform snapshot. |
| ESC | | Returns to the "MEASUREMENTS" submenu. |

3.8.2 Histogram (Bar)

Bar screen displays dual bar graphs. The upper bar graph shows instantaneous voltage harmonics and the lower bar graph shows instantaneous current harmonics.

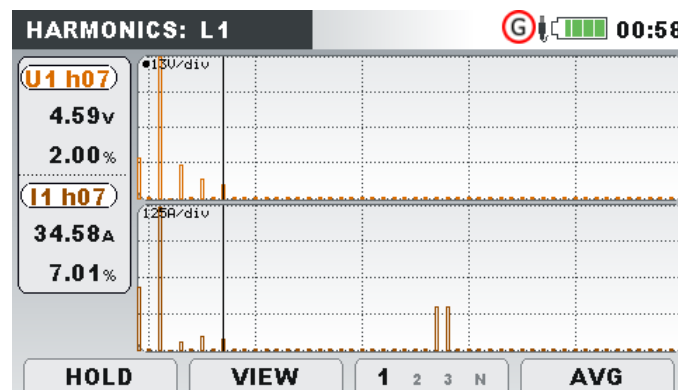


Figure 41: Harmonics histogram screen














Description of symbols and abbreviations used in BAR screens are shown in table below.

Table 25: Instrument screen symbols and abbreviations

| | |
|----------------|--|
| Ux h01 ... h50 | Instantaneous voltage harmonic / inter-harmonic component in V_{RMS} and in % of fundamental voltage |
| Ix h01 ... h50 | Instantaneous current harmonic / inter-harmonic component in A_{RMS} and in % of fundamental current |
| Ux DC | Instantaneous DC voltage in V and in % of fundamental voltage |
| Ix DC | Instantaneous DC current in A and in % of fundamental current |
| Ux THD | Instantaneous total voltage harmonic distortion THD_U in V and in % of fundamental voltage |
| Ix THD | Instantaneous total current harmonic distortion THD_I in A_{RMS} and in % of fundamental current |

Table 26: Keys in Harmonics / inter-harmonics (BAR) screens

| | |
|-------------|-------------------------------|
| HOLD | Holds measurement on display. |
|-------------|-------------------------------|

| | | |
|---|---|---|
|  | RUN | Runs held measurement. |
| | | Switches view between harmonics and inter-harmonics. |
|  | VIEW | Keys in VIEW window: |
| |  | Selects option. |
| |  | Selects option. |
| |  | Confirms selected option. |
| |  | Exits selection window without change. |
| | | Selects between single phases and neutral channel harmonics / inter-harmonics bars. |
| | 1 2 3 N | Shows harmonics / inter-harmonics components for phase L1. |
| | 1 2 3 N | Shows harmonics / inter-harmonics components for phase L2. |
|  | 1 2 3 N | Shows harmonics / inter-harmonics components for phase L3. |
| | 1 2 3 N | Shows harmonics / inter-harmonics components for neutral channel. |
| | 12 23 31 | Shows harmonics / inter-harmonics components for phase L12. |
| | 12 23 31 | Shows harmonics / inter-harmonics components for phases L23. |
| | 12 23 31 | Shows harmonics / inter-harmonics components for phases L31. |
| | METER | Switches to METER view. |
|  | BAR | Switches to BAR view. |
| | AVG | Switches to AVG (average) view (available only during recording). |
| | TREND | Switches to TREND view (available only during recording). |
|  | | Scales displayed histogram by amplitude. |
|  | | Scrolls cursor to select single harmonic / inter-harmonic bar. |
|  | | Toggles cursor between voltage and current histogram. |
|  | | Triggers Waveform snapshot. |
|  | | Returns to the "MEASUREMENTS" submenu. |

3.8.3 Harmonics Average Histogram (Avg Bar)

During active GENERAL RECORDER, Harmonics average histogram AVG view is available (see section 3.14 for instructions how to start GENERAL RECORDER). In this view average voltage and current harmonic values are shown (averaged from beginning of the recording to the current moment). Harmonics average histogram screen displays dual bar graphs. The upper bar graph shows average voltage harmonics and the lower bar graph shows average current harmonics.

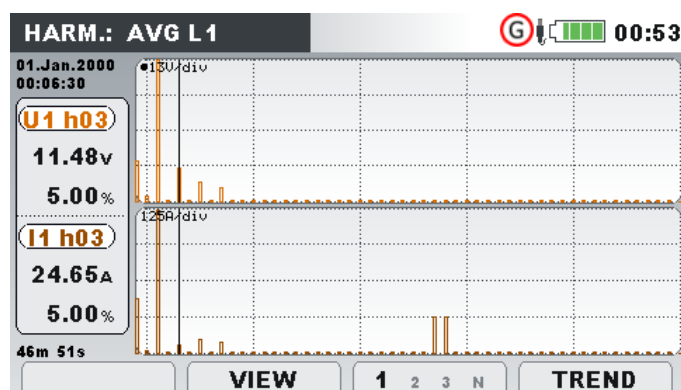


Figure 42: Harmonics average histogram screen


 



Description of symbols and abbreviations used in AVG screens are shown in table below.

Table 27: Instrument screen symbols and abbreviations

| | |
|----------------|--|
| Ux h01 ... h50 | Average voltage harmonic / inter-harmonic component in V_{RMS} and in % of fundamental voltage (from beginning of the recording) |
| Ix h01 ... h50 | Average current harmonic / inter-harmonic component in A_{RMS} and in % of fundamental current |
| Ux DC | Average DC voltage in V and in % of fundamental voltage |
| Ix DC | Average DC current in A and in % of fundamental current |
| Ux THD | Average total voltage harmonic distortion THD_U in V and in % of fundamental voltage |
| Ix THD | Average total current harmonic distortion THD_I in A_{RMS} and in % of fundamental current |

Table 28: Keys in Harmonics / inter-harmonics (AVG) screens

| | | |
|-----------|-----------------|---|
| | | Switches view between harmonics and inter-harmonics. |
| | | Keys in VIEW window: |
| F2 | VIEW | <div> <div>◀ ▶</div> <div>Selects option.</div> </div> |
| | | <div> <div>ENTER</div> <div>Confirms selected option.</div> </div> |
| | | <div> <div>ESC</div> <div>Exits selection window without change.</div> </div> |
| | | Selects between single phases and neutral channel harmonics / inter-harmonics bars. |
| F3 | 1 2 3 N | Shows harmonics / inter-harmonics components for phase L1. |
| | 1 2 3 N | Shows harmonics / inter-harmonics components for phase L2. |
| | 1 2 3 N | Shows harmonics / inter-harmonics components for phase L3. |
| | 1 2 3 N | Shows harmonics / inter-harmonics components for neutral channel. |
| | 12 23 31 | Shows harmonics / inter-harmonics components for phase L12. |

| | |
|---|---|
| 12 23 31 | Shows harmonics / inter-harmonics components for phases L23. |
| 12 23 31 | Shows harmonics / inter-harmonics components for phases L31. |
| METER | Switches to METER view. |
| BAR | Switches to BAR view. |
| F4 AVG | Switches to AVG (average) view (available only during recording). |
| TREND | Switches to TREND view (available only during recording). |
|  | Scales displayed histogram by amplitude. |
|  | Scrolls cursor to select single harmonic / inter-harmonic bar. |
|  | Toggles cursor between voltage and current histogram. |
|  | Triggers Waveform snapshot. |
|  | Returns to the "MEASUREMENTS" submenu. |

3.8.4 Trend

During active GENERAL RECORDER, TREND view is available (see section 3.14 for instructions how to start GENERAL RECORDER). Voltage and current harmonic / inter-harmonic components can be observed by cycling function key F4 (METER-BAR-AVG-TREND).

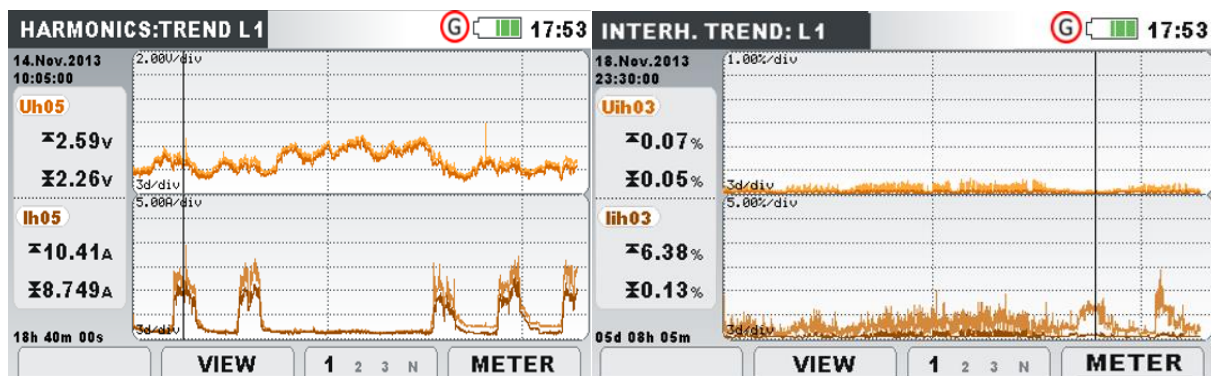


Figure 43: Harmonics and inter-harmonics trend screen

Table 29: Instrument screen symbols and abbreviations

| | |
|------|---|
| ThdU | Interval maximal ($\overline{\text{A}}$) and average ($\overline{\text{X}}$) value of total voltage harmonic distortion THD _U for selected phase |
| ThdI | Interval maximal ($\overline{\text{A}}$) and average ($\overline{\text{X}}$) value of total current harmonic distortion THD _I for selected phase |
| Udc | Interval maximal ($\overline{\text{A}}$) and average ($\overline{\text{X}}$) value of DC voltage component for selected phase |
| Idc | Interval maximal ($\overline{\text{A}}$) and average ($\overline{\text{X}}$) value of selected DC current component for selected phase |












| | |
|------------------------------|---|
| Uh01...Uh50 Uih01...Uih50 | Interval maximal () and average () value for selected n-th voltage harmonic / inter-harmonic component for selected phase |
| Ih01...Ih50 lih01...lih50 | Interval maximal () and average () value of selected n-th current harmonic / inter-harmonic component for selected phase |

 Table 30: Keys in Harmonics / inter-harmonics (TREND) screens

| | | |
|---|-----------------|--|
| | | <p>Switches between harmonics or inter-harmonics view.</p> <p>Switches measurement units between RMS V,A or % of fundamental harmonic.</p> <p>Selects harmonic number for observing.</p> |
|  | VIEW | <p>Keys in VIEW window:</p> <div>  <p>Selects option.</p> </div> <div>  <p>Confirms selected option.</p> </div> <div>  <p>Exits selection window without change.</p> </div> |
| | | Selects between single phases and neutral channel harmonics / inter-harmonics trends. |
| | 1 2 3 N | Shows selected harmonics / inter-harmonics components for phase L1. |
| | 1 2 3 N | Shows selected harmonics / inter-harmonics components for phase L2. |
| | 1 2 3 N | Shows selected harmonics / inter-harmonics components for phase L3. |
|  | 1 2 3 N | Shows selected harmonics / inter-harmonics components for neutral channel. |
| | 12 23 31 | Shows selected harmonics / inter--harmonics components for phase-to-phase voltage L12. |
| | 12 23 31 | Shows selected harmonics / inter-harmonics components for phase-to-phase voltage L23. |
| | 12 23 31 | Shows selected harmonics / inter-harmonics components for phase-to-phase voltage L31. |
| | METER | Switches to METER view. |
| | BAR | Switches to BAR view. |
|  | AVG | Switches to AVG (average) view (available only during recording). |
| | TREND | Switches to TREND view (available only during recording). |
|  | | Moves cursor and select time interval (IP) for observation. |

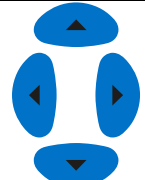ESC

Returns to the "MEASUREMENTS" submenu.

3.9 Flickers

Flickers measure the human perception of the effect of amplitude modulation on the mains voltage powering a light bulb. In Flickers menu instrument shows measured flicker parameters. Results can be seen in a tabular (METER) or a graphical form (TREND) - which is active only while GENERAL RECORDER is active. See section 3.14 for instructions how to start recording. In order to understand meanings of particular parameter see section 5.1.9.

3.9.1 Meter

By entering FLICKERS option from MEASUREMENTS submenu, the FLICKERS tabular screen is shown (see figure below).

| | L1 | L2 | L3 |
|-----------|-------|-------|---------|
| Urms | 229.0 | 230.5 | 230.5 v |
| Pinst,max | 1.04 | 0.34 | 0.94 |
| Pst(1min) | 1.02 | 0.54 | 0.97 |
| Pst | 1.07 | 0.25 | 0.90 |
| Plt | 0.78 | 1.21 | 0.60 |

HOLD TREND

Figure 44: Flickers table screen

Description of symbols and abbreviations used in METER screen is shown in table below. Note that Flickers measurement intervals are synchronised to real time clock, and therefore refreshed on minute, 10 minutes and 2 hours intervals.

Table 31: Instrument screen symbols and abbreviations

| | |
|-----------|---|
| Urms | True effective value $U_1, U_2, U_3, U_{12}, U_{23}, U_{31}$ |
| Pinst,max | Maximal instantaneous flicker for each phase refreshed each 10 seconds |
| Pst(1min) | Short term (1 min) flicker P_{st1min} for each phase measured in last minute |
| Pst | Short term (10 min) flicker P_{st} for each phase measured in last 10 minutes |
| Plt | Long term flicker (2h) P_{st} for each phase measured in last 2 hours |

Table 32: Keys in Flickers (METER) screen

| | | |
|----|-------|--|
| F1 | HOLD | Holds measurement on display. Hold clock time will be displayed in the right top corner. |
| | RUN | Runs held measurement. |
| F4 | METER | Switches to METER view. |
| | TREND | Switches to TREND view (available only during recording). |



Triggers Waveform snapshot.



Returns to the “MEASUREMENTS” submenu.

3.9.2 Trend

During active recording TREND view is available (see section 3.14 for instructions how to start recording). Flicker parameters can be observed by cycling function key F4 (METER -TREND). Note that Flicker meter recording intervals are determinate by standard IEC 61000-4-15. Flicker meter therefore works independently from chosen recording interval in GENERAL RECORDER.






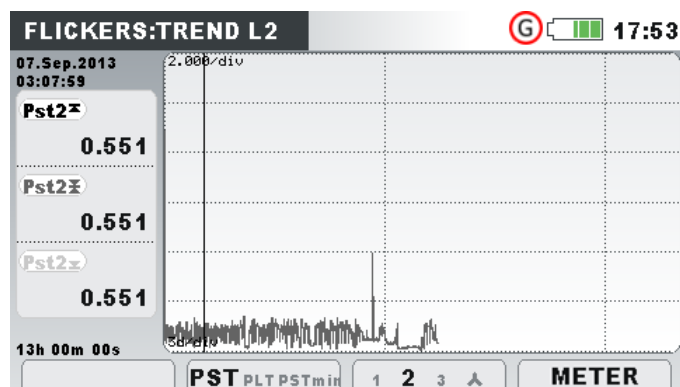

 
 
 
 
 
 
 


 







Figure 45: Flickers trend screen

Table 33: Instrument screen symbols and abbreviations

| | |
|--|---|
| Pst1m1, Pst1m2, Pst1m3, Pst1m12, Pst1m23, Pst1m31 | Maximal (▲), average (⚡) and minimal (▼) value of 1-minute short term flicker $P_{st(1min)}$ for phase voltages U_1, U_2, U_3 or line voltages U_{12}, U_{23}, U_{31} |
| Pst1, Pst2, Pst3, Pst12, Pst23, Pst31 | Maximal (▲), average (⚡) and minimal (▼) value of 10-minutes short term flicker P_{st} for phase voltages U_1, U_2, U_3 or line voltages U_{12}, U_{23}, U_{31} |
| Plt1, Plt2, Plt3, Plt12, Plt23, Plt31 | Maximal (▲), average (⚡) and minimal (▼) value of 2-hours long term flicker P_{lt} in phase voltages U_1, U_2, U_3 or line voltages U_{12}, U_{23}, U_{31} |

Table 34: Keys in Flickers (TREND) screens

| | | |
|---|--|--|
|  |  | Selects between the following options: |
| |  | Shows 10 min short term flicker P_{st} . |
| |  | Shows long term flicker P_{lt} . |
|  |  | Shows 1 min short term flicker P_{st1min} . |
| |  | Selects between trending various parameters: |
| |  | Shows selected flicker trends for phase L1. |
| |  | Shows selected flicker trends for phase L2. |
| |  | Shows selected flicker trends for phase L3. |
| |  | Shows selected flicker trends for all phases (average only). |
| |  | Shows selected flicker trends for phases L12. |
| |  | Shows selected flicker trends for phases L23. |
|  |  | Shows selected flicker trends for phases L31. |
| |  | Shows selected flicker trends for all phases (average only). |
|  |  | Switches to METER view. |
| |  | Switches to TREND view (available only during recording). |
|  | Moves cursor and selects time interval (IP) for observation. | |
|  | Returns to the “MEASUREMENTS” submenu. | |

3.10 Phase Diagram

Phase diagram graphically represent fundamental voltages, currents and phase angles of the network. This view is strongly recommended for checking instrument connection before measurement. Note that most measurement issues arise from wrongly connected instrument (see 4.1 for recommended measuring practice). On phase diagram screens instrument shows:

- Graphical presentation of voltage and current phase vectors of the measured system,
- Unbalance of the measured system.

3.10.1 Phase diagram

By entering PHASE DIAGRAM option from MEASUREMENTS submenu, the following screen is shown (see figure below).

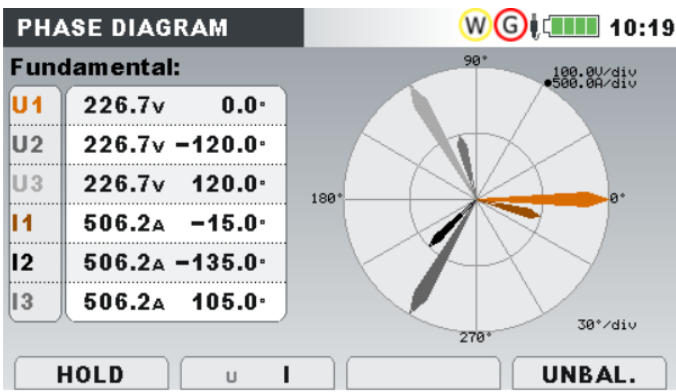


Figure 46: Phase diagram screen

Table 35: Instrument screen symbols and abbreviations

| | |
|---------------|---|
| U1, U2, U3 | Fundamental voltages U_{fund1} , U_{fund2} , U_{fund3} with relative phase angle to U_{fund1} |
| U12, U23, U31 | Fundamental voltages U_{fund12} , U_{fund23} , U_{fund31} with relative phase angle to U_{fund12} |
| I1, I2, I3 | Fundamental currents I_{fund1} , I_{fund2} , I_{fund3} with relative phase angle to U_{fund1} or U_{fund12} |

Table 36: Keys in Phase diagram screen

| | | |
|--|-------------------|--|
| | HOLD | Holds measurement on display. Hold clock time will be displayed in the right top corner. |
| | RUN | Runs held measurement. |
| | U I | Selects voltage for scaling (with cursors). |
| | I U | Selects current for scaling (with cursors). |
| | METER | Switches to PHASE DIAGRAM view. |
| | UNBAL. | Switches to UNBALANCE DIAGRAM view. |
| | TREND | Switches to TREND view (available only during recording). |
| | | Scales voltage or current phasors. |
| | | Triggers Waveform snapshot. |
| | | Returns to the “MEASUREMENTS” submenu. |

3.10.2 Unbalance diagram

Unbalance diagram represents current and voltage unbalance of the measuring system. Unbalance arises when RMS values or phase angles between consecutive phases are not equal. Diagram is shown on figure below.

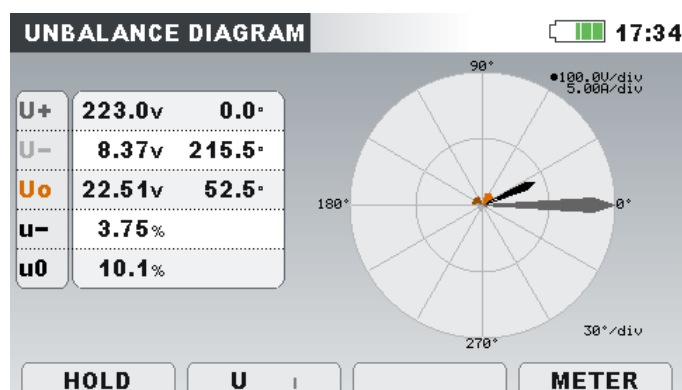


Figure 47: Unbalance diagram screen

Table 37: Instrument screen symbols and abbreviations

| | |
|----------------|--|
| U ₀ | Zero sequence voltage component U ⁰ |
| I ₀ | Zero sequence current component I ⁰ |
| U ⁺ | Positive sequence voltage component U ⁺ |
| I ⁺ | Positive sequence current component I ⁺ |
| U ⁻ | Negative sequence voltage component U ⁻ |
| I ⁻ | Negative sequence current component I ⁻ |
| u ⁻ | Negative sequence voltage ratio u ⁻ |
| i ⁻ | Negative sequence current ratio i ⁻ |
| u ₀ | Zero sequence voltage ratio u ⁰ |
| i ₀ | Zero sequence current ratio i ⁰ |

Table 38: Keys in Unbalance diagram screens

| | | |
|----|--------|--|
| F1 | HOLD | Holds measurement on display. Hold clock time will be displayed in the right top corner. |
| | RUN | Runs held measurement. |
| F2 | U I | Shows voltage unbalance measurement and selects voltage for scaling (with cursors) |
| | I U | Shows current unbalance measurement and selects current for scaling (with cursors) |
| | METER | Switches to PHASE DIAGRAM view. |
| F4 | UNBAL. | Switches to UNBALANCE DIAGRAM view. |
| | TREND | Switches to TREND view (available only during recording). |
| | | Scales voltage or current phasors. |
| | | Triggers Waveform snapshot. |
| | | Returns to the "MEASUREMENTS" submenu. |

3.10.3 Unbalance trend

During active recording UNBALANCE TREND view is available (see section 3.14 for instructions how to start GENERAL RECORDER).

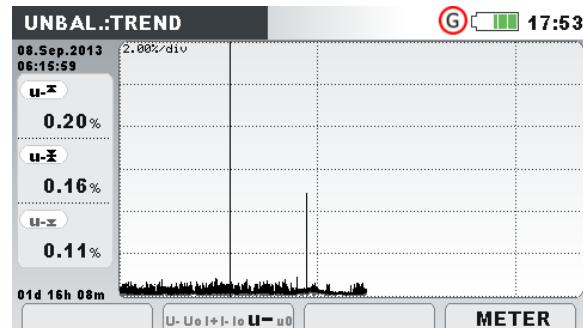


Figure 48: Symmetry trend screen

Table 39: Instrument screen symbols and abbreviations

| | |
|----|--|
| u- | Maximal ($\overline{\text{u-}}$), average ($\overline{\text{u-}}$) and minimal ($\underline{\text{u-}}$) value of negative sequence voltage ratio u- |
| u0 | Maximal ($\overline{\text{u0}}$), average ($\overline{\text{u0}}$) and minimal ($\underline{\text{u0}}$) value of zero sequence voltage ratio u ⁰ |
| i- | Maximal ($\overline{\text{i-}}$), average ($\overline{\text{i-}}$) and minimal ($\underline{\text{i-}}$) value of negative sequence current ratio i- |
| i0 | Maximal ($\overline{\text{i0}}$), average ($\overline{\text{i0}}$) and minimal ($\underline{\text{i0}}$) value of zero sequence current ratio i ⁰ |
| U+ | Maximal ($\overline{\text{U+}}$), average ($\overline{\text{U+}}$) and minimal ($\underline{\text{U+}}$) value of positive sequence voltage U ⁺ |
| U- | Maximal ($\overline{\text{U-}}$), average ($\overline{\text{U-}}$) and minimal ($\underline{\text{U-}}$) value of negative sequence voltage U ⁻ |
| U0 | Maximal ($\overline{\text{U0}}$), average ($\overline{\text{U0}}$) and minimal ($\underline{\text{U0}}$) value of zero sequence voltage U ⁰ |
| I+ | Maximal ($\overline{\text{I+}}$), average ($\overline{\text{I+}}$) and minimal ($\underline{\text{I+}}$) value of positive sequence current I ⁺ |
| I- | Maximal ($\overline{\text{I-}}$), average ($\overline{\text{I-}}$) and minimal ($\underline{\text{I-}}$) value of negative sequence current I ⁻ |
| I0 | Maximal ($\overline{\text{I0}}$), average ($\overline{\text{I0}}$) and minimal ($\underline{\text{I0}}$) value of zero sequence current I ⁰ |

Table 40: Keys in Unbalance trend screens

| | | |
|------------|--|--|
| F2 | U+ U- U0 I+ I- I0 u+ u0 i+ i0 | Shows selected voltage and current unbalance measurement (U ⁺ , U ⁻ , U ⁰ , I ⁺ , I ⁻ , I ⁰ , u ⁺ , u ⁰ , i ⁺ , i ⁰). |
| | METER | Switches to PHASE DIAGRAM view. |
| F4 | UNBAL. | Switches to UNBALANCE DIAGRAM view. |
| | TREND | Switches to TREND view (available only during recording). |
| | | Moves cursor and selects time interval (IP) for observation. |
| ESC | | Returns to the "MEASUREMENTS" submenu. |

3.11 Temperature

MI 2893/MI 2892/MI 2885 instruments are capable of measuring and recording temperature with Temperature probe A 1354. Temperature is expressed in both units, Celsius and Fahrenheit degrees. See following sections for instructions how to start recording. In order to learn how to set up neutral clamp input with the temperature sensor, see section 4.2.4.

3.11.1 Meter

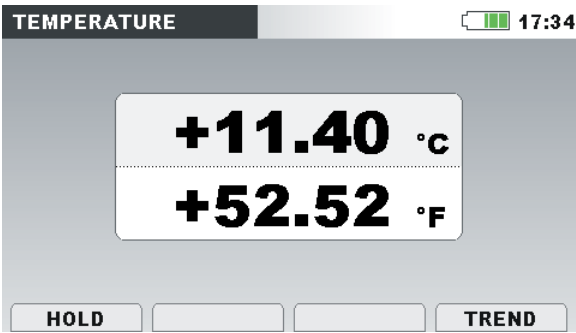


Figure 49: Temperature meter screen

Table 41: Instrument screen symbols and abbreviations

| | |
|----|---|
| °C | Current temperature in Celsius degrees |
| °F | Current temperature in Fahrenheit degrees |

Table 42: Keys in Temperature meter screen

| | | |
|--|--------------|--|
| | HOLD | Holds measurement on display. Hold clock time will be displayed in the right top corner. |
| | RUN | Runs held measurement. |
| | METER | Switches to METER view. |
| | TREND | Switches to TREND view (available only during recording). |
| | | Triggers Waveform snapshot. |
| | | Returns to the “MEASUREMENTS” submenu. |

3.11.2 Trend

Temperature measurement TREND can be viewed during the recording in progress. Records containing temperature measurement can be viewed from Memory list and by using PC software PowerView v3.0.

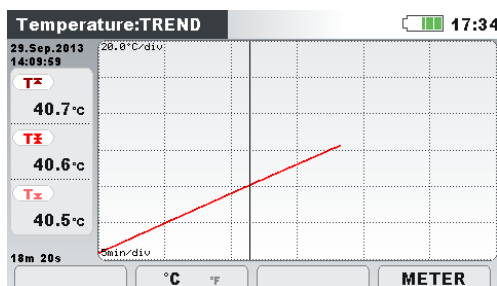


Figure 50: Temperature trend screen

Table 43: Instrument screen symbols and abbreviations

| | |
|----|---|
| T: | Maximal (▲), average (⚡) and minimal (▼) temperature value for last recorded time interval (IP) |
|----|---|

Table 44: Keys in Temperature trend screens

| | | |
|------------|--------------|---|
| F2 | °C °F | Shows temperature in Celsius degrees. |
| | °C °F | Shows temperature in Fahrenheit degrees. |
| | METER | Switches to METER view. |
| F4 | TREND | Switches to TREND view (available only during recording). |
| ESC | | Returns to the "MEASUREMENTS" submenu. |

3.12 Under deviation and over deviation

Under deviation and over deviation parameters are useful when it is important to avoid, for example, having sustained under voltages being cancelled in data by sustained over voltages. Results can be seen in a tabular (METER) or a graphical form (TREND) view - which is active only while GENERAL RECORDER is active. See section 3.14 for instructions how to start recording. In order to understand meanings of particular parameter see section 5.1.12.

3.12.1 Meter

By entering DEVIATION option from MEASUREMENTS submenu, the UNDER/OVER DEVIATION tabular screen is shown (see figure below).

| UNDER/OVER DEV. | | | |
|-----------------|-------|-------|---------|
| | L1 | L2 | L3 |
| Urms | 229.0 | 230.5 | 230.5 v |
| Uunder | 1.04 | 0.34 | 0.94 v |
| | 1.02 | 0.54 | 0.97 % |
| Uover | 1.07 | 0.25 | 0.90 v |
| | 0.78 | 1.21 | 0.60 % |








Figure 51: Under deviation and over deviation table screen

Description of symbols and abbreviations used in METER screen is shown in table below.

Table 45: Instrument screen symbols and abbreviations

| | |
|--------|--|
| Urms | True effective value $U_1, U_2, U_3, U_{12}, U_{23}, U_{31}$ |
| Uunder | Instantaneous under deviation voltage U_{Under} expressed in voltage and % of nominal voltage |
| Uover | Instantaneous over deviation voltage U_{Over} expressed in voltage and % of nominal voltage |

Table 46: Keys in Under deviation and over deviation (METER) screen

| | | |
|---|---|--|
|  | HOLD | Holds measurement on display. Hold clock time will be displayed in the right top corner. |
| | RUN | Runs held measurement. |
|  |  | Selects between trending various parameters |
| |  | Shows under/over deviations measurements for all phase voltages |
|  | METER | Switches to METER view. |
| | TREND | Switches to TREND view (available only during recording). |
|  | | Triggers Waveform snapshot. |
|  | | Returns to the "MEASUREMENTS" submenu. |

3.12.2 Trend

During active recording TREND view is available (see section 3.14 for instructions how to start recording). Under deviation and over deviation parameters can be observed by cycling function key F4 (METER -TREND).












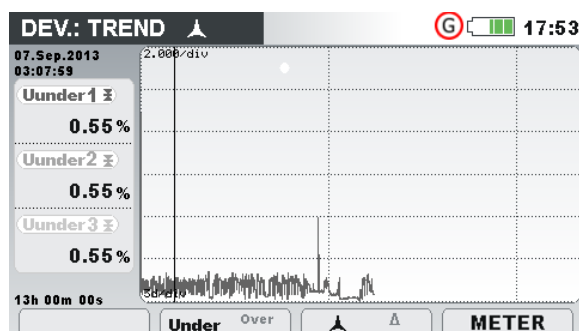




Figure 52: Under-deviation and over-deviation TREND screen

Table 47: Instrument screen symbols and abbreviations

| | |
|----------|---|
| Uunder1 | |
| Uunder2 | |
| Uunder3 | Interval average (\bar{x}) value of corresponding under deviation voltage U_{1Under} , U_{2Under} , U_{3Under} , $U_{12Under}$, $U_{23Under}$, $U_{31Under}$, expressed in % of nominal voltage. |
| Uunder12 | |
| Uunder22 | |
| Uunder31 | |
| Uover1 | |
| Uover2 | |
| Uover3 | Interval average (\bar{x}) value of corresponding over deviation voltage U_{1Over} , U_{2Over} , U_{3Over} , U_{12Over} , U_{23Over} , U_{31Over} , expressed in % of nominal voltage. |
| Uover12 | |
| Uover23 | |
| Uover31 | |

Table 48: Keys in Under deviation and Over deviation (TREND) screens

| | | |
|---|---|--|
|  |  | Selects between the following options: |
| |  | Shows under deviation trends |
| |  | Shows over deviation trends |
|  |  | Selects between trending various parameters: |
| |  | Shows trends for all phase under/over deviations |
| |  | Shows trends for all lines under/over deviations |
|  |  | Switches to METER view. |
| |  | Switches to TREND view (available only during recording). |
|  | | Moves cursor and selects time interval (IP) for observation. |
|  | | Returns to the “MEASUREMENTS” submenu. |

3.13 Signalling

Mains signalling voltage, called “ripple control signal” in certain applications, is a burst of signals, often applied at a non-harmonic frequency, that remotely control industrial equipment, revenue meters, and other devices. Before observing signalling measurements, user should set-up signalling frequencies in signalling setup menu (see section 3.23.4).

Results can be seen in a tabular (METER) or a graphical form (TREND) - which is active only while GENERAL RECORDER is active. See section 3.14 for instructions how to start recording. In order to understand meanings of particular parameter see section 5.1.9.

3.13.1 Meter

By entering SIGNALLING option from MEASUREMENTS submenu, the SIGNALLING tabular screen is shown (see figure below).

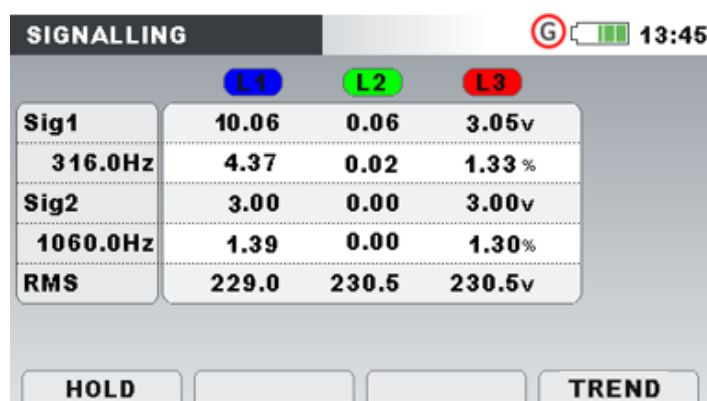


Figure 53: Signalling meter screen

Description of symbols and abbreviations used in METER screen is shown in table below.

Table 49: Instrument screen symbols and abbreviations

| | |
|-------------------|---|
| Sig1 316.0 Hz | True effective value signal voltage (U_{Sig1} , U_{Sig2} , U_{Sig3} , U_{Sig12} , U_{Sig23} , U_{Sig31}) for a user-specified carrier frequency (316.0 Hz in shown example) expressed in Volts or percent of fundamental voltage |
| Sig2 1060.0 Hz | True effective value signal voltage (U_{Sig1} , U_{Sig2} , U_{Sig3} , U_{Sig12} , U_{Sig23} , U_{Sig31}) for a user-specified carrier frequency (1060.0 Hz in shown example) expressed in Volts or percent of fundamental voltage |
| RMS | True effective value of phase or phase to phase voltage U_{Rms} (U_1 , U_2 , U_3 , U_{12} , U_{23} , U_{31}) |

Table 50: Keys in Signalling (METER) screen

| | | |
|--|--------------|--|
| | HOLD | Holds measurement on display. Hold clock time will be displayed in the right top corner. |
| | RUN | Runs held measurement. |
| | METER | Switches to METER view. |
| | TREND | Switches to TREND view (available only during recording). |
| | TABLE | Switches to TABLE view (available only during recording). |
| | | Triggers Waveform snapshot. |
| | | Returns to the "MEASUREMENTS" submenu. |

3.13.2 Trend

During active recording TREND view is available (see section 3.14 for instructions how to start recording). Signalling parameters can be observed by cycling function key F4 (METER -TREND).

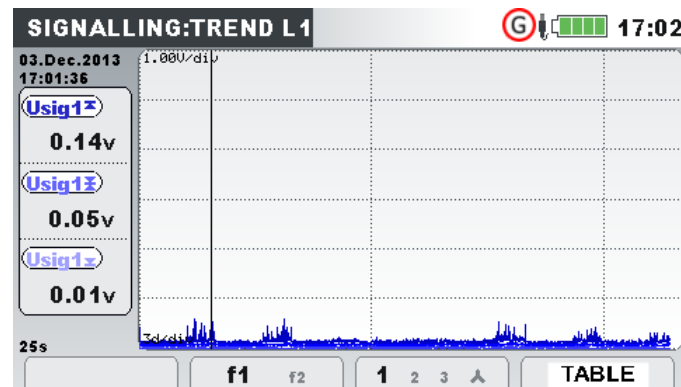


Figure 54: Signalling trend screen

Table 51: Instrument screen symbols and abbreviations


| | |
|--|--|
| Usig1, Usig2, Usig3, Usig12, Usig23, Usig31 | Maximal (▲), average (⚡) and minimal (▼) value of (U _{Sig1} , U _{Sig2} , U _{Sig3} , U _{Sig12} , U _{Sig23} , U _{Sig31}) signal voltage for a user-specified Sig1/Sig2 frequency (Sig1 = 316.0 Hz / Sig2 = 1060.0 Hz in shown example). |
| 14.Nov.2013 13:50:00 | Timestamp of interval (IP) selected by cursor. |
| 22h 25m 00s | Current GENERAL RECORDER time (Days hours: min: sec) |

Table 52: Keys in Signalling (TREND) screen

| | | |
|-----|------------|--|
| F2 | f1 f2 | Selects between the following options: |
| | f1 f2 | Shows signal voltage for a user-specified signalling frequency (Sig1). |
| | f1 f2 | Shows signal voltage for a user-specified signalling frequency (Sig2). |
| F3 | 1 2 3 ▲ | Selects between trending various parameters: |
| | 1 2 3 ▲ | Shows signalling for phase 1 |
| | 1 2 3 ▲ | Shows signalling for phase 2 |
| | 1 2 3 ▲ | Shows signalling for phase 3 |
| | 1 2 3 ▲ | Shows signalling for all phases (average only) |
| | 12 23 31 Δ | Shows signalling for phase-to-phase voltage L12. |
| | 12 23 31 Δ | Shows signalling for phase-to-phase voltage L23. |
| | 12 23 31 Δ | Shows signalling for phase-to-phase voltage L31. |
| F4 | 12 23 31 Δ | Shows signalling for all phase-to-phase voltages (average only). |
| | METER | Switches to METER view. |
| | TREND | Switches to TREND view (available only during recording). |
| | TABLE | Switches to TABLE view (available only during recording). |
| | | Moves cursor and select time interval (IP) for observation. |
| ESC | | Returns to the "MEASUREMENTS" submenu. |

3.13.3 Table

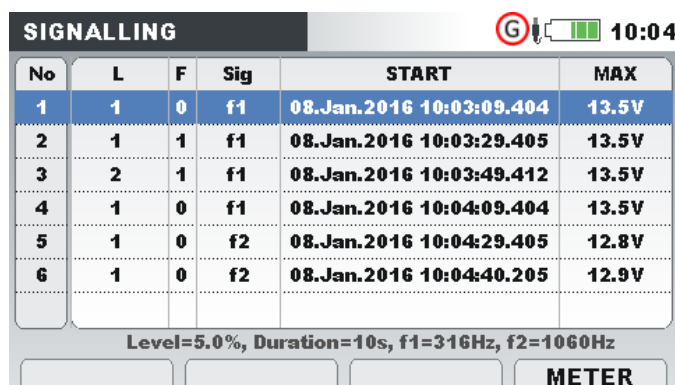During active recording TABLE view is available (see section 3.14 for instructions how to start recording), by cycling function key F4 (METER –TREND - TABLE). Signalling events can be here observed as required by standard IEC 61000-4-30. For each signalling event instrument capture waveform which can be observed in PowerView.



| No | L | F | Sig | START | MAX |
|----|---|---|-----|--------------------------|-------|
| 1 | 1 | 0 | f1 | 08.Jan.2016 10:03:09.404 | 13.5V |
| 2 | 1 | 1 | f1 | 08.Jan.2016 10:03:29.405 | 13.5V |
| 3 | 2 | 1 | f1 | 08.Jan.2016 10:03:49.412 | 13.5V |
| 4 | 1 | 0 | f1 | 08.Jan.2016 10:04:09.404 | 13.5V |
| 5 | 1 | 0 | f2 | 08.Jan.2016 10:04:29.405 | 12.8V |
| 6 | 1 | 0 | f2 | 08.Jan.2016 10:04:40.205 | 12.9V |

Level=5.0%, Duration=10s, f1=316Hz, f2=1060Hz


METER

Figure 55: Signalling table screen

Table 53: Instrument screen symbols and abbreviations

| | |
|----------|--|
| No | Signalling event number |
| L | Phases on which signalling event occurred |
| F | Flag indication <ul style="list-style-type: none"> 0 – none of intervals are flagged 1 – at least one of intervals inside recorded signalling is flagged |
| Sig | Frequency on which signalling occurred, defined as “Sign. 1” frequency (f1) and “Sign. 2” frequency (f2) in SIGNALLING SETUP menu. See 3.23.4 for details. |
| START | Time when observed Signalling voltage crosses threshold boundary. |
| MAX | Maximal voltage level recorder captured during signalling events |
| Level | Threshold level in % of nominal voltage Un, defined in SIGNALLING SETUP menu. See 3.23.4 for details. |
| Duration | Duration of captured waveform, defined in SIGNALLING SETUP menu. See 3.23.4 for details. |
| f1 | 1 st observed signalling frequency. |
| f2 | 2 nd observed signalling frequency. |

Table 54: Keys in Signalling (TABLE) screen

| | |
|---|---|
| METER | Switches to METER view. |
| TREND | Switches to TREND view (available only during recording). |
| F4 | Switches to TABLE view (available only during recording). |
|  | Moves cursor through signalling table. |

ESC

Returns to the "MEASUREMENTS" submenu.

3.14 General Recorder





MI 2893/MI 2892/MI 2885 has ability to record measured data in the background. By entering GENERAL RECORDER option from RECORDERS submenu, recorder parameters can be customized in order to meet criteria about interval, start time and duration for the recording campaign. General recorder setup screen is shown below:





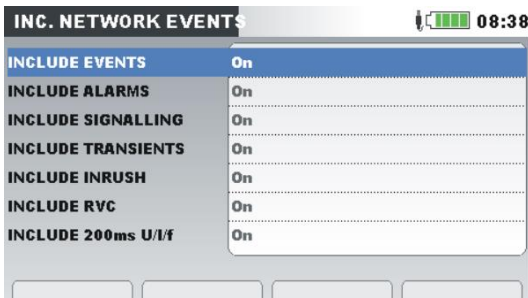


Figure 56: General recorder setup screen

Description of General recorder settings is given in the following table:

Table 55: General recorder settings description and screen symbols

| | |
|---|---|
|  | General recorder is active, waiting for start condition to be met. After start conditions are met (defined start time), instrument will capture waveform snapshot and start (activate) General recorder. |
|  | <p>General recorder is active, recording in progress</p> <p>Note: Recorder will run until one of the following end conditions is met:</p> <ul style="list-style-type: none"> • STOP key was pressed by user • Given Duration criteria was met • Maximal record length was reached • SD CARD is full <p>Note: If recorder start time is not explicitly given, recorder start depends on Real Time clock multiple of interval. For example: recorder is activated at 12:12 with 5-minute interval. Recorder will actually start at 12:15.</p> <p>Note: If during record session instrument batteries are drained, due to long interruption for example, instrument will shut down automatically. After power restauration, it will automatically start new recording session.</p> |
|  | Capturing of predefined Alarms under progress |
|  | Capturing of predefined Events under progress |

| | |
|---|---|
|  | Capturing of Inrush under progress |
|  | Capturing of RVC under progress |
|  | Capturing of Signalling under progress |
|  | Capturing of Transient under progress |
| Profile | <p>Select recording profile:</p> <ul style="list-style-type: none"> Standard profile. Include all measurement in record. Suitable for most PQ measurement Limited profile. Include limited set of measurements (most important). Suitable for long records with short interval (1-week record with 1 second interval). See section 4.4 for details. |
| Interval | <p>Define the measured interval. Available settings are from 1 second to 120 minutes.</p> <p>Available intervals: 1 sec, 3 sec, 5 sec, 10 sec, 1 min, 2 min, 5 min, 10 min, 15 min, 30 min, 60 min, 120 min</p> <p>Note: In case, that measured period is shorter than 10 seconds, than we not suggest to simultaneously detection of Event Waveforms and Transient, which could slowdown the analyser and may cause a problem saving data to the SD card.</p> |
| Start time | <p>Define start time of recording:</p> <ul style="list-style-type: none"> Manual, pressing function key F1 At the given time and date. |
| Duration | <p>Define recording duration. General recorder will record measurement for given time duration:</p> <ul style="list-style-type: none"> Manual, 5, 10, 20, 30 minutes 1, 6 or 12 hours, or 1, 2, 3, 7, 15, 30, 60 days. <p>Note: number of available duration intervals is related to the recorder period.</p> |
| Included | <p>Define network events, which are captured and registered during recorder session – ON/OFF selection:</p> <p>MI 2893:</p>  |

MI 2892/MI 2885:



**Recommended/maximal
record duration:**

Show recommended and maximal Duration parameter for given recording Interval.

Available memory

Show SD card free space

Table 56: Keys in General recorder setup screen

F1

START
STOP

Starts the recorder.
Stops the recorder.

F2

HELP

Show help screen where it's explained which measurements will be recorded with Limited and Standard profile.

| RECORD PROFILE | Limited | Standard |
|----------------|-----------|----------|
| U,I,f | ✓ | ✓ |
| P,Q,S, ENERGY | AVG | ✓ |
| FREQUENCY 10s | X | ✓ |
| FLICKERS | ✓ | ✓ |
| UNBALANCE | ✓ | ✓ |
| HARMONICS | 1-50, AVG | ✓ |
| INTERHARM. | X | ✓ |
| TEMPERATURE | ✓ | ✓ |
| SIGNALLING | ✓ | ✓ |
| UNDER/OVER | ✓ | ✓ |

See section 4.4 for details.

F3

CONFIG

Shortcut to Connection setup. See 4.2 for details.

F4

CHECK C.

 
Check connection settings. See 3.23.1 for details.

ENTER


Enters recorder starting date/time setup.



Keys in Set start time window:



Selects parameter to be changed.

 




Modifies parameter.

ENTER

Confirms selected option.

 ESC

Exits Set start time window without modifications.

| | |
|---|-------------------------------------|
|  | Selects parameter to be changed. |
|  | Modifies parameter. |
|  | Returns to the "RECORDERS" submenu. |

3.15 Waveform/Inrush recorder

Waveform recording is a powerful tool for troubleshooting and capturing current and voltage waveforms and inrushes. Waveform recorder saves a defined number of periods of voltage and current on a trigger occurrence. Each recording consists of pre-trigger interval (before trigger) and post-trigger interval (after trigger).

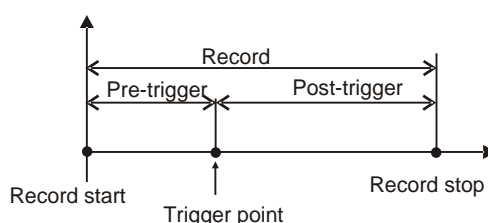


Figure 57: Triggering in waveform record

3.15.1 Setup

Waveform recorder setup menu is available from:

MAIN MENU → MEASUREMENT SETUP → WAVE.REC.SETUP



or

MAIN MENU → RECORDERS → WAVEFORM REC → F3 (SETUP)



Figure 58: Waveform recorder setup screen

Table 57: Waveform recorder settings description and screen symbols

| | |
|---|--|
|  | Waveform recorder is active, waiting for trigger (presented only in case, when Waveform recorder is started) |
|  | Waveform recorder is active, recording in progress (presented only in case, when Waveform recorder is started) |
| Trigger | Trigger source set up: <ul style="list-style-type: none"> • Events – triggered by voltage event (see 3.23.2); • Alarms – triggered by alarm activation (see 3.23.3); |

| | |
|-------------------|--|
| | <ul style="list-style-type: none"> • Events & Alarms – triggered by alarm or event; • Level U – triggered by voltage level; • Level I – triggered by current level (inrush). • Interval – periodical trigger for given time period (each 10 minutes for example). Interval between two-time triggered waveforms in Interval trigger type |
| Level* | Voltage or current level in % of nominal voltage or current and in (V or A), which will trigger recording |
| Slope* | <ul style="list-style-type: none"> • Rise – triggering will occur only if voltage or current rise above given level • Fall - triggering will occur only if voltage or current fall below given level • Any – triggering will occur if voltage or current rise above or fall below given level |
| Duration | Record length. |
| Pretrigger | Recorded interval before triggering occurs. |
| Store mode | Store mode setup: <ul style="list-style-type: none"> • Single – waveform recording ends after first trigger; • Continuous (Max. 1500 record)– consecutive waveform recording until user stops the measurement or instrument runs out of storage memory. Every consecutive waveform recording will be treated as a separate record. By default, 200 records can be recorded. This value can be changed, if necessary. More than 200 records can slow down the instrument. |

* Available only if Level U or Level I triggering is selected.

Table 58: Keys in Waveform recorder setup screen

Show help screens. See 5.1.19 for details.






F2

HELP


F3

CONFIG

Shortcut to CONNECTION SETUP menu. See 3.23.1 for details.

| | | |
|---|-----------------|--|
|  | CHECK C. | Check connection settings. See 3.23.1 for details. |
|  | | Selects parameter to be changed. |
|  | | Modifies parameter. |
|  | | Enter into submenu (↵). |
|  | | Returns to the submenu. |

3.15.2 Capturing waveform

After waveform recorder is started, instrument waits for trigger occurrence. This can be seen by observing status bar, where icon  is present. If trigger conditions are met, recording will be started.

Following screen opens when a user switches to WAVEFORM REC. view.



Figure 59: Waveform recorder capture screen




| | | |
|---|--------------|--|
|  | START | Starts waveform recording. |
|  | SETUP | Shortcut to WAVE. REC. SETUP menu. See 3.23.1 for details. |
|  | | Returns to the "WAVEFORM REC." menu. |



Figure 60: Waveform recorder screen

| | | |
|------------|-------------|---|
| F1 | STOP | Stops waveform recording. Note: If user forces waveform recorder to stop before trigger occurs, no data will be recorded. Data recording occurs only when trigger is activated. |
| F2 | TRIG | Manually generates trigger condition |
| ESC | | Returns to the "WAVEFORM REC." menu. |

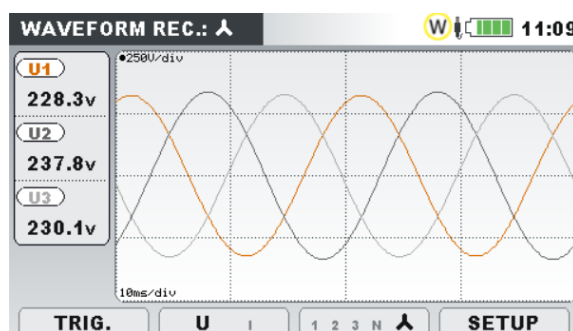




Figure 61: Waveform recorder scope screen

Table 59: Instrument screen symbols and abbreviations

| | |
|----------------|--|
| | Waveform recorder is active, waiting for trigger |
| | Waveform recorder is active, recording in progress |
| U1, U2, U3, Un | True effective value of phase voltage: U_{1Rms} , U_{2Rms} , U_{3Rms} , U_{NRms} |
| U12, U23, U31 | True effective value of phase-to-phase voltage: U_{12Rms} , U_{23Rms} , U_{31Rms} |
| I1, I2, I3, In | True effective value of current: I_{1Rms} , I_{2Rms} , I_{3Rms} , I_{NRms} |

Table 60: Keys in Waveform recorder capture screen

| | | |
|-----------|-----------------------------|--|
| F1 | TRIG. | Manually generates trigger condition (Active only if recording is in progress). |
| F2 | U U,I U/I | Selects which waveforms to show: Shows voltage waveform. |
| | U I U,I U/I | Shows current waveform. |
| | U U,I U/I | Shows voltage and current waveforms on single graph. |
| | U U,I U/I | Shows voltage and current waveforms on separate graphs. |
| F3 | 1 2 3 N ▲ | Selects between phase, neutral, all-phases and line view: Shows waveforms for phase L1. |
| | 1 2 3 N ▲ | Shows waveforms for phase L2. |
| | 1 2 3 N ▲ | Shows waveforms for phase L3. |
| | 1 2 3 N ▲ | Shows waveforms for neutral channel. |
| | 1 2 3 N ▲ | Shows waveforms for all phases. |
| | 12 23 31 ▲ | Shows waveforms for phase-to-phase voltage L12. |
| | 12 23 31 ▲ | Shows waveforms for phase-to-phase voltage L23. |
| | 12 23 31 ▲ | Shows waveforms for phase-to-phase voltage L31. |
| | 12 23 31 ▲ | Shows waveforms for all phase-to-phase voltages. |

| | | |
|---|--------------|--|
| F4 | SETUP | Switches to SETUP view. (Active only if recording in progress). |
| ENTER | | Selects which waveform to zoom (only in U,I or U/I). |
|  | | Sets vertical zoom. |
|  | | Sets horizontal zoom. |
| ESC | | Returns to the "WAVEFORM RECORDER" setup screen. |

3.15.3 Captured waveform

Captured waveforms can be viewed from the Memory list menu.

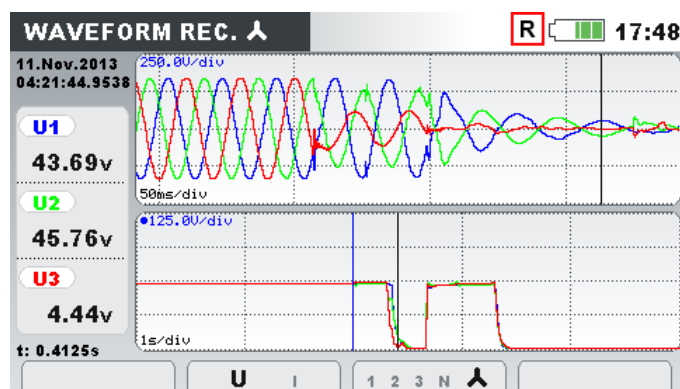



 
 
 
 
 
 

 
 




Figure 62: Captured waveform recorder screen

Table 61: Instrument screen symbols and abbreviations

| | |
|----------------------------|---|
| R | Memory list recall. Shown screen is recalled from memory |
| t: | Cursor position in seconds (regarding to trigger time – blue line on graph) |
| u1(t), u2(t), u3(t), un(t) | Samples value of phase voltages U_1, U_2, U_3, U_N . |
| u12(t), u23(t), u31(t) | Samples value of phase-to-phase voltages U_{12}, U_{23}, U_{31} . |
| i1(t), i2(t), i3(t), in(t) | Samples value of phase currents I_1, I_2, I_3, I_N . |
| U1, U2, U3, Un | True effective half cycle phase voltage $U_{Rms(1/2)}$ |
| U12, U23, U31 | True effective half cycle phase to phase voltage $U_{Rms(1/2)}$ |
| I1, I2, I3, In | True effective half cycle value $I_{Rms(1/2)}$ |

Table 62: Keys in captured waveform recorder screens

| | | |
|-----------|--------------------|--|
| | | Selects between the following options: |
| F2 | U I u,i u/i | Shows voltage waveform. |
| | u I u,i u/i | Shows current waveform. |
| | u I U,I u/i | Shows voltage and current waveforms (single mode). |
| | u I u,i U/I | Shows voltage and current waveforms (dual mode). |

| | | |
|---|--|--|
| | | Selects between phase, neutral, all-phases and view: |
|  |  | Shows waveforms for phase L1. |
| |  | Shows waveforms for phase L2. |
| |  | Shows waveforms for phase L3. |
| |  | Shows waveforms for neutral channel. |
| |  | Shows all phases waveforms. |
| |  | Shows waveforms for phase-to-phase voltage L12. |
| |  | Shows waveforms for phase-to-phase voltage L23. |
| |  | Shows waveforms for phase-to-phase voltage L31. |
| |  | Shows all phase-to-phase waveforms. |
| <hr/> | | |
| |  | Sets vertical zoom. |
| <hr/> | | |
| |  | Moves cursor. |
| <hr/> | | |
| |  | Toggles between sample value and true effective half cycle value at cursor position. Toggles cursor between voltage and current (only in U,I or U/I). |
| <hr/> | | |
| |  | Returns to the "MEMORY LIST" submenu. |
| <hr/> | | |

3.16 Transient recorder

*Transient is a term for **short, highly damped** momentary voltage or current disturbance.*

Table 63: Transients on the low voltage network

| Rise time | Cause |
|--------------------------|--|
| >100 μ s | <ul style="list-style-type: none"> • Operation of current-limiting fuses (amplitude up to 1 kV – 2 kV) • Activation of capacitors banks for power factor corrections (amplitude up to 2 -3 times of nominal peak voltage) • Transference of switching transient over voltages from MV to LV across MV/LV transformers by electromagnetic coupling (amplitude up to 1 kV) |
| 1 μ s to 100 μ s | <ul style="list-style-type: none"> • Direct lightning stroke on the LV line conductors (amplitude up to 20 kV) • Induction coupling of a lightning stroke in a vicinity of an L line (amplitude up to 6 kV, high energy levels) • Resistive coupling associated with lightning currents flowing in the common earth paths of network (amplitude up to 10 kV) • Transference of transients from MV to LV by capacitive transformer coupling (amplitude up to 6 kV) • Operation of fuses (amplitude up to 2 kV, low energy content generally) |
| <1 μ s | <ul style="list-style-type: none"> • Local load switching of small inductive currents and short wiring (amplitude up to 2 kV) • Fast transients due to switching in LV by air-gap switches |

3.16.1 Power Master XT - MI 2893

A transient recording is recording with the 1 MSamples/sec sampling rate. The principle of measurement is similar to waveform recording, but with higher sampling rate. In contrary to waveform recording, where recording is triggered based on RMS values, trigger in transient recorder is based on sample values.

Notes:

- To detect voltage transients at 3W connection, GND terminal should be connected according the proposed connection. Trigger selection should be selected as "GND";
- To detect voltage transients at Open Delta connection, GND terminal should be connected according the proposed connection. Trigger selection should be selected as "GND". For detecting transients in L2 current, also L2 current clamps should be connected;
- Transient measurements (high frequency events) on the secondary side of transformers (current and voltage transient measurements) could be suppressed and/or distorted due to narrow frequency response of transformers. Same effect could be also present when measuring transients with the flex current clamps;
- For proper current transient measurements, it is obligatory to use fixed current range.

3.16.1.1 Setup

Transient recorder setup menu is available from:

MAIN MENU → MEASUREMENT SETUP → TRANSIENT SETUP

or

MAIN MENU → RECORDERS → TRANSIENT REC. → F3 (SETUP)

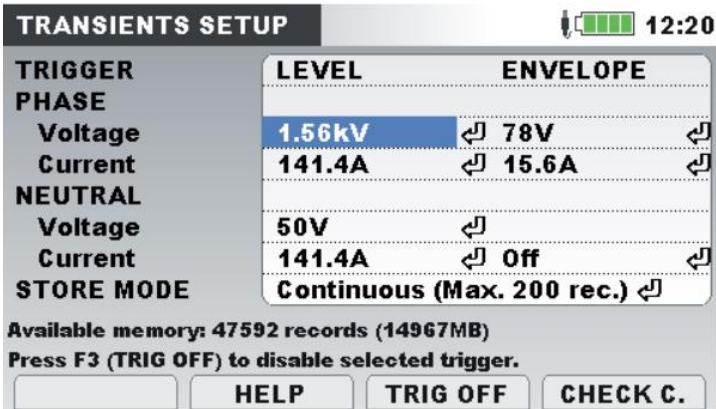
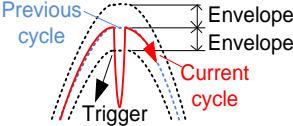
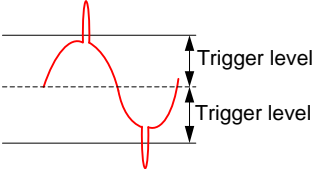


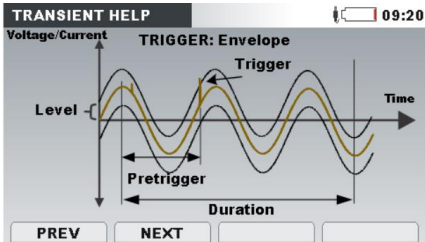

Figure 63: Transient recorder setup screen – MI 2893



Table 64: Transient recorder settings description and screen symbols

| | |
|--|--|
| | <p>Envelope: Trigger value is based on envelope within voltage/current that is expected. As reference, voltage/current waveform from previous cycle is taken. If current sample is not within envelope, triggering will occur. See 5.1.20 for details.</p> <p>Phase voltage limits: Minimum value: $0.0055 \cdot U_{nom} \cdot \sqrt{2}$ Maximum value: $1.1 \cdot U_{nom} \cdot \sqrt{2}$</p> <p>Neutral voltage limits → not available</p> <p>Phase/Neutral current limits: Minimum value: $0.0055 \cdot I_{nom} \cdot \sqrt{2}$ Maximum value: $1.1 \cdot I_{nom} \cdot \sqrt{2}$</p> <p>Trigger</p>  <p>Level: Trigger will occur if any sample within period is greater than defined absolute trigger level. Level is defined as absolute expected monitoring value. See 5.1.20 for details.</p>  <p>Phase voltage limits: Minimum value: U_{nom} Maximum value: $5500 \cdot VT \text{ ratio}$</p> <p>Neutral voltage limits:</p> |
|--|--|

| | |
|--------------|---|
| | <p>Minimum value: $0,0055 * U_{nom} * \sqrt{2}$ Maximum value: 1 V</p> <p>Phase/Neutral current limits: Minimum value: $0.1 * \sqrt{2} * I_{nom}$ Maximum value: $1.5 * \sqrt{2} * I_{nom}$</p> |
| Trigger type | <p>PHASE: U: Trigger on transients at active voltage (phase/line) channels I: Trigger on transients at active phase current channels</p> <p>NEUTRAL: Un: Trigger on transients at Ground to Neutral voltage channel In: Trigger on transients at Neutral current channel</p> <p>Note: Minimum current trigger selection: $10\% * I_{nom} * \sqrt{2}$ Maximum current trigger selection: $150\% * I_{nom} * \sqrt{2}$</p> |
| Store mode | <p>Store mode setup:</p> <ul style="list-style-type: none"> • Single – transient recording ends after first trigger • Continuous (Max. 1500 rec.) – consecutive transient recording until user stops the measurement or instrument runs out of storage memory. Every consecutive transient recording will be treated as a separate record. By default, 200 records can be recorded. This value can be changed, if necessary. More than 200 records can slow down the instrument. |

Table 65: Keys in Transient recorder setup screen

| | | |
|---|----------|---|
| | | <p>Show triggering help screens (valid for voltage and current) See 5.1.20 for details.</p>  |
| F2 | HELP | |
| F3 | TRIG OFF | Deleting the trigger selection |
| F4 | CHECK C. | Check connection settings. See 3.23.1 for details. |
|  | | Selects parameter to be changed. |

| | |
|---|-------------------------|
|  | Modifies parameter. |
|  | Enter into submenu (↵). |
|  | Returns to the submenu. |

3.16.2Power Master/Master Q4 - MI 2892/MI 2885

A transient recording is recording with the 49 kSamples/sec sampling rate.

3.16.2.1 Setup

Transient recorder setup menu is available from:
MAIN MENU → MEASUREMENT SETUP → TRANSIENT SETUP
or
MAIN MENU → RECORDERS → TRANSIENT REC. → F3 (SETUP)

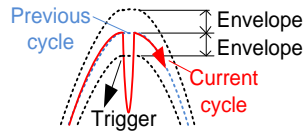


Figure 64: Transient recorder setup screen – MI 2892/MI 2885


Note: only single trigger could be selected. Selecting the trigger, one will automatically deselect other ones.

Table 66: Transient recorder settings description and screen symbols

| | |
|---------|--|
| | Envelope: Trigger value is based on envelope within voltage/current that is expected. As reference, voltage/current waveform from previous cycle is taken. If current sample is not within envelope, triggering will occur. See 5.1.20 for details. |
| Trigger | Phase voltage limits: Minimum value: $0.0055 * U_{nom} * \sqrt{2}$ Maximum value: $1.1 * U_{nom} * \sqrt{2}$ |
| | Neutral voltage limits → not available |
| | Phase/Neutral current limits: Minimum value: $0.0055 * I_{nom} * \sqrt{2}$ Maximum value: $1.1 * I_{nom} * \sqrt{2}$ |
| | |



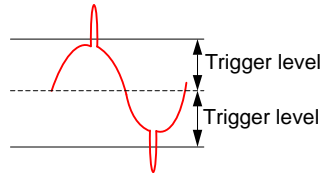Level: Trigger will occur if any sample within period is greater than defined absolute trigger level. Level is defined as absolute expected monitoring value. See 5.1.20 for details.



Phase voltage limits:

Minimum value: U_{nom}

Maximum value: $5500 * VT \text{ ratio}$

Neutral voltage limits:

Minimum value: $0,0055 * U_{nom} * \sqrt{2}$

Maximum value: 1 V



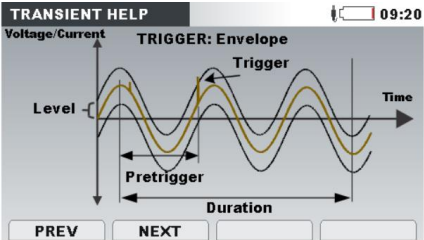





 


Phase/Neutral current limits:

Minimum value: $0.1 * \sqrt{2} * I_{nom}$


Maximum value: $1.5 * \sqrt{2} * I_{nom}$

| | |
|--------------|---|
| Trigger type | PHASE: |
| | U: Trigger on transients at active voltage (phase/line) channels |
| | I: Trigger on transients at active phase current channels |
| Trigger type | NEUTRAL: |
| | Un: Trigger on transients at Ground to Neutral voltage channel |
| | In: Trigger on transients at Neutral current channel |
| Store mode | Note: |
| | Minimum current trigger selection: $10\% * I_{nom} * \sqrt{2}$ |
| | Maximum current trigger selection: $150\% * I_{nom} * \sqrt{2}$ |
| Store mode | Store mode setup: |
| | <ul style="list-style-type: none"> • Single – transient recording ends after first trigger • Continuous (Max. 1500 rec.) – consecutive transient recording until user stops the measurement or instrument runs out of storage memory. Every consecutive transient recording will be treated as a separate record. |
| | By default, 200 records can be recorded. This value can be changed, if necessary. More than 200 records can slow down the instrument. |
| Duration | 1, 2, 5, 10, 20, 50 periods (number of capturing periods) |
| Pretrigger | 0, 1, 2, 5, 10, 20 periods (number of capturing periods before trigger) |

Table 67: Keys in Transient recorder setup screen

| | | |
|---|---|--|
| | | Show triggering help screens (valid for voltage and current) See 5.1.20 for details. |
|  |  |  |
|  |  | Deleting the trigger selection |
|  |  | Check connection settings. See 3.23.1 for details. |
|  | Selects parameter to be changed. | |
|  | Modifies parameter. | |
|  | Enter into submenu (↵). | |
|  | Returns to the submenu. | |

3.16.3 Capturing transients

After transient recorder is started, instrument waits for trigger occurrence. This can be seen by observing status bar, where icon  is present. If trigger conditions are met, recording will be started.

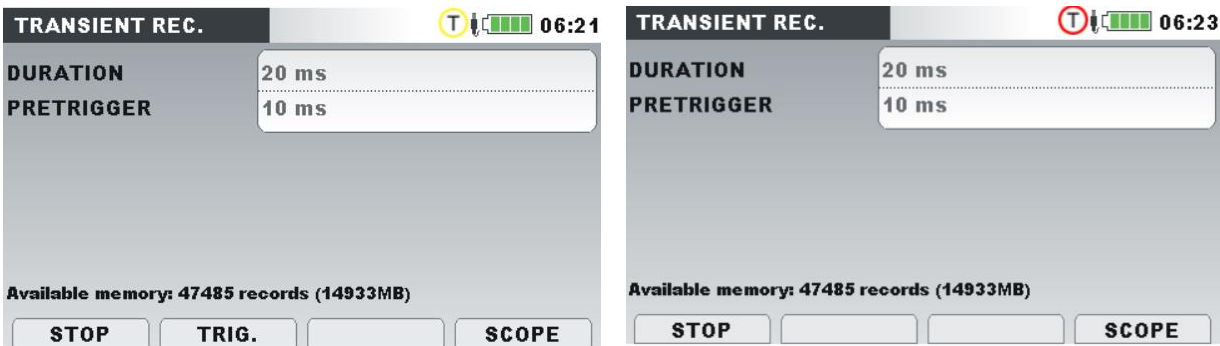


Figure 65: Transient recorder capture screen (waiting phase/recording) – MI 2893

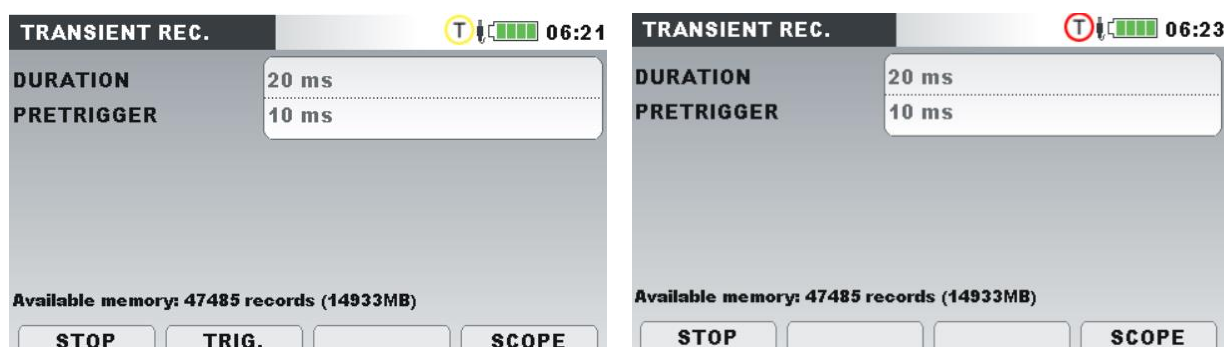


Figure 66: Transient recorder capture screen (waiting phase/recording) – MI 2892/MI 2885

Table 68: Instrument screen symbols and abbreviations

| | |
|----------------|--|
| | Transient recorder is active, waiting for trigger |
| | Transient recorder is active, recording in progress |
| U1, U2, U3, Un | True 1-cycle effective value of phase voltage: U_{1Rms} , U_{2Rms} , U_{3Rms} , U_{NRms} |
| U12, U23, U31 | True 1-cycle effective value of phase-to-phase voltage: U_{12Rms} , U_{23Rms} , U_{31Rms} |
| I1, I2, I3, In | True 1-cycle effective value of current: I_{1Rms} , I_{2Rms} , I_{3Rms} , I_{NRms} |

Table 69: Keys in Transient recorder capture screen

| | | |
|--|----------------------------------|--|
| | TRIG. | Manually generates trigger condition (Active only if recording is in progress). |
| | | Selects which waveforms to show: Shows voltage waveform. Shows current waveform. Shows voltage and current waveforms on single graph. Shows voltage and current waveforms on separate graphs. |
| | | Selects between phase, neutral, all-phases and line view: Shows waveforms for phase L1. Shows waveforms for phase L2. Shows waveforms for phase L3. Shows waveforms for neutral channel. Shows waveforms for all phases. Shows waveforms for phase-to-phase voltage L12. Shows waveforms for phase-to-phase voltage L23. Shows waveforms for phase-to-phase voltage L31. Shows waveforms for all phase-to-phase voltages. |
| | SETUP | Switches to SETUP view (Active only if recording in progress). |
| | | Sets vertical zoom. |

ENTER

Selects which waveform to zoom (only in U,I or U/I).

ESC

Returns to the "TRANSIENT RECORDER" screen.

3.16.4 Captured transients

Captured transient records can be viewed from the Memory list where captured waveforms can be analysed. Trigger occurrence is marked with the blue line, while cursor position line is marked in black.

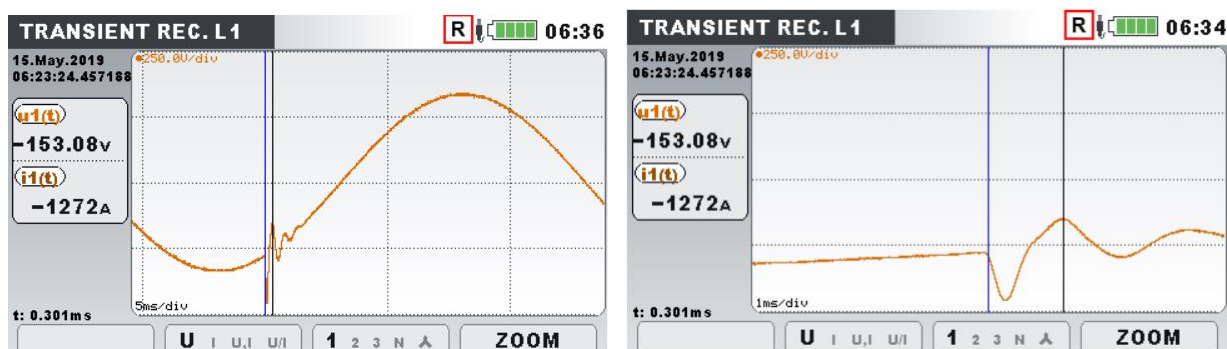


Figure 67: Captured transient recorder screen

Table 70: Instrument screen symbols and abbreviations

| | |
|----------------------------|---|
| R | Memory list recall. Shown screen is recalled from memory |
| t: | Cursor position regarding to trigger time (blue line on graph) |
| u1(t), u2(t), u3(t), un(t) | Samples value of phase voltages U_1 , U_2 , U_3 , U_N . |
| u12(t), u23(t), u31(t) | Samples value of phase-to-phase voltages U_{12} , U_{23} , U_{31} . |
| i1(t), i2(t), i3(t), in(t) | Samples value of phase currents I_1 , I_2 , I_3 , I_N . |

Table 71: Keys in captured transient recorder screens

| | | |
|-----------|--|--|
| F2 | U U,I U/I | Selects between the following options: |
| | U U,I U/I | Shows voltage waveform. |
| | U U,I U/I | Shows current waveform. |
| | U U,I U/I | Shows voltage and current waveforms (single mode). |
| F3 | U U,I U/I | Shows voltage and current waveforms (dual mode). |
| | 1 2 3 N ▲ | Selects between phase, neutral, all-phases and view: |
| | 1 2 3 N ▲ | Shows waveforms for phase L1. |
| | 1 2 3 N ▲ | Shows waveforms for phase L2. |
| | 1 2 3 N ▲ | Shows waveforms for phase L3. |
| | 1 2 3 N ▲ | Shows waveforms for neutral channel. |
| F3 | 1 2 3 N ▲ | Shows waveforms for all phases. |
| | 12 23 31 Δ | Shows waveforms for phase-to-phase voltage L12. |

| | |
|--|--|
| | Shows waveforms for phase-to-phase voltage L23. |
| | Shows waveforms for phase-to-phase voltage L31. |
| | Shows waveforms for all phase-to-phase voltages. |
| | ZOOM Sets horizontal zoom |
| | Sets vertical zoom. |
| | Moves cursor. |
| | Toggles cursor between voltage and current (only in U,I or U/I). |
| | Returns to the “MEMORY LIST” submenu. |

3.17 Events table

In this table captured voltage dips, swells and interrupts are shown. Note that events appear in the table after finishing, when voltage return to the normal value. All events can be grouped according to IEC 61000-4-30. Additionally, for troubleshooting purposes events can be separated by phase. This is toggled by pressing function key F1. Event table is active only during general recording.

3.17.1 Group view

In this view voltage event are grouped according to IEC 61000-4-30 (see section 5.1.12 for details). Table where events are summarized is shown below. Each line in table represents one event, described by event number, event start time, duration and level. Additionally, in colon “T” event characteristics (Type) is shown (see table below for details).

EVENTS

G

12:06

Date 29.01.2019

| No | L | START | T | Level | Duration |
|----|-------|--------------|----|--------|--------------|
| 1 | 1 | 11:48:21.983 | D | 205.48 | 0h00m0.090s |
| 2 | 1 | 11:48:59.012 | D | 3.87 | 0h00m0.100s |
| 3 | 1 2 3 | 11:50:46.831 | DI | 0.23 | 0h00m0.120s |
| 4 | 1 | 11:52:28.841 | D | 4.71 | 0h00m0.110s |
| 5 | 1 | 11:56:12.190 | D | 0.25 | 0h01m13.759s |

Ph.

ALL

INT

VIEW

Figure 68: Voltage events in group view screen

By pressing “ENTER” on particular event we can examine event details. Event is split by phase events and sorted by start time.







| No | L | START | T | Level | Duration |
|----|---|--------------|---|-------|-------------|
| 4 | 1 | 11:50:46.831 | D | 0.23 | 0h00m0.120s |
| 5 | 3 | 11:50:46.834 | D | 3.45 | 0h00m0.110s |
| 6 | 2 | 11:50:46.838 | D | 2.99 | 0h00m0.110s |
| 7 | 2 | 11:50:46.848 | I | 2.99 | 0h00m0.080s |
| 8 | 1 | 11:50:46.851 | I | 0.23 | 0h00m0.080s |
| 9 | 3 | 11:50:46.854 | I | 3.45 | 0h00m0.080s |

Figure 69: Voltage event in detail view screen

Table 72: Instrument screen symbols and abbreviations

| | |
|----------|---|
| Date | Date when selected event has occurred |
| No. | Unified event number (ID) |
| L | <p>Indicate phase or phase-to-phase voltage where event has occurred:</p> <p>1 – event on phase U_1</p> <p>2 – event on phase U_2</p> <p>3 – event on phase U_3</p> <p>12 – event on voltage U_{12}</p> <p>23 – event on voltage U_{23}</p> <p>31 – event on voltage U_{31}</p> <p>Note: This indication is shown only in event details, since one grouped event can have many phase events.</p> |
| Start | Event start time (when first $U_{Rms(1/2)}$ value crosses threshold. |
| T | <p>Indicates type of event or transition:</p> <p>D – Dip</p> <p>I – Interrupt</p> <p>S – Swell</p> |
| Level | Minimal or maximal value in event U_{Dip} , U_{Int} , U_{Swell} |
| Duration | Event duration. |

Table 73: Keys in Events table group view screens


| | | |
|---|---|--|
|  |  Ph. | Group view is shown. Press to switch on “PHASE” view. |
| |  Ph. | Phase view is shown. Press to switch on “GROUP” view. |
|  | ALL INT | Shows all types of events (dips and swell). Interrupts are treated as special case of voltage dip event. START time and Duration in table is referenced to complete voltage event. |




| EVENTS | | | | | | |
|-----------------|-------|--------------|----|--------|--------------|--|
| Date 29.01.2019 | | | | | | |
| No | L | START | T | Level | Duration | |
| 1 | 1 | 11:48:21.983 | D | 205.48 | 0h00m0.090s | |
| 2 | 1 | 11:48:59.012 | D | 3.87 | 0h00m0.100s | |
| 3 | 1 2 3 | 11:50:46.831 | DI | 0.23 | 0h00m0.120s | |
| 4 | 1 | 11:52:28.841 | D | 4.71 | 0h00m0.110s | |
| 5 | 1 | 11:56:12.190 | D | 0.25 | 0h01m13.759s | |

Shows poly-phase voltage interrupts only, according to the IEC 61000-4-30 requirements. START time and Duration in table is referenced to voltage interrupt only.

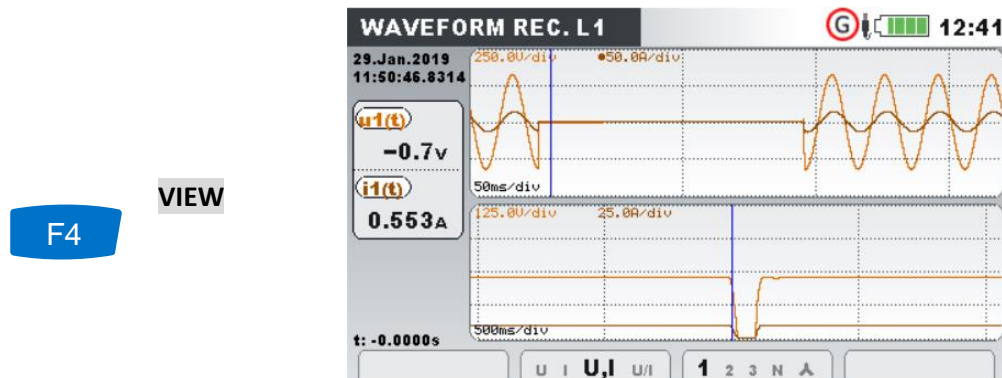[illegible]

Shows selected waveform and inrush view.



- | | |
|---|---|
|  | Selects event. |
|  | Enters detail event view. |
|  | Returns to Events table group view screen. Returns to "RECORDERS" submenu. |

3.17.2Phase view

In this view voltage events are separated by phases. This is convenient view for troubleshooting. Additionally, user can use filters in order to observe only particular type of event on a specific phase. Captured events are shown in a table, where each line contains one phase event. Each event has an

event number, event start time, duration and level. Additionally, in colon “T” type of event is shown (see table below for details).

| No | L | START | T | Level | Duration |
|----|---|--------------|---|--------|-------------|
| 1 | 1 | 11:48:21.983 | D | 205.48 | 0h00m0.090s |
| 2 | 1 | 11:48:59.012 | D | 3.87 | 0h00m0.100s |
| 3 | 1 | 11:48:59.032 | I | 3.87 | 0h00m0.070s |
| 4 | 1 | 11:50:46.831 | D | 0.23 | 0h00m0.120s |
| 5 | 3 | 11:50:46.834 | D | 3.45 | 0h00m0.110s |
| 6 | 2 | 11:50:46.838 | D | 2.99 | 0h00m0.110s |

Figure 70: Voltage events screens

You can also see details of each individual voltage event and waveform/inrush view of all events. Statistics show count registers for each individual event type by phase.

Table 74: Instrument screen symbols and abbreviations

| | |
|----------|--|
| Date | Date when selected event has occurred |
| No. | Unified event number (ID) |
| L | Indicate phase or phase-to-phase voltage where event has occurred: 1 – event on phase U_1 2 – event on phase U_2 3 – event on phase U_3 12 – event on voltage U_{12} 23 – event on voltage U_{23} 31 – event on voltage U_{31} |
| Start | Event start time (when first $U_{Rms(1/2)}$ value crosses threshold. |
| T | Indicates type of event or transition: D – Dip I – Interrupt S – Swell |
| Level | Minimal or maximal value in event U_{Dip} , U_{Int} , U_{Swell} |
| Duration | Event duration. |

Table 75: Keys in Events table phase view screens

| | | | |
|----|--|---------------|---|
| F1 | | PH | Group view is shown. Press to switch on “PHASE” view. |
| | | PH | Phase view is shown. Press to switch on “GROUP” view. |
| F2 | | | Filters events by type: |
| | | DIP INT SWELL | Shows all event types. |

| | | |
|--|--|--|
| | | Shows dips only. |
| | | Shows interrupts only. |
| | | Shows swells only. |
| | | Filters events by phase: |
| | | Shows only events on phase L1. |
| | | Shows only events on phase L2. |
| | | Shows only events on phase L3. |
| | | Shows events on all phases. |
| | | Shows only events on phases L12. |
| | | Shows only events on phases L23. |
| | | Shows only events on phases L31. |
| | | Shows events on all phases. |
| | | Shows selected waveform and inrush view. |
| | | |
| | | Selects event. |
| | | |
| | | Enters detail event view. |
| | | Returns to Events table phase view screen. |
| | | Returns to the "RECORDERS" submenu. |

3.18 Alarms table

This screen shows list of alarms which went off. Alarms are displayed in a table, where each row represents an alarm. Each alarm is associated with a start time, phase, type, slope, min/max value and duration (see 3.23.3 for alarm setup and 5.1.14 for alarm measurement details).












| ALARMS | | | | | |
|-----------------|---|-----|-------|----------|------------|
| Date 30.01.2019 | | | | | |
| START | L | T | Slope | Min/Max | Duration |
| 07:32:02.800 | T | P+ | Rise | 397.9 kW | 19.201 sec |
| 07:32:09.800 | 1 | U | Rise | 258.2 V | 2.800 sec |
| 07:32:31.001 | T | P+ | Rise | 1316 kW | 1.200 sec |
| 07:32:46.401 | 1 | U | Rise | 298.0 V | 1.800 sec |
| 07:33:08.800 | 1 | U | Rise | 235.8 V | 6.200 sec |
| 07:33:09.000 | 1 | Uh5 | Rise | 14.8 % | 6.000 sec |















Figure 71: Alarms list screen

Table 76: Instrument screen symbols and abbreviations

| | |
|----------|---|
| Date | Date when selected alarm has occurred |
| Start | Selected alarm start time (when first U_{Rms} value cross threshold) |
| L | Indicate phase or phase-to-phase voltage where event has occurred: 1 – alarm on phase L_1 2 – alarm on phase L_2 3 – alarm on phase L_3 12 – alarm on line L_{12} 23 – alarm on line L_{23} 31 – alarm on line L_{31} |
| Slope | Indicates alarms transition: <ul style="list-style-type: none"> Rise – parameter has over-crossed threshold Fall – parameter has under-crossed threshold |
| Min/Max | Minimal or maximal parameter value during alarm occurrence |
| Duration | Alarm duration. |

Table 77: Keys in Alarms table screens

| | | |
|-----------|--|---|
| | | Filters alarms according to the following parameters: |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | All alarms. |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Voltage alarms. |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Combined power alarms. |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Fundamental power alarms. |
| F2 |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Nonfundamental power alarms. |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Flicker alarms. |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Unbalance alarms. |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Harmonics alarms. |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Interharmonics alarms. |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Signalling alarms. |
| |  UIF C. Pwr F. Pwr NF. Pwr Flick Sym H iH Sig Temp | Temperature alarms. |

| | | |
|--|--|---|
|  | 1 2 3 N 12 23 31 T  | Filters alarms according to phase on which they occurred: |
| | 1 2 3 N 12 23 31 T  | Shows only alarms on phase L1. |
| | 1 2 3 N 12 23 31 T  | Shows only alarms on phase L2. |
| | 1 2 3 N 12 23 31 T  | Shows only alarms on phase L3. |
| | 1 2 3 N 12 23 31 T  | Shows only alarms on neutral channel. |
| | 1 2 3 N 12 23 31 T  | Shows only alarms on phases L12. |
| | 1 2 3 N 12 23 31 T  | Shows only alarms on phases L23. |
| | 1 2 3 N 12 23 31 T  | Shows only alarms on phases L31. |
| | 1 2 3 N 12 23 31 T  | Shows only alarms on channels which are not channel dependent |
|   | 1 2 3 N 12 23 31 T  | Shows all alarms. |
| | Selects an alarm. | |
|  | | Returns to the "RECORDERS" submenu. |

3.19 Rapid voltage changes (RVC) table

In this table captured RVC events are shown. Events appear in the table after finish, when voltage is in the steady state. RVC events are measured and represented according to IEC 61000-4-30. See 5.1.15 for details.

| RVC | | | | | |
|------|---|--------------------------|----------|-------|-------|
| No | L | START | Duration | dUmax | dUss |
| 1 | 2 | 31.Jan.2019 11:31:10.315 | 0.010s | 7.9V | 7.8V |
| 2 | 3 | 31.Jan.2019 11:31:10.322 | 0.010s | 7.6V | 7.5V |
| 3 | 1 | 31.Jan.2019 11:31:10.328 | 0.010s | 7.6V | 7.4V |
| 4 | 3 | 31.Jan.2019 11:31:19.202 | 0.010s | 10.0V | 10.0V |
| 5 | 2 | 31.Jan.2019 11:31:19.206 | 0.010s | 10.3V | 10.3V |
| 6 | 1 | 31.Jan.2019 11:31:19.209 | 0.010s | 9.9V | 9.9V |
| STAT | | | | | |





Figure 72: RVC Events table group view screen

Table 78: Instrument screen symbols and abbreviations

| No. | Unified event number (ID) |
|-----|--|
| L | Indicate phase or phase-to-phase voltage where event has occurred: |
| | 1 – event on phase U ₁ |
| | 2 – event on phase U ₂ |
| | 3 – event on phase U ₃ |
| | 12 – event on voltage U ₁₂ |
| | 23 – event on voltage U ₂₃ |
| | 31 – event on voltage U ₃₁ |

| | |
|----------|---|
| Start | Event start time (when first $U_{Rms(1/2)}$ value crosses threshold. |
| Duration | Event duration. |
| dMax | ΔU_{max} - maximum absolute difference between any of the $U_{Rms(1/2)}$ values during the RVC event and the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event. |
| dUss | ΔU_{ss} - is the absolute difference between the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event and the first arithmetic mean 100/120 $U_{Rms(1/2)}$ value after the RVC event. |

Table 79: Keys in RVC Events table group view screens

| | |
|---|---|
| Shows event statistics (phase by phase). | |
|  |  |
| |  |
| |  |

Shows event statistics (phase by phase).

| | | | | |
|-------|-------|-------|-------|---|
| RVC | | | | |
| | L1 | L2 | L3 | |
| U | 228.3 | 237.8 | 230.1 | v |
| RVC | | | | |
| TOTAL | 3 | 3 | 3 | |
| RVC | | | | |

RVC

Returns to RVC Events table group view screen.

ESC

Returns to RVC Events table group view screen.

Returns to "RECORDERS" submenu.

3.20 Inrush table

This screen shows list of Inrush events. Inrush events are displayed in a table, where each row represents single Inrush. Each Inrush is associated with a start time, phase (Channel) and max value.

| INRUSH TABLE | | | |
|--------------|--------------------------|----------|--------|
| No | START | CHANNEL | MAX |
| 1 | 23.Apr.2021 11:57:23.010 | I1 I2 | 1001A |
| 2 | 23.Apr.2021 11:57:30.581 | I1 I2 | 1593A |
| 3 | 23.Apr.2021 11:57:32.197 | I1 I2 I3 | 1593A |
| 4 | 23.Apr.2021 11:57:33.431 | I1 I2 | 900.8A |
| 5 | 23.Apr.2021 11:57:35.011 | I1 I2 | 2002A |

Figure 73: Inrush table group view screen

Table 80: Instrument screen symbols and abbreviations

| | |
|---------|---|
| No. | Unified event number (ID) |
| Start | Inrush start time (when first $I_{Rms(1/2)}$ value crosses threshold. |
| Channel | Channel, where Inrush occurs. |
| MAX | Maximal value during Inrush. |

3.21 E-Meter recorder (MI 2892/MI 2885)

E-Meter recorder is used for accuracy measurements of electronic as well as mechanical (inductive) meters. For accuracy measurements, comparison method is used. Voltage and current which flow through the tested object is also connected to the reference Power Quality Instrument. Function is supported on MI 2892 or MI 2885 Power Quality Instrument.

The total accuracy of the complete system depends on accuracy of voltage and current measurements, mainly on the used current clamps. The most critical issue is current measurements. Current should be detected by the most accurate current clamps (A 1588) or I/U transducer (A 1037) to achieve the highest possible accuracy.

Note: Metrel suggest to use A 1398 PQA, A 1588 current clamps or A 1037 U/I transducer to achieve the system accuracy approx. to 1%.

As reference meter Power Quality Instrument is used. 200ms measurements are accumulated during the accuracy measurements. PQI collects pulses from the E-Meter and compare energy measured by the PQI and energy collected by the pulses, generated from the E-Meter. Algorithms inside the PQI compensate energy captured in the start and stop 200ms intervals related to the pulse captured from the E-Meter.

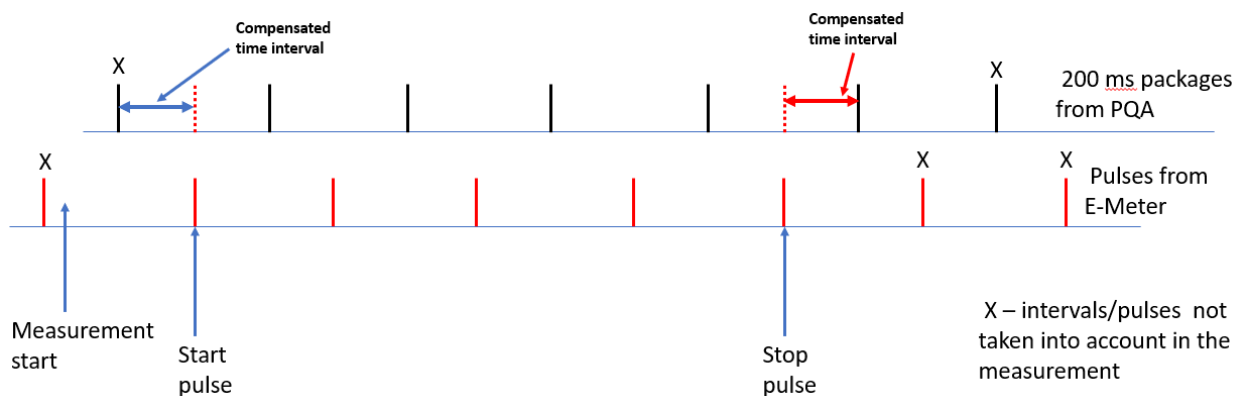


Figure 74: E - Meter measuring accuracy comparison methods

In order to start the E-Meter accuracy procedure following steps should be followed:

1. Connect voltage test leads and current clamps to selected test object (E-Meter). Take care about proper connection and selection of used current clamps and range.



Figure 75: PQI setup connection and Connection check

2. Install Photo – scanning head A 1756 into the tested E-Meter. For proper installation, follow the procedure in the manual for A 1756.
3. Connect cable between the Photo-Scanning head and PQI.
4. Select E-Meter recorder under Recorder menu:



Figure 76: E-Meter functionality under Recorder menu

5. E-Meter recording window and parameters setup:

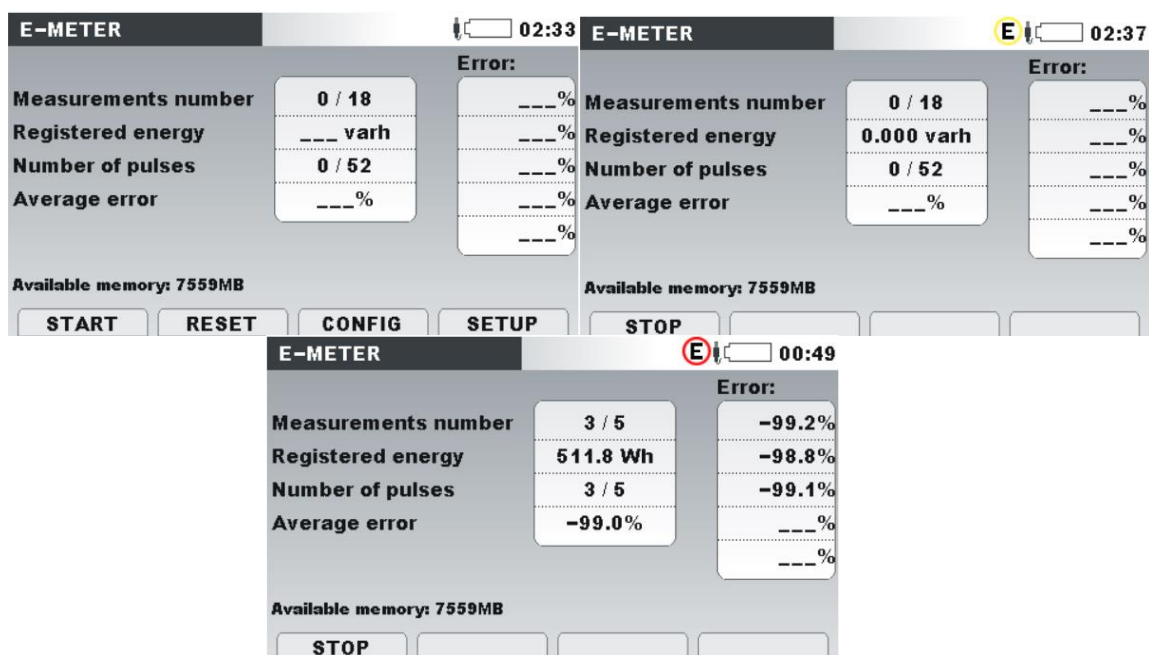


Figure 77: E-Meter Recorder menu

Table 81: E-Meter recorder settings description







 

| | |
|---|---|
|  | E-Meter recorder is active, waiting for start condition to be met. After start conditions are met (start impulse from the photo-scanning head), instrument will start with E-Meter measurements. |
|  | E-Meter recorder is active. Measurements running according the setup. Note: Recorder will run until one of the following end conditions is met: <ul style="list-style-type: none"> • STOP key was pressed by user • Given Duration criteria was met • SD CARD is full Note: If during record session instrument batteries are drained, due to long interruption for example, instrument will shut down automatically. After power restauration, it will automatically start new recording session. |
| Measurements number | The n-th measurement is performed out of the total defined number of measurements Example: 3/5 → the third measurement is active from the total number of 5. |
| Registered energy | Energy (kWh/kvarh) registered by the Power Quality Instrument |
| Number of pulses | Number of accepted pulses from the E-Meter from the total defined number of pulses. Example: 3/5 → 3 pulses accepted from the total selected number of 5. |
| Error | E-Meter error, getting from the individual measurement. On the LCD screen only last 5 error results are presented. For the detailed view, download data with PowerView and analyse the data. |
| Average error | Average error calculated from the individual measurements. |

Table 82: Functional Keys in E-Meter recorder setup screen

| | | |
|---|-----------------------------|---|
|  | START STOP | Starts the recorder (selection, when recorder is not running) Stops the recorder (selection, when recorder is running) |
|  | RESET | Reset E-Meter measurements results (selection, when recorder is not running) |
|  | CONFIG | Shortcut to the PQI Connection setup. (Selection, when recorder is not running) |
|  | SETUP | E-Meter recorder setup. (Selection, when recorder is not running) |
|  | | Moves cursor to the next row up/down; enter desired character |
|  | | Field selection/Increase (Decrease) the value |

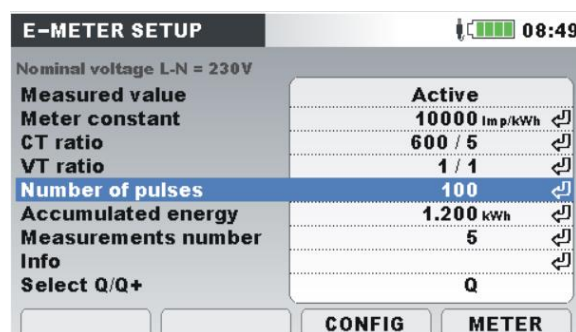


Figure 78: E-Meter Recorder setup menu

Table 83: E-Meter recorder setup settings description

| | |
|-----------------------------------|--|
| <p>Measured value</p> | <p>Selection of E-Meter measured value, which is tested (Active/Reactive).</p> <p>Active: $Q\ I + Q\ II + Q\ III + Q\ IV$ (combined) Reactive: $Q\ I + Q\ II + Q\ III + Q\ IV$ (QvFund / Qenergy) Q - fundamental vector reactive power. Q+ – reactive energy according IEEE 1459</p> |
| <p>Meter constant</p> | <p>E-Meter metrological constant (LED: imp/kWh; imp/kvarh; Mechanical meter: Revs/kWh)</p> |
| <p>CT ratio</p> | <p>Current transformer ratio (applicable, when PQA measure primary current and e-meter measure secondary current)</p> |
| <p>VT ratio</p> | <p>Voltage transformer ratio (applicable, when PQA measure primary voltage and e-meter measure secondary current)</p> |
| <p>Number of pulses</p> | <p>Number of pulses to be captured from E-Meter Requested registered energy during accuracy measurements</p> |
| <p>Accumulated energy</p> | <p>Note: Number of pulses or Accumulated energy should be selected. If you entered one value, the other one is automatically calculated.</p> <p>Note: we suggest, that accuracy measurement takes at least 10 – 15 minutes (due to changeable load).</p> |
| <p>Measurements number</p> | <p>Number of consecutive measurements that are performed automatically.</p> |
| <p>Info</p> | <p>Information field for description of measurement place and tested E-Meter</p> |



Measurement place: Description of measurement place
E-Meter SN: Serial Number of tested E-Meter
E-Meter nominal data: E-Meter data, like nominal voltage & current, type, producer etc..



- | | | |
|-----------|----------------|------------------------------|
| F1 | CLEAR | Delete selected character. |
| F2 | CLR ALL | Delete complete string |
| F3 | A | Shortcut to characters A → . |
| F4 | M | Shortcut to characters M →. |

| | |
|--------------------|---|
| Select Q/Q+ | Selection of reactive energy used for reactive energy accuracy test Q - fundamental vector reactive power. Q+ – reactive energy according IEEE 1459 |
|--------------------|---|

- | | | |
|-----------|---------------|---------------------------------------|
| F3 | CONFIG | Shortcut to the PQI Connection setup. |
| F4 | METER | Returning back to E-Meter recorder. |

3.22 Memory List

Using this menu user can view and browse saved records. By entering this menu, information about records is shown.

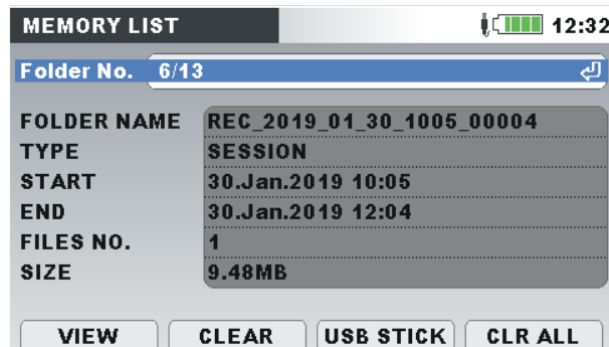


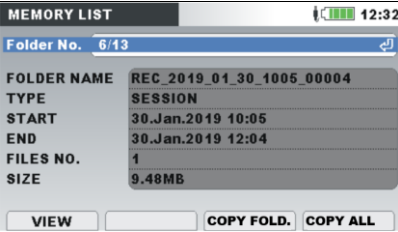



 

Figure 79: Memory list screen (Folder structure)


Table 84: Instrument screen symbols and abbreviations

| | |
|--------------------|---|
| Folder No. | Selected Folder number for which details are shown / Number of all folders |
| FOLDER NAME | Folder name on SD Card. By convention file names are created by following rules: REC_YYYY_MM_DD_HHMM_XXXXX , where: <ul style="list-style-type: none"> • REC represent Folder type • YYYY represent actual year • HH represent actual month • DD represent actual day • HHMM represent actual hour/minutes • XXXXX record number 00000 ÷ 99999 (running index) |
| TYPE | Indicates type of folder, which can be one of following: <ul style="list-style-type: none"> • Root (for snapshot data), • Session (for recorded data). |
| START | Folder creation start time. |
| END | Folder stop time. |
| FILES NO. | Number of recorders and snapshot's files |
| SIZE | Record size in kilobytes (kB) or megabytes (MB). |

Table 85: Keys in Memory list (Folder) screen

| | | |
|-----------|------------------|---|
| F1 | VIEW | Views details of currently selected folder. |
| F2 | CLEAR | Clears selected folder structure. |
| F3 | USB STICK | Enable USB memory stick support. |

| | |
|--|--|
| <p>COPY FOLD. COPY ALL</p> |  <p>Copy selected folder to USB Copy all data from SD card to USB</p> |
| <p>CLR ALL</p> | <p>Opens confirmation window for clearing all saved records.</p> <p>Keys in confirmation window:</p> <p> Selects YES or NO.</p> <p> Confirms selection.</p> <p> Exits confirmation window without clearing saved records.</p> |
| <p></p> <p></p> | <p>Browses through folders (next or previous folder).</p> <p>Returns to the “RECORDERS” submenu.</p> |

By pressing  (**VIEW**) button, details of selected folder are presented:

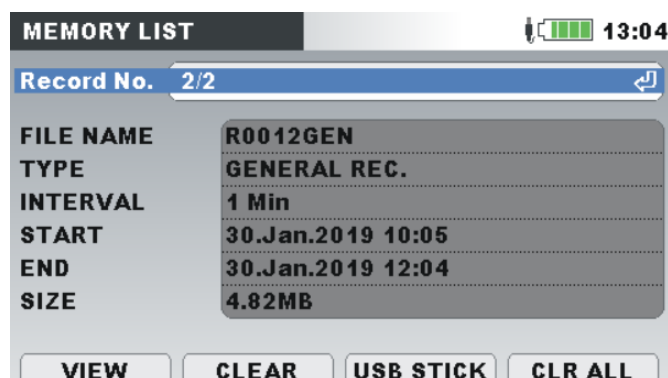





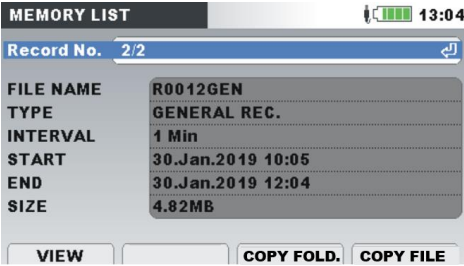

 




Figure 80: Memory list screen (Recorder data)

Table 86: Instrument screen symbols and abbreviations

| | |
|------------------|---|
| Record No | Selected record number, for which details are shown / Number of all records. |
| FILE NAME | <p>Record name under selected folder structure on SD Card. By convention file names are created by following rules: Rxxxxyyy.REC, where:</p> <ul style="list-style-type: none"> • xxxx if record number 0000 ÷ 9999 • yyy represent record type <ul style="list-style-type: none"> ○ WAW – waveform record (samples values) ○ INR – inrush record (RMS values) ○ SNP – waveform snapshot ○ TRA – transient record |

| | |
|-----------------|---|
| | <ul style="list-style-type: none"> ○ GEN – general record. General record generates also AVG, EVT, PAR, ALM, SEL files, which can be found on SD Card and are imported into PowerView. |
| Type | <p>Indicates type of record, which can be one of following:</p> <ul style="list-style-type: none"> • Snapshot, • Transient record, • Waveform record, • Inrush record, • General record. |
| Interval | General record recording interval (integration period) |
| Start | General record start time. |
| End | General record stop time. |
| Size | Record size in kilobytes (kB) or megabytes (MB). |

Table 87: Keys in Memory list screen

| | | |
|---|-------------------|---|
|  | VIEW | Views details of currently selected record. |
|  | CLEAR | Clears selected record. |
|  | USB STICK | Enable USB memory stick support. |
| | |  |
| | COPY FOLD. | Copy all files from selected folder to USB stick. |
| | COPY FILE | Copy selected file to USB stick. |
| | | Opens confirmation window for clearing all saved records under selected folder. |
| | | Keys in confirmation window: |
|  | CLR ALL |  Selects YES or NO. |
| | |  Confirms selection. |
| | |  Exits confirmation window without clearing saved records. |
|  | | Browses through records (next or previous record). |
|  | | Returns to the "Folder" submenu. |
| | | Returns to the "RECORDERS" submenu. |

3.22.1 General Record

This type of record is made by GENERAL RECORDER. Record front page is similar to the GENERAL RECORDER setup screen, as shown on figure below.

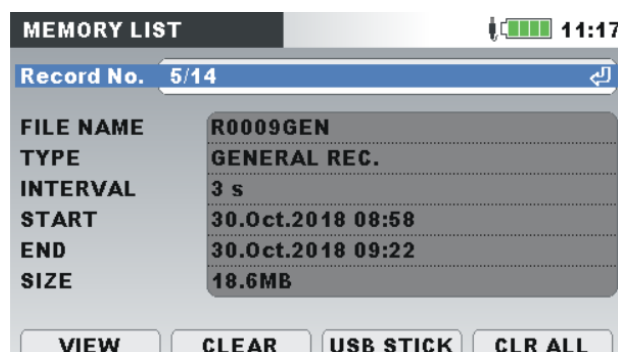



Figure 81: Front page of General record in MEMORY LIST menu

Table 88: Recorder settings description

| | |
|-------------------|--|
| Record No. | Selected record number, for which details are shown. |
| FILE NAME | Record name on SD Card |
| Type | Indicate type of record: General record. |
| Interval | General record recording interval (integration period) |
| Start | General record start time. |
| End | General record stop time. |
| Size | Record size in kilobytes (kB) or megabytes (MB). |

Table 89: Keys in General record front page screen






 



 

| | | |
|---|-------------|--|
|  | VIEW | Switches to the CHANNELS SETUP menu screen. |
| | | Particular signal groups can be observed by pressing on F1 key (VIEW). |




Keys in CHANNELS SETUP menu screen:



Selects particular signal group.

| | | | |
|---|----------------|---|---|
| | |  | Enters particular signal group (TREND view). |
| | |  | |
| | |  | Exits to MEMORY LIST menu. |
|  | CLEAR | | Clears the last record. In order to clear complete memory, delete records one by one. |
| | | | Opens confirmation window for clearing all saved records. |
| | | | Keys in confirmation window: |
|  | CLR ALL |  | Selects YES or NO. |
| | |  | Confirms selection. |
| | |  | Exits confirmation window without clearing saved records. |
|  | | | Browses through records (next or previous record). |
|  | | | Selects parameter (only in CHANNELS SETUP menu). |
|  | | | Returns to the "RECORDERS" submenu. |

By pressing  **VIEW**, in CHANNELS SETUP menu, TREND graph of selected channel group will appear on the screen. Typical screen is shown on figure below.

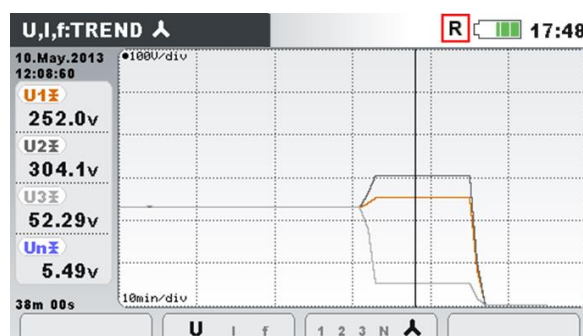




 


Figure 82: Viewing recorder U,I,f TREND data

Table 90: Instrument screen symbols and abbreviations

| | |
|---|---|
|  | Memory list recall. Shown screen is recalled from memory. |
|  | Indicates position of the cursor at the graph. |
| U1, U2 U3, Un: | Maximal () , average () and minimal () recorded value of phase voltage U_{1Rms} , U_{2Rms} , U_{3Rms} , U_{NRms} , for time interval selected by cursor. |



 


 

 
 
 

 

 
 
 
 
 
 
 

 




| | |
|-------------------------|--|
| U12, U23, U31 | Maximal () , average () and minimal () recorded value of phase-to-phase voltage U_{12Rms} , U_{23Rms} , U_{31Rms} for time interval selected by cursor. |
| Ip: | Maximal () , average () and minimal () recorded value of current I_{1Rms} , I_{2Rms} , I_{3Rms} , I_{NRms} for time interval selected by cursor. |
| 38m 00s | Time position of cursor regarding to the record start time. |
| 10.May.2013 12:08:50 | Time clock at cursor position. |

Table 91: Keys in Viewing recorder U,I,f TREND screens

| | | |
|---|---|--|
| | | Selects between the following options: |
|  |  | Shows voltage trend. |
| |  | Shows current trend. |
| |  | Shows frequency trend. |
| |  | Shows voltage and current trends (single mode). |
| |  | Shows voltage and current trends (dual mode). |
|  | | Selects between phase, neutral, all-phases and view: |
| |  | Shows trend for phase L1. |
| |  | Shows trend for phase L2. |
| |  | Shows trend for phase L3. |
| |  | Shows trend for neutral channel. |
| |  | Shows all phases trends. |
| |  | Shows trend for phases L12. |
| |  | Shows trend for phases L23. |
| |  | Shows trend for phases L31. |
| |  | Shows all phase-to-phase trends. |
|  | Moves cursor and select time interval (IP) for observation. | |
|  | Returns to the "CHANNELS SETUP" menu screen. | |

Note: Other recorded data (power, harmonics, etc.) has similar manipulation principle as described in previous sections of this manual.

3.22.2Waveform snapshot

This type of record can be made by using  key (press and hold  key). Snapshot is performed only on the measurement screens.

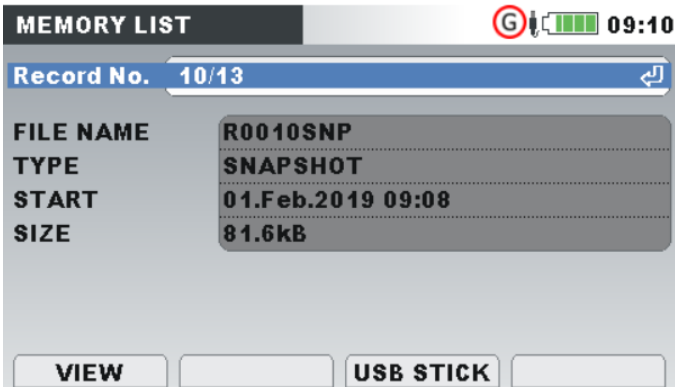


Figure 83: Front page of Snapshot in MEMORY LIST menu


Table 92: Recorder settings description

| | |
|------------|--|
| Record No. | Selected record number, for which details are shown. |
| FILE NAME | Record name on SD Card |
| Type | Indicate type of record: <ul style="list-style-type: none">• Snapshot. |
| Start | Record start time. |
| Size | Record size in kilobytes (kB). |

Table 93: Keys in Snapshot record front page screen

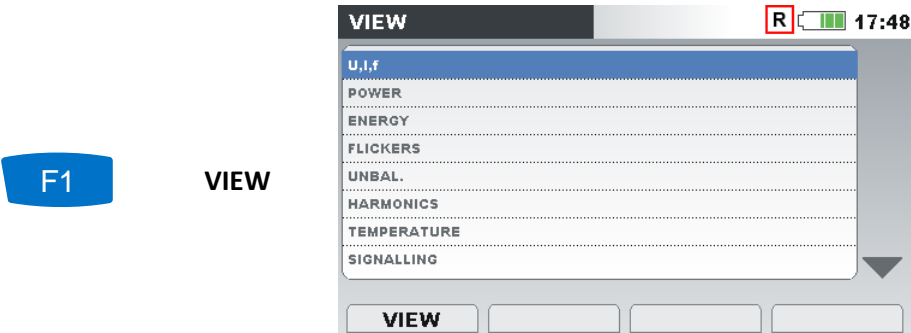Switches to CHANNELS SETUP menu screen.








Particular signal group can be observed by pressing on F1 key (VIEW).



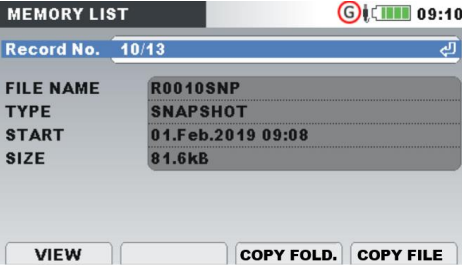
Keys in CHANNELS SETUP menu screen:



Selects particular signal group.

| | |
|--|---|
|   | Enters particular signal group (METER or SCOPE view). |
|  | Exits to MEMORY LIST menu. |
|  | <p>USB STICK Enable USB memory stick support.</p>  <p>COPY FOLD. Copy all files from selected folder to USB stick. COPY FILE Copy selected file to USB stick.</p> |
|  | Browses through records (next or previous record). |
|  | Returns to the "Folder" submenu. Returns to the "RECORDERS" submenu. |

By pressing  **VIEW** in CHANNELS SETUP menu METER screen will appear. Typical screen is shown on figure below.

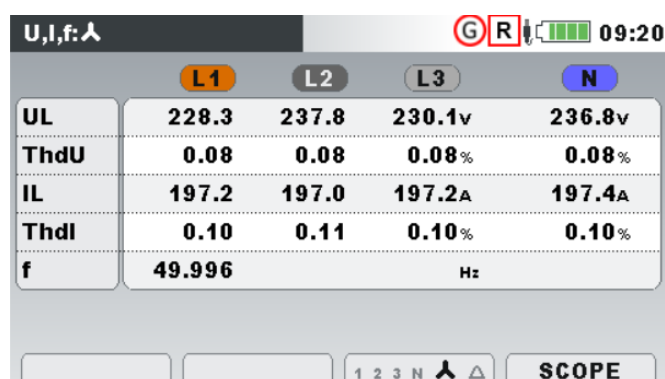


Figure 84: U, I, f meter screen in recalled snapshot record

Note: For more details regarding manipulation and data observing see previous sections of this manual.

Note: Initial WAVEFORM SNAPSHOT is automatically created at the start of GENERAL RECORDER.

3.22.3 Waveform/inrush record

This type of record is made by Waveform recorder. For details regarding manipulation and data observing see section Captured waveform 3.15.3.

3.22.4 Transients record

This type of record is made by Transient recorder. For details regarding manipulation and data observing see section 3.16.4.

3.23 Measurement Setup submenu

From the “MEASUREMENT SETUP” submenu measurement parameters can be reviewed, configured and saved.

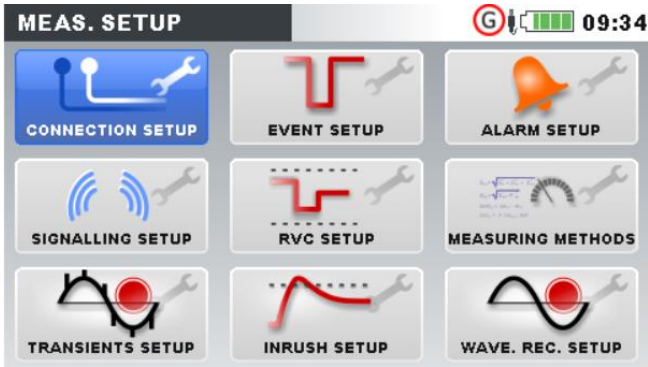
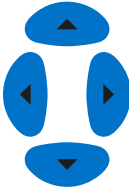




Figure 85: MEASUREMENT SETUP submenu

Table 94: Description of Measurement setup options

| | |
|-------------------|---|
| Connection setup | Setup measurement parameters. |
| Event setup | Setup event parameters. |
| Alarm setup | Setup alarm parameters. |
| Signalling setup | Setup signalling parameters. |
| RVC setup | Setup RVC parameters. |
| Measuring methods | Selection of measurement method (Modern (IEEE 1459), Classic (Vector), Classic (Arithmetic)). |
| Transient setup | Setup of parameters for Transient recorder. |
| Inrush setup | Setup of parameters for Waveform/Inrush recorder. |
| Wave. Rec. setup | Setup of parameters for Waveform/Inrush recorder. |

Table 95: Keys in Measurement setup submenu screen

| | |
|---|--|
|  | Selects option from the “MEASUREMENT SETUP” submenu. |
|  | Enters the selected option. |
|  | Returns to the “MAIN MENU” screen. |

3.23.1 Connection setup

In this menu user can setup connection parameters, such as nominal voltage, frequency, etc. After all parameters are provided, instrument will check if given parameters complies with measurements. In case of incompatibility instrument will show Connection check warning (✗) before leaving menu.

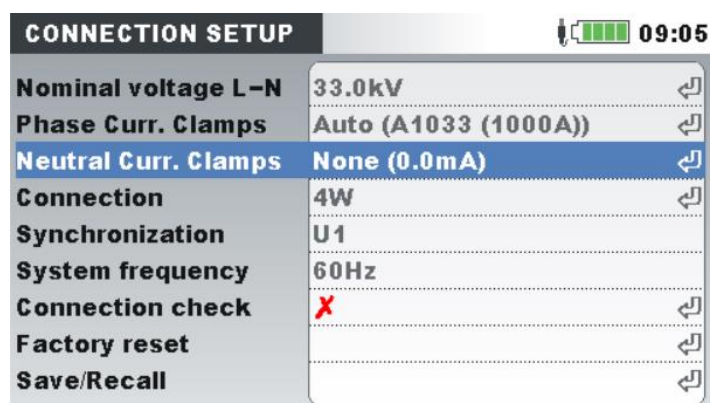
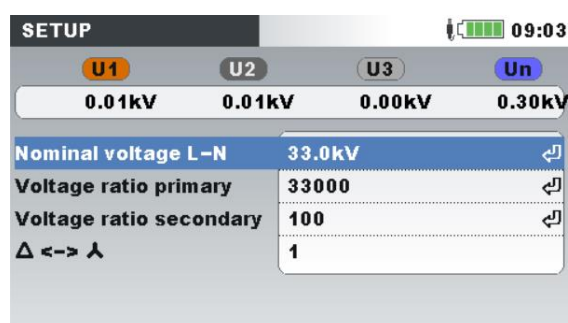


Figure 86: "CONNECTION SETUP" screen

Table 96: Description of Connection setup

Set nominal voltage according to the network voltage. If voltage is measured over potential transformer, then press ENTER for setting transformer parameters:


**Nominal voltage**

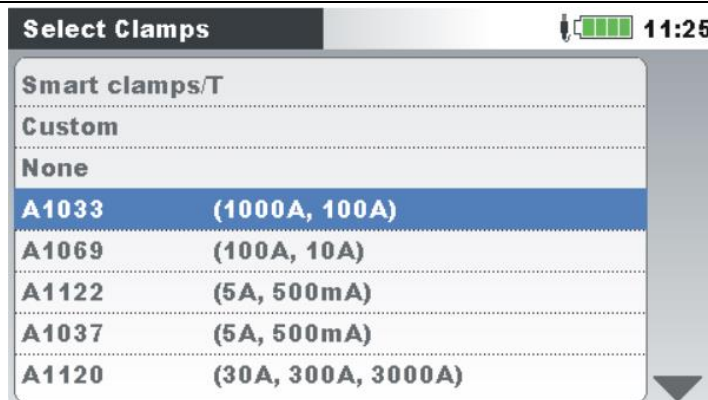Voltage ratio: Potential transformer ratio $\Delta \leftrightarrow \Delta$:

| Transformer type | | Symbol | Additional transformer ratio |
|------------------|-----------|-------------------------------|------------------------------|
| Primary | Secondary | | |
| Delta | Star | $\Delta \rightarrow \lambda$ | $\frac{1}{\sqrt{3}}$ |
| Star | Delta | $\lambda \rightarrow \Delta$ | $\sqrt{3}$ |
| Star | Star | $\lambda \rightarrow \lambda$ | 1 |
| Delta | Delta | $\Delta \rightarrow \Delta$ | 1 |

Note: Instrument can always measure accurately at up to 150% of selected nominal voltage.

| | |
|-----------------------------|---|
| Phase Curr. Clamps | Selects phase current clamps for phase current inputs. |
| Neutral Curr. Clamps | Selects neutral current clamps for neutral current input. |




Note: For Smart clamps (A 1502, A 1227, A 1281, ...) always select "Smart clamps". Check in the Metrel General Catalogue, which clamps are developed as "Smart clamps".

Note: Use "None" option for voltage measurements only.


Note: See section 4.2.3 for details regarding further clamps settings.

Method of connecting the instrument to multi-phase systems (see 4.2.1 for details).

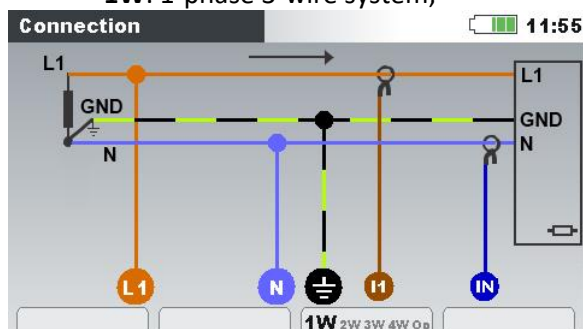
- **1W:** 1-phase 3-wire system;



- **2W:** 2-phase 4-wire system;

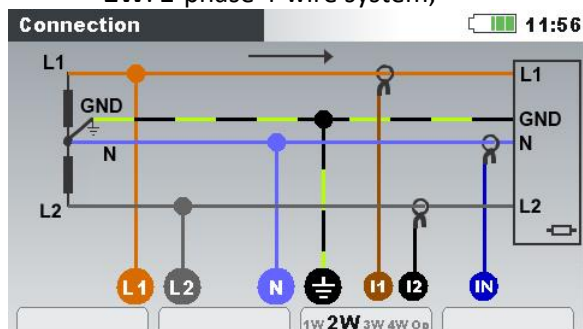


- **3W:** 3-phase 3-wire system;

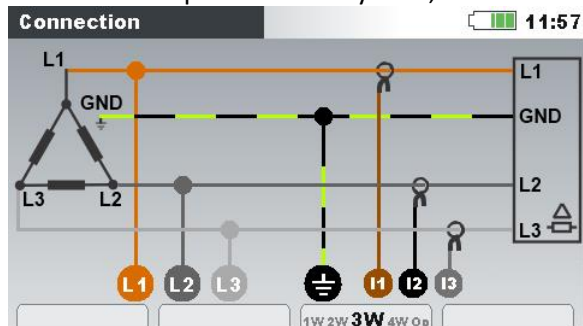


- **4W:** 3-phase 4-wire system;

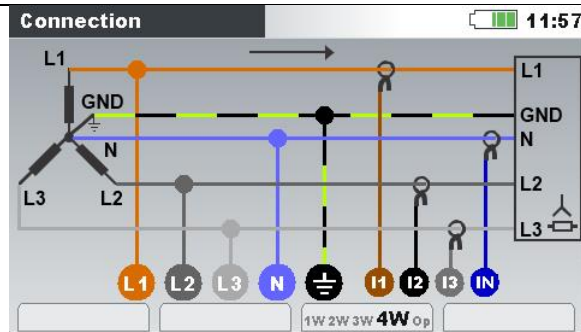
Connection



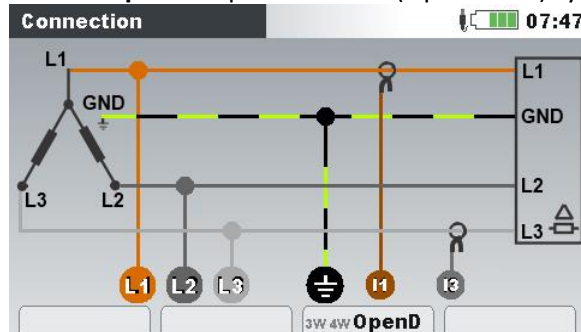
- **OpenD:** 3-phase 2 -wire (Open Delta) system.



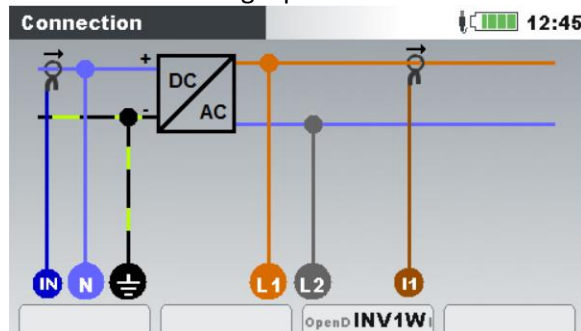- **INV1W:** Single phase inverter connection.



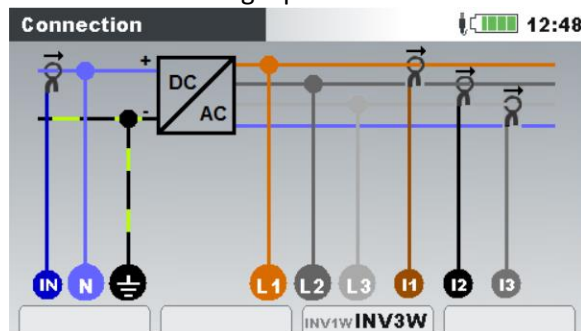- **INV3W:** Single phase inverter connection.



Synchronization

Synchronization channel. This channel is used for instrument synchronization to the network frequency. Also, a frequency measurement is performed on that channel. Depending on **Connection** user can select:

- **1W, 2W, 4W, INV1W:** U1 or I1.
- **3W, OpenD, INV3W:** U12, or I1.

System frequency

Select system frequency. According to this setting 10 or 12 cycle interval will be used for calculus (according to IEC 61000-4-30) at 50/60Hz:

- 50 Hz – 10 cycle intervals
- 60 Hz – 12 cycle intervals
- 400 Hz – 50 cycle intervals
- VFD – Variable frequency drive (5 ÷ 120 Hz) – 5 cycle intervals

Connection check

Check if measurement results comply with given limits.

Connection check

Connection check is marked with green OK sign (✓) if instrument is connected properly and measurement comply with given measurement setup.

Connection check is marked with yellow OK sign (✓), indicate that some measurements are at the edge of the measurement setup specification. This does not mean that something is necessary wrong, but require user attention to double check connection and instrument settings. Press F4 to check LIMITS.

Fail sign (✗) indicate that that instrument is connected incorrectly or measurement setup does not correspond with measured value. In this case it is necessary to readjust measurement settings, and check instrument connections.

By pressing ENTER key, detailed Connection check will be shown.

| Connection: Consumed | | | | 11:13 | |
|----------------------|---------|---------|---------|-----------|----|
| | L1 | L2 | L3 | N | |
| U | ✓ 228.3 | ✓ 237.8 | ✓ 230.1 | 236.8 | V |
| I | ✓ 197.1 | ✓ 197.0 | ✓ 197.2 | 197.4 | A |
| P | 43.48 | 45.25 | 43.82 | | kW |
| Phase | ✓ -15.0 | ✓ -15.0 | ✓ -15.0 | -15.1 | ° |
| Useq | ✓ 1 2 3 | | Ptot | 132.5 | kW |
| Iseq | ✓ 1 2 3 | | f | ✓ 49.996 | Hz |
| DATE/TIME | | VIEW | | AUTOSET I | |
| | | | | LIMITS | |

See section 4.2.4 for details, how to use this menu.

| | | |
|-----------|------------------|---|
| F1 | DATE/TIME | Set actual Date & Time and Time zone |
| F2 | VIEW | Set Consumed or Generated view |
| F3 | AUTOSET I | Set the auto check procedure for defining the optimal range of current clamps |
| F4 | LIMITS | Predefined limits for the measurement result evaluation |

| LIMITS | | | 11:39 |
|--------|-------------------|-----------------|-------|
| U | 90%–110% Un | 207.0–253.0V | ✓ |
| I | 5%–10% Iclamps | 50.00–100.0A | ✓ |
| I | 10%–110% Iclamps | 100.0–1100A | ✓ |
| I | 110%–150% Iclamps | 1100–1500A | ✓ |
| f | 85%–115% f | 42.500–57.500Hz | ✓ |
| Phase | ±90° | | ✓ |

Default parameters

Set factory default parameters. These are:

Nominal voltage: 230V (L-N);

Voltage ratio: 1:1;

$\Delta \leftrightarrow \blacktriangle$: 1

Phase current clamps: Smart Clamps;

Neutral current clamps: Smart Clamps;

Connection: 4W;

Synchronization: U1

System frequency: 50 Hz.

Dip voltage: 90% U_{Nom}

Interrupt voltage: 5% U_{Nom}

Swell voltage: 110% U_{Nom}

Signalling frequency1: 316 Hz

Signalling frequency2: 1060 Hz

Signalling record duration: 10 sec

Signalling threshold: 5% of nominal voltage

RVC threshold: 3% of nominal voltage

RVC hysteresis: 25%

Measuring method: Modern (IEEE 1459)

Clear Alarm setup table

Record organisation: Folder

Record starting time: Rounded


Transient select: GND

Waveform recorder setup: Event

Table 97: Keys in Connection setup menu



 Selects Connection setup parameter to be modified.



Changes selected parameter value.



Enters into submenu.
Confirms Factory reset.



Depends from Connection check status.

Connection check ✓

For:

- OK sign (✓, ✓) Returns to the “MEASUREMENT SETUP” submenu.

- Fail sign (X) enter into “CONNECTION CHECK” submenu. It is expected that user will resolve this issue before continuing with measurements. Press **ESC** again in order to leave “CONNECTION CHECK” menu.

3.23.2 Event setup

In this menu user can setup voltage events and their parameters. See 5.1.12 for further details regarding measurement methods. Captured events can be observed through EVENTS TABLE screen. See 3.17 and 5.1.12 for details.

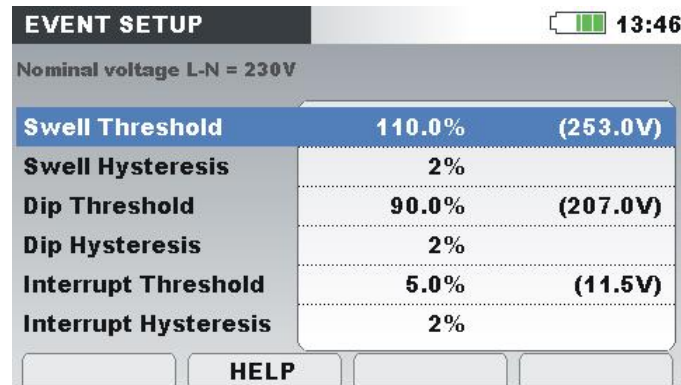
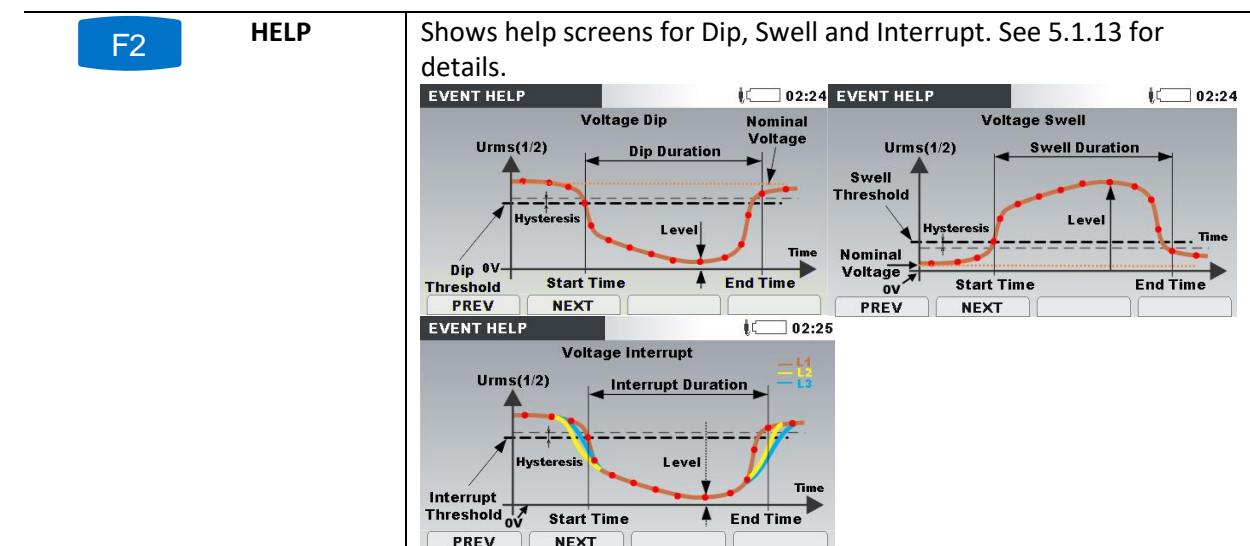










Figure 87: Event setup screen

Table 98: Description of Event setup

| | |
|-----------------------------|---|
| Nominal voltage | Indication of type (L-N or L-L) and value of nominal voltage. |
| Swell Threshold | Set swell threshold value in % of nominal voltage. |
| Swell Hysteresis | Set swell hysteresis value in % of nominal voltage. |
| Dip Threshold | Set dip threshold value in % of nominal voltage. |
| Dip Hysteresis | Set dip hysteresis value in in % of nominal voltage. |
| Interrupt Threshold | Set interrupt threshold value in % of nominal voltage. |
| Interrupt Hysteresis | Set interrupt hysteresis in % of nominal voltage. |


Table 99: Keys in Event setup screen



| | |
|---|--|
| | Keys in CHANNELS SETUP menu screen: |
|  | PREV Previous help screen |
|  | NEXT Next help screen |
|  | Move between help screens. |
|  | Move back to EVENT SETUP screen |
|  | |
|  | Selects Voltage events setup. parameter to be modified |
|  | Changes selected parameter value. |
|  | Returns to the “MEASUREMENT SETUP” submenu. |

3.23.3 Alarm setup

Up to 7 different alarms, based on any measurement quantity which is measured by instrument, can be defined. See 5.1.14 for further details regarding measurement methods. Captured events can be observed through ALARMS TABLE screens. See 3.18 and 5.1.14 for details.

| ALARM SETUP  17:34 | | | | |
|--|---------------|-------------|----------|----------|
| Quantity | Phase | Cond. | Level | Duration |
| P+ | TOT | > | 230.0 kW | > 200 ms |
| Uh5 | L1 | > | 8.00 % | > 200 ms |
| I | L1 | > | 952.0 A | > 200 ms |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| ADD | REMOVE | EDIT | | |



 
| ALARM SETUP  12:33 | | | | |
|--|---------------|-------------|-------|----------|
| Quantity | Phase | Cond. | Level | Duration |
| Freq. | | | | > 200 ms |
| Uh5 | | | | > 200 ms |
| I | | | | > 200 ms |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| ADD | REMOVE | EDIT | | |









Figure 88: Alarm setup screens

Table 100: Description of Alarm setup

| | |
|--|---|
| 1 st column - Quantity (P+, Uh5, I, on figure above) | Select alarm from measurement group and then measurement itself.   |
| 2 nd column - Phase (TOT, L1, on figure above) | Select phases for alarms capturing <ul style="list-style-type: none"> • L1 – alarms on phase L₁; • L2 – alarms on phase L₂; • L3 – alarms on phase L₃; |

| | |
|--|--|
| | <ul style="list-style-type: none"> • LN – alarms on phase N; • L12 – alarms on line L₁₂; • L23 – alarms on line L₂₃; • L31 – alarm on line L₃₁; • ALL – alarms on any phase; • TOT – alarms on power totals or non-phase measurements (frequency, unbalance). |
| 3 rd column - Condition (">" on figure above) | Select triggering method: < trigger when measured quantity is lower than threshold (FALL); > trigger when measured quantity is higher than threshold (RISE); |
| 4 th column - Level | Threshold value. |
| 5 th column - Duration | Minimal alarm duration. Triggers only if threshold is crossed for a defined period of time. Note: It is recommended that for flicker measurement, recorder is set to 10 min. |

Table 101: Keys in Alarm setup screens

| | | |
|---|---------------|--|
|  | ADD | Adds new alarm. |
|  | REMOVE | Clears selected or all alarms:  |
|  | EDIT | Edits selected alarm. |
|  | | Enters or exits a submenu to set an alarm. |
|  | | Cursor keys. Selects parameter or changes value. |
|  | | Cursor keys. Selects parameter or changes value. |
|  | | Confirms setting of an alarm. Returns to the "MEASUREMENT SETUP" submenu. |

3.23.4 Signalling setup

Mains signalling voltage, called "ripple control signal" in certain applications, is a burst of signals, often applied at a non-harmonic frequency, that remotely control industrial equipment, revenue meters, and other devices.

Two different signalling frequencies can be defined. Signals can be used as a source for the user defined alarm and can also be included in recording. See section 3.23.3 for details how to set-up alarms. See section 3.14 for instructions how to start recording.

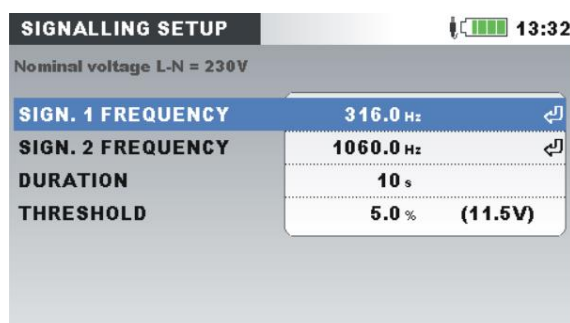






Figure 89: Signalling setup screen

Table 102: Description of Signalling setup

| | |
|--------------------------|--|
| Nominal voltage | Indication of type (L-N or L-L) and value of nominal voltage. |
| SIGN. 1 FREQUENCY | 1 st observed signalling frequency. |
| SIGN. 2 FREQUENCY | 2 nd observed signalling frequency. |
| DURATION | Duration of RMS record, which will be captured after threshold value is reached. |
| THRESHOLD | Threshold value expressed in % of nominal voltage, which will trigger recording of signalling event. |

Table 103: Keys in Signalling setup screen

| | |
|---|--|
|  | Enters or exits a submenu to set signalling frequency. |
|  | Toggles between given parameters. |
|  | Changes selected parameter. |
|  | Returns to the "MEASUREMENT SETUP" submenu. |

3.23.5 Rapid voltage changes (RVC) setup

RVC is a quick transition in RMS voltage occurring between two steady-state conditions, and during which the RMS voltage does not exceed the dip/swell thresholds.

A voltage is in a steady-state condition if all the immediately preceding 100/120 $U_{Rms(\frac{1}{2})}$ values remain within a set RVC threshold from the arithmetic mean of those 100/120 $U_{Rms(\frac{1}{2})}$ (100 values for 50 Hz nominal and 120 values for 60 Hz). The RVC threshold is set by the user according to the application, as a percentage of U_{Nom} , within 1 ÷ 6 %. See section 5.1.15 for details regarding RVC measurement. See section 3.14 for instructions how to start recording.

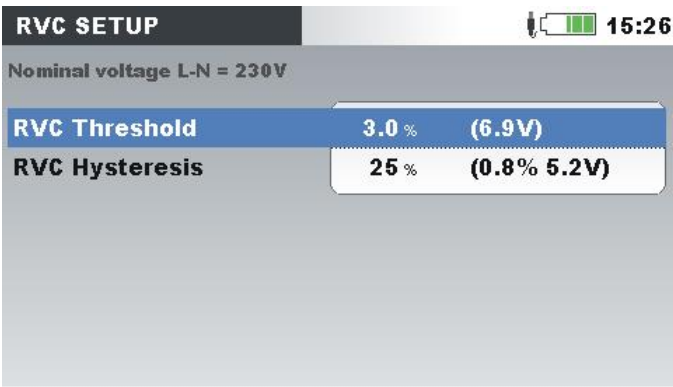





Figure 90: RVC setup screen

Table 104: Description of RVC setup

| | |
|-----------------|---|
| Nominal voltage | Indication of type (L-N or L-L) and value of nominal voltage. |
| RVC THRESHOLD | RVC threshold value expressed in % of nominal voltage for steady state voltage detection. |
| RVC HYSTERESIS | RVC hysteresis value expressed in % of RVC threshold. |

Table 105: Keys in RVC setup screen

| | |
|---|---|
|  | Toggles between given parameters. |
|  | Changes selected parameter. |
|  | Returns to the “MEASUREMENT SETUP” submenu. |

3.23.6 Measuring Methods setup

In this menu different measurement methods, file structure on the SD card, type of recording start time and transient selection can be selected, according to the local standards and practice. See section 5.1.5 for Modern Power measurement and 5.1.6 for Classic Vector and Arithmetic Power measurement details. Please note that instrument record all measurement (Classic and Modern), regardless of selected method.

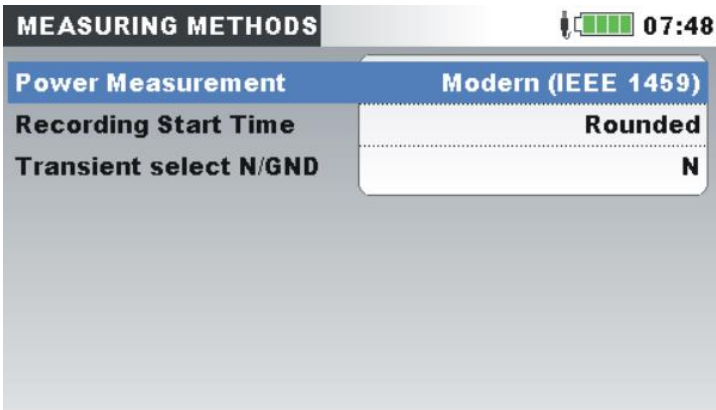


Figure 91: Measuring Methods setup screen – MI 2893

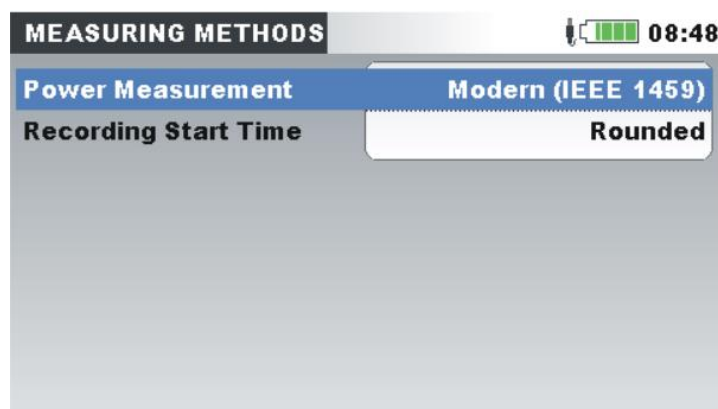





Figure 92: Measuring Methods setup screen – MI 2892/MI 2885

Table 106: Description of Measuring Methods setup

| | |
|-------------------------------|--|
| Power Measurements | Modern (IEEE 1459) measuring method. See section 5.1.5 for details. Classic (Vector) measuring method. See section 5.1.6 for details. Classic (Arithmetic) measuring method. See section 5.1.6 for details. |
| Record Start Time | Selection Recorder Start Time: <ul style="list-style-type: none"> Rounded – recorder start is postponed and synchronized with the clock (integer periods in one-hour period) Immediately – recorder starts on the next minute |
| Transient select N/GND | Transient selection measurement between Phase - Neutral or Phase – Ground (MI 2893 only) |

Table 107: Keys in Measuring Methods setup screen

| | |
|---|---|
|  | Toggles between given parameters. |
|  | Changes selected parameter. |
|  | Returns to the “MEASUREMENT SETUP” submenu. |

3.23.7 Transient setup

Note:

MI 2893 – Transient Recorder runs simultaneously with General Recorder

MI 2892/MI 2885 – Transient Recorder runs as independent recorder (could not run simultaneously with General Recorder).

In this menu parameters for transient trigger could be selected. It is possible to select trigger for:

- Phase voltage,
- Phase current,

- Neutral voltage,
- Neutral current.

Two different types of trigger could be defined:

- Selection to the voltage/current level,
- Envelope.

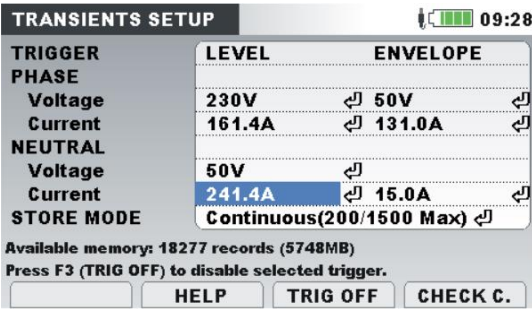


Figure 93: Transient setup screen – MI 2893



Figure 94: Transient setup screen – MI 2892/MI 2885

Note:
MI 2893 – all triggers could be activated at the same time

MI 2892/MI 2885 - only one trigger is available: Envelope: U or U_n or I or I_n ; Level: U or U_n or I or I_n

Table 108: Description of Transient setup

| | |
|----------|---|
| Help | Show triggering help screens. See 5.1.20 for details. |
| | |
| TRIG OFF | Deleting the trigger selection. |
| CHECK C. | Check connection settings. See 3.23.1 for details. |

3.24 General Setup submenu

From the “GENERAL SETUP” submenu communication parameters, real clock time, language, lock/unlock and colour model can be reviewed, configured and saved.

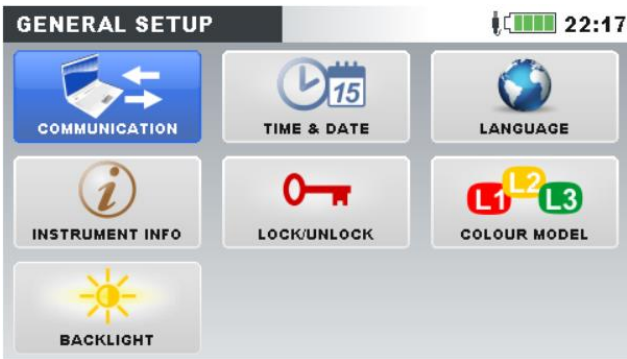
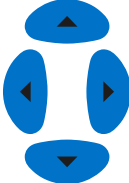




Figure 95: GENERAL SETUP submenu

Table 109: Description of General setup options

| | |
|-----------------|---|
| Communication | Setup communication source. |
| Time & Date | Set time, date and time zone. |
| Language | Select language. |
| Instrument info | Information about the instrument. |
| Lock/Unlock | Lock instrument to prevent unauthorized access. |
| Colour Model | Select colours for displaying phase measurements. |
| Backlight | Enable/Disable screen backlight. |

Table 110: Keys in General setup submenu

| | |
|---|--|
|  | Selects option from the “GENERAL SETUP” submenu. |
|  | Enters the selected option. |
|  | Returns to the “MAIN MENU” screen. |

3.24.1 Communication

- In this menu user can select instrument communication interface. There are four possibilities:
- USB communication. Instrument is connected to PC by USB communication cable
 - INTERNET communication. Instrument is connected to the internet, through local area network (Ethernet LAN). PowerView access to the instrument is made over internet and Metrel GPRS Relay server. See section 4.3 for details.
 - INTERNET (3G, GPRS). Instrument is connected to the internet over 3G or GPRS. This option minimises internet 3G traffic with Metrel GPRS Relay server and PowerView, in order to reduce

link cost. Instrument in idle state (while not connected to the PowerView) consume about 5MB/per day. See section 4.3 for details.

- **INTERNET (LAN).** Instrument is connected to the internet, through local area network (Ethernet LAN). IP address, Net mask, Primary DNS, Secondary DNS and Gateway are defined manually (DHCP disabled) or automatically (DHCP enabled). Port number should be defined manually. PowerView access to the instrument is made over internet. See section 4.3 for details.

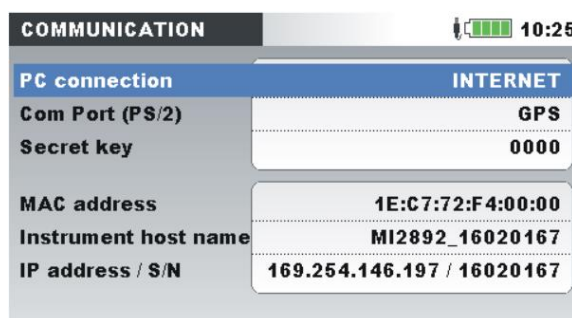


 



Figure 96: Communication setup screen


Table 111: Description of Communication setup options

| PC connection | Select USB or INTERNET, INTERNET (3G / GPRS), INTRANET (LAN) communication port. | | | | | | | | | | | | |
|--|--|-------|-------|------------|---------------|----------|---------------|-------------|---------|---------------|---------|---------|-------------|
| Com Port (PS/2) | Select GPS or MI 3108 / MI 3109 communication. GPS is used for A 1355 GPS receiver, and MI 3108 / MI 3109 for photovoltaics inverter measurements (See MI 3108/ MI 3109 User manual). | | | | | | | | | | | | |
| Modem used in A 1565 | Select this option if A 1622 WiFi / 3G modem is used within A 1565 Waterproof case for outdoor application and recordings | | | | | | | | | | | | |
| DHCP | Select Enabled in order to enable automatic network parameters assignment. Select Disabled in order to enter them manually. | | | | | | | | | | | | |
| <p>The screenshot shows the DHCP configuration screen with the following settings:</p> <table border="1"> <thead> <tr> <th>Field</th> <th>Value</th> </tr> </thead> <tbody> <tr> <td>IP address</td> <td>192.168.1.100</td> </tr> <tr> <td>Net Mask</td> <td>255.255.255.0</td> </tr> <tr> <td>Primary DNS</td> <td>0.0.0.0</td> </tr> <tr> <td>Secondary DNS</td> <td>0.0.0.0</td> </tr> <tr> <td>Gateway</td> <td>192.168.1.1</td> </tr> </tbody> </table> | | Field | Value | IP address | 192.168.1.100 | Net Mask | 255.255.255.0 | Primary DNS | 0.0.0.0 | Secondary DNS | 0.0.0.0 | Gateway | 192.168.1.1 |
| Field | Value | | | | | | | | | | | | |
| IP address | 192.168.1.100 | | | | | | | | | | | | |
| Net Mask | 255.255.255.0 | | | | | | | | | | | | |
| Primary DNS | 0.0.0.0 | | | | | | | | | | | | |
| Secondary DNS | 0.0.0.0 | | | | | | | | | | | | |
| Gateway | 192.168.1.1 | | | | | | | | | | | | |
| Secret key | Valid only if INTERNET communication is selected. Secret number will assure additional protection of communication link. Same number should be entered in PowerView v3.0, before connection establishment. | | | | | | | | | | | | |
| MAC address | Instrument Ethernet MAC address. | | | | | | | | | | | | |
| Instrument host name | Instrument host name. | | | | | | | | | | | | |
| Instrument IP address | Instrument IP address. | | | | | | | | | | | | |

Note: For more information regarding configuration, how to download data, view real time measuring data on PowerView and establish Remote instrument connection with PowerView over internet and USB communication interfaces, see section 4.3 and PowerView Instruction manual.

Table 112: Keys in Communication setup

| | |
|---|---|
|  | Changes communication source: USB, INTERNET, INTERNET (3G, GPRS) Moves cursor position during entering Secret key. |
|  | Cursor keys. Selects parameter. Changes Secret key number. |
|  | Enters Secret key edit window. |
|  | Returns to the "GENERAL SETUP" submenu. |

 

3.24.2 Time & Date

Time, date and time zone can be set in this menu.




 


Figure 97: Set date/time screen

Table 113: Description of Set date/time screen

| | |
|--------------------------------|--|
| Clock source | Show clock source: RTC – internal real time clock GPS – external GPS receiver Note: GPS clock source is automatically set if GPS is enabled and detected. |
| Time zone | Selects time zone. Note: MI 2893/MI 2892/MI 2885 has the ability to synchronize its system time clock with Coordinated Universal Time (UTC time) provided by externally connected GPS module. In that case only time zone (in 15 min intervals) can be adjusted. In order to use this functionality, see 4.2.6. |
| Current Time & Date | Show/edit current time and date (valid only if RTC is used as time source) |



Table 114: Keys in Set date/time screen

| | |
|---|--|
|  | Selects parameter to be changed. |
|  | Modifies parameter. Selects between the following parameters: hour, minute, second, day, month or year. |
|  | Enters Date/time edit window. |
|  | Returns to the "GENERAL SETUP" submenu. |

3.24.3 Language

Different languages can be selected in this menu.

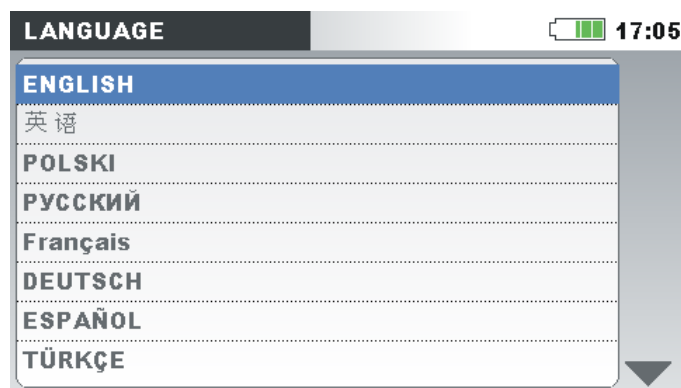





Figure 98: Language setup screen

Table 115: Keys in Language setup screen

| | |
|---|---|
|  | Selects language. |
|  | Confirms the selected language. |
|  | Returns to the "GENERAL SETUP" submenu. |

3.24.4 Instrument info

Basic information concerning the instrument (company, user data, serial number, firmware and hardware version, transient module firmware, hardware version and instrument calibration date) can be viewed in this menu.

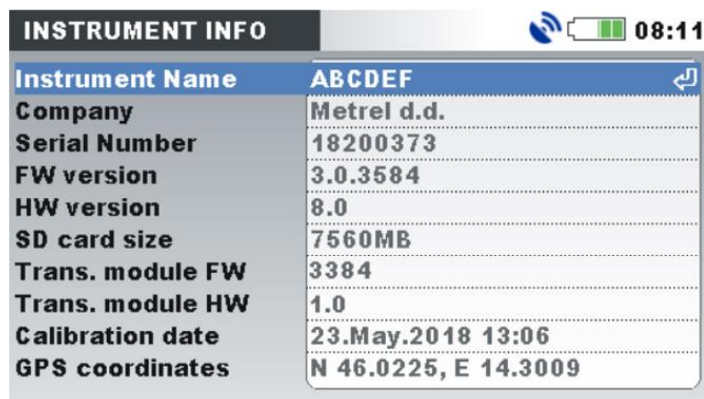


Figure 99: Instrument info screen – MI 2893

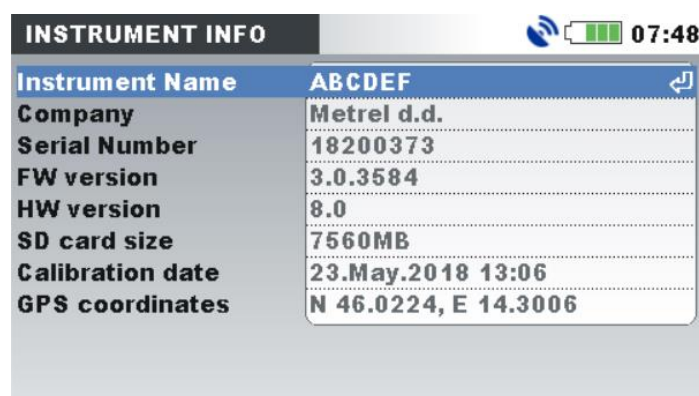


Figure 100: Instrument info screen – MI 2892/MI 2885

Table 116: Description of Instrument info screen

| | |
|-------------------------|---|
| Instrument name | User specified instrument name (up to 6 characters) |
| Company | Company name |
| Serial number | Instrument serial number |
| FW version | Instrument FW version |
| HW version | Instrument HW version |
| SD card size | Total memory on the SD card |
| Trans. module FW | Transient module FW version |
| Trans. module HW | Transient module HW version |
| Calibration date | Instrument calibration date |
| GPS coordinates | GPS coordinates logged in the instrument location Note: presented only in case, when GPS is connected to instrument |

Table 117: Keys in Instrument info screen

| | |
|------------|---|
| ESC | Returns to the "GENERAL SETUP" submenu. |
|------------|---|

3.24.5 Lock/Unlock

MI 2893/MI 2892/MI 2885 have the ability to prevent unauthorized access to all important instrument functionality by simply locking the instrument. If instrument is left for a longer period at an unsupervised measurement spot, it is recommended to prevent unintentional stopping of record, instrument or measurement setup modifications, etc. Although instrument lock prevents unauthorized changing of instrument working mode, it does not prevent non-destructive operations as displaying current measurement values or trends.

User locks the instrument by entering secret lock code in the Lock/Unlock screen.

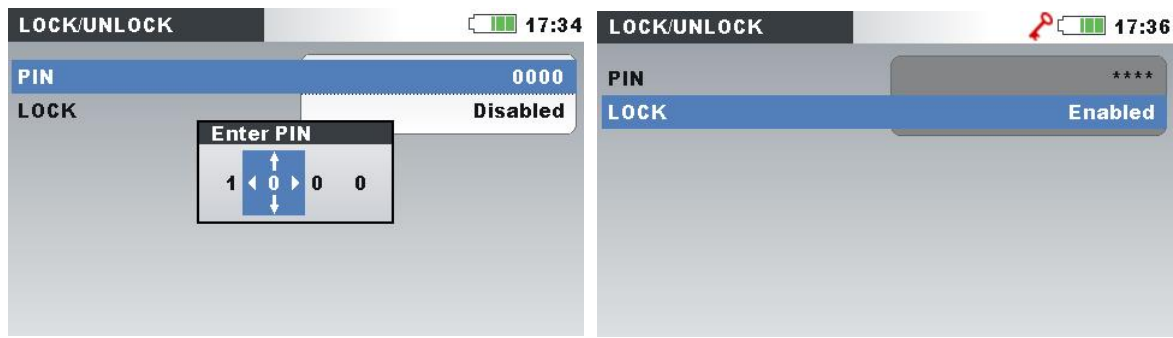


Figure 101: Lock/Unlock screen

Table 118: Description of Lock/Unlock screen

| | |
|------|---|
| Pin | Four-digit numeric code used for Locking/Unlocking the instrument. Press ENTER key for changing the Pin code. “Enter PIN” window will appear on screen. Note: Pin code is hidden (****), if the instrument is locked. |
| Lock | The following options for locking the instrument are available: <ul style="list-style-type: none">• Disabled• Enabled |

Table 119: Keys in Lock/Unlock screen





| | |
|---|--|
|  | Selects parameter to be modified. Change value of the selected digit in Enter pin window. |
|  | Selects digit in Enter pin window. Locks the instrument. Opens Enter pin window for unlocking. |
|  | Opens Enter pin window for pin modification. Accepts new pin. Unlocks the instrument (if pin code is correct). |
|  | Returns to the “GENERAL SETUP” submenu. |

Table 120: Locked instrument functionality

| | |
|--------------|-----------------|
| MEASUREMENTS | Allowed access. |
|--------------|-----------------|

| | |
|-------------------|---|
| | Waveform snapshot functionality is blocked. |
| RECORDERS | No access. |
| MEASUREMENT SETUP | No access. |
| GENERAL SETUP | No access except to Lock/Unlock menu. |

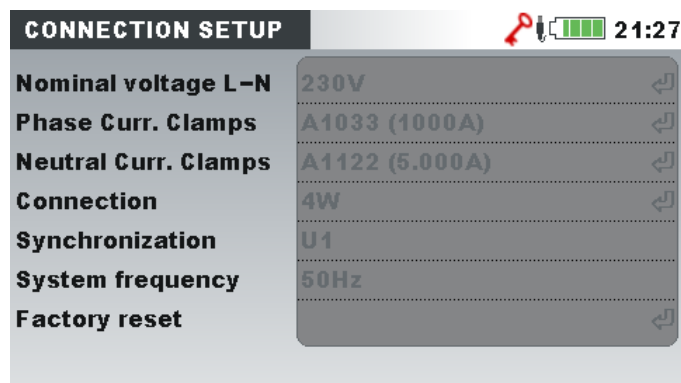


Figure 102: Locked instrument screen

Note: In case user forget unlock code, general unlock code “7350” can be used to unlock the instrument.

3.24.6 Colour model

In COLOUR MODEL menu, user can change colour representation of phase voltages and currents, according to the customer needs. There are some predefined colour schemes (EU, USA, etc.) and a custom mode where user can set up its own colour model.


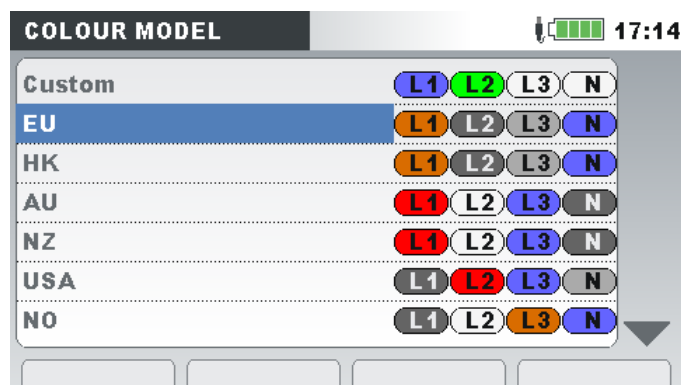


Figure 103: Colour representation of phase voltages

Table 121: Keys in Colour model screens

| | | |
|-----------|-------------|--|
| F1 | EDIT | Opens edit colour screen (only available in custom model). |
|-----------|-------------|--|

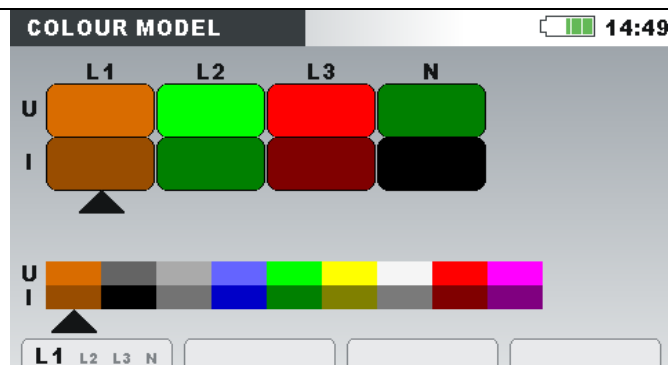

Keys in Edit colour screen:

| | | |
|--|-------------------|--|
| | L1 L2 L3 N | Shows selected colour for phase L1. |
| | L1 L2 L3 N | Shows selected colour for phase L2. |
| | L1 L2 L3 N | Shows selected colour for phase L3. |
| | L1 L2 L3 N | Shows selected colour for neutral channel N. |

Selects colour.

Returns to the “COLOUR MODEL” screen.

Selects Colour scheme.

Confirms selection of Colour scheme and returns to the “GENERAL SETUP” submenu.

Returns to the “GENERAL SETUP” submenu without modifications.

3.24.7 Backlight

In BACKLIGHT menu, user can define if LCD will be switched OFF automatically after predefined time. LCD is switched OFF in two steps:

- LCD dimmer timer
- LCD OFF timer (followed by LCD dimmer timer)

 
 




Figure 104: Backlight screen

Table 122: Description Backlight screen

| | |
|-----------------------|--|
| Backlight auto | ON – Enabling LCD dimmer and off function OFF – Disabling LCD dimmer and off function |
| Backlight dimm | Timer after which the LCD is dimmed (OFF, 1 120 min) |
| Backlight off | Timer after which the LCD is turned OFF (after activation of Backlight dim) (OFF, 1 120 min) |

Table 123: Keys in Backlight screen

| | |
|---|--|
|  | Selects parameter. |
|  | Selects parameter. |
|  | Entering into selected parameter / confirms parameter. |
|  | Returns to the “GENERAL SETUP” submenu. |

4 Recording Practice and Instrument Connection

In following section recommended measurement and recording practice is described.

4.1 Measurement campaign

Power quality measurements are specific type of measurements, which can last many days, and mostly they are *performed* only once. Usually recording campaign is performed to:

- Statistically analyse some points in the network.
- Troubleshoot malfunctioning device or machine.


Since measurements are mostly *performed* only once, it is very important to properly set measuring equipment. Measuring with wrong settings can lead to false or useless measurement results. Therefore, instrument and user should be fully prepared before measurement begins.


In this section recommended recorder procedure is shown. We recommend to strictly follow guidelines in order to avoid common problems and measurement mistakes. Figure below shortly summarizes recommended measurement practice. Each step is then described in details.

Note: PC software PowerView v3.0 has the ability to correct (after measurement is done):

- wrong real-time settings,
- wrong current and voltage scaling factors,
- voltage unbalance.

False instrument connection (messed wiring, opposite clamp direction), can't be fixed afterwards.

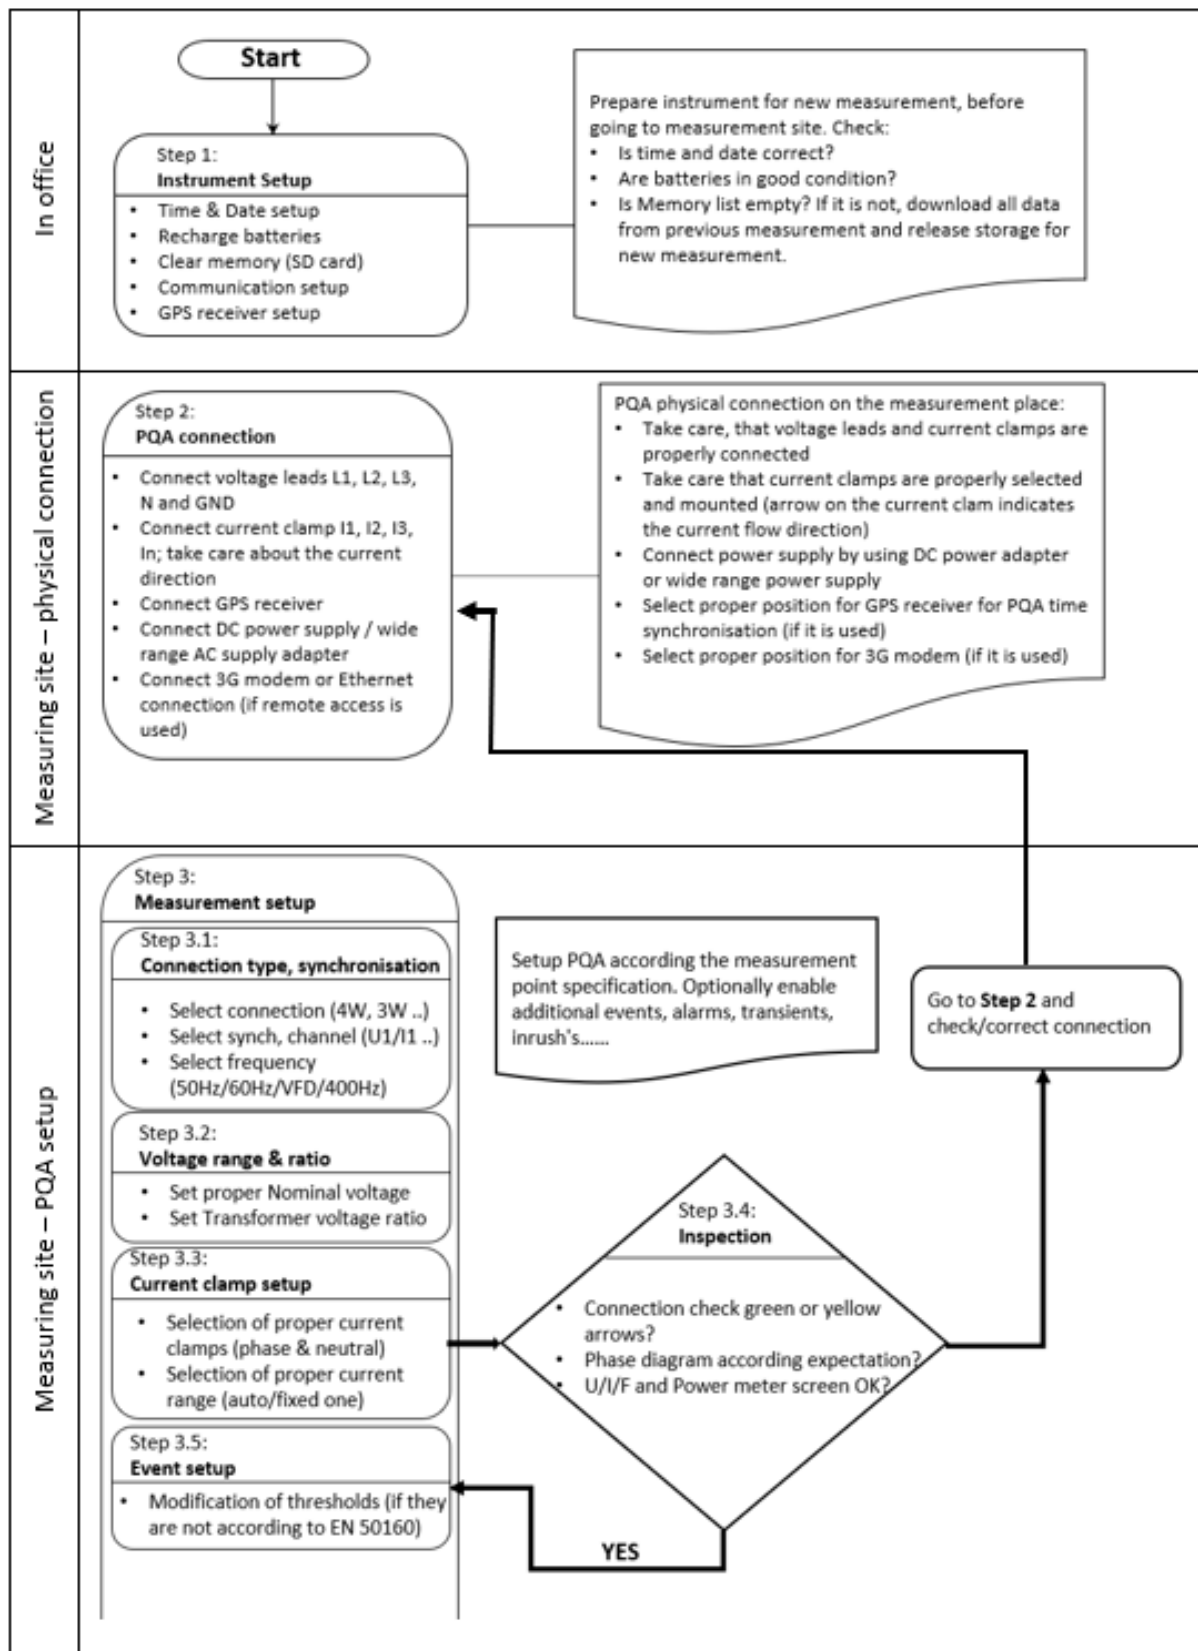

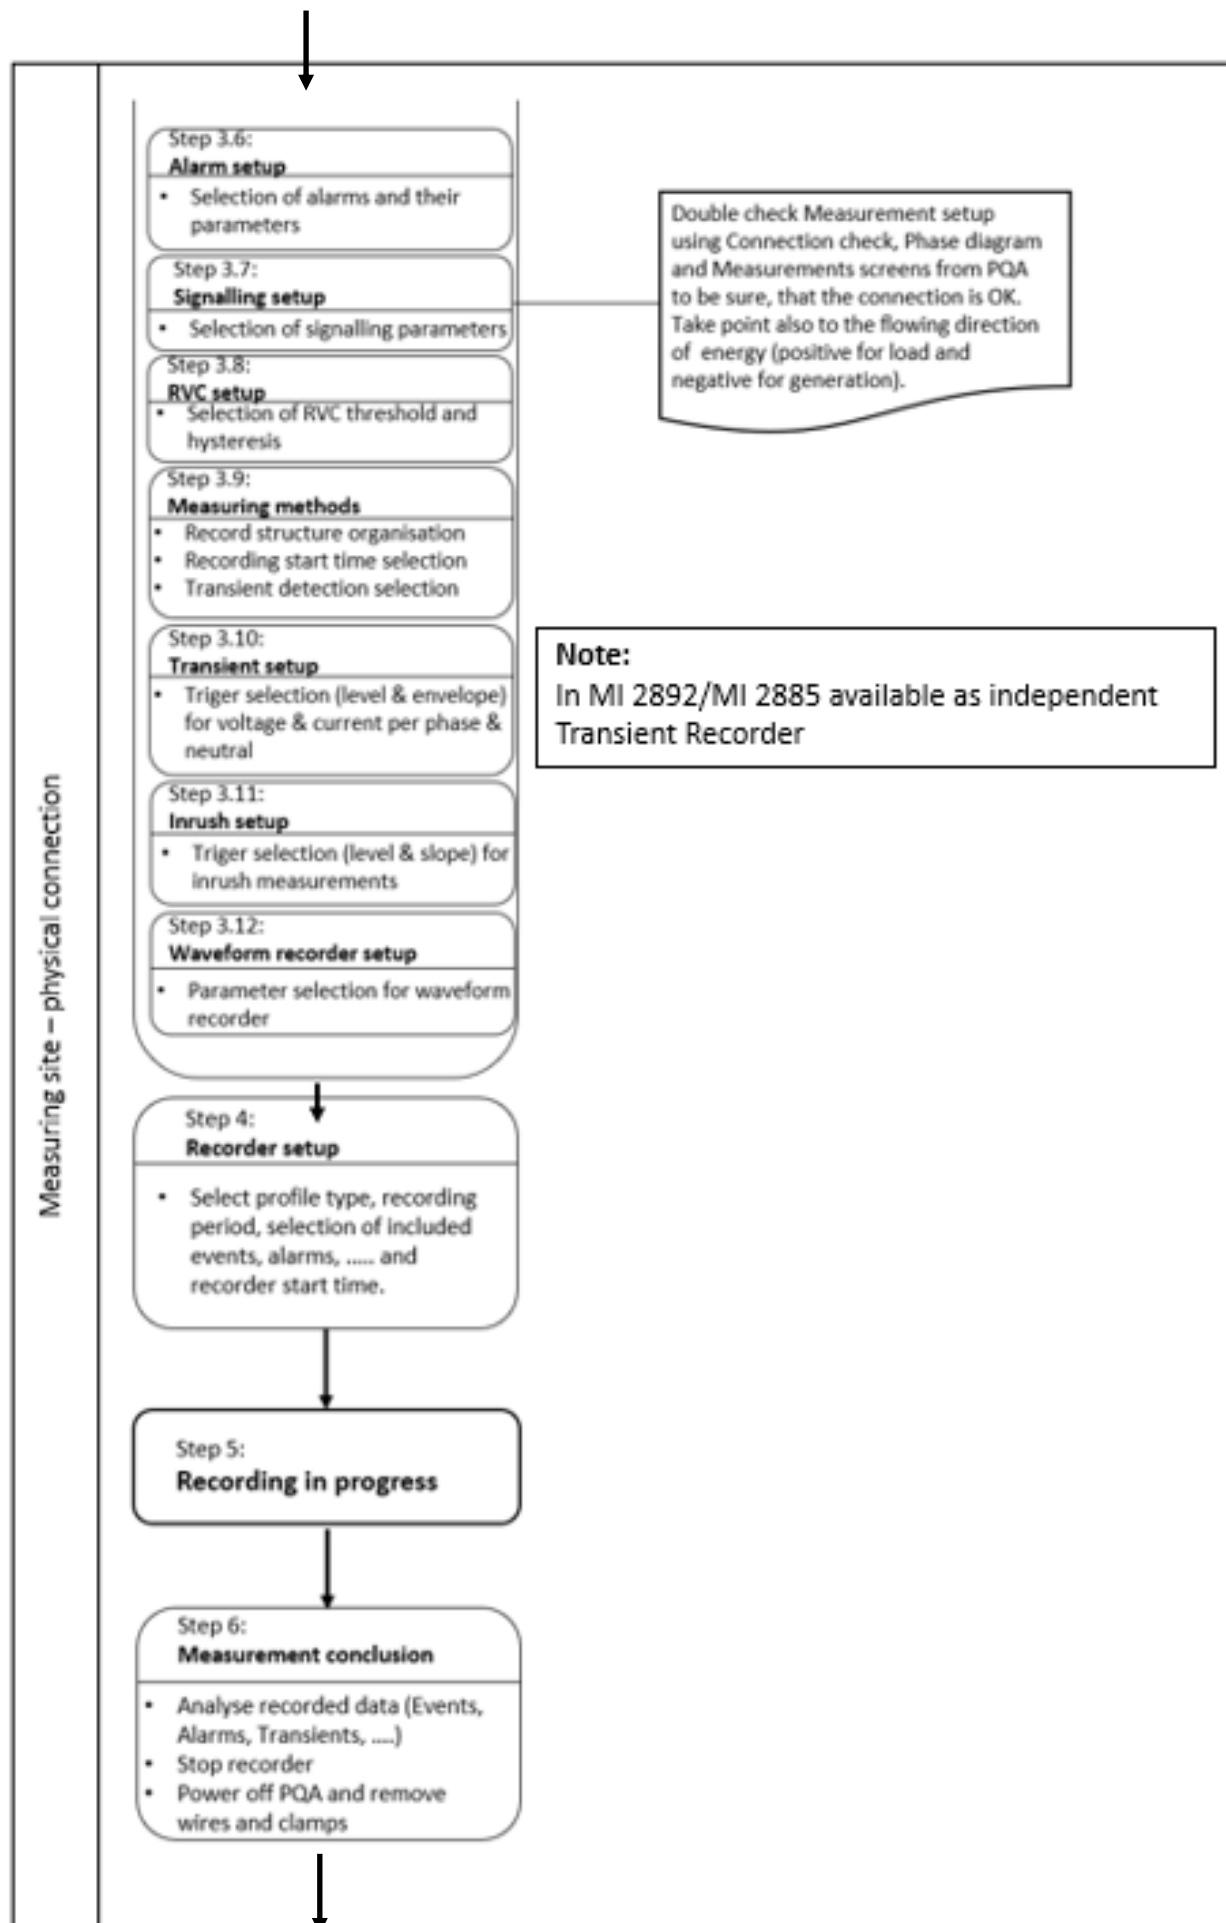

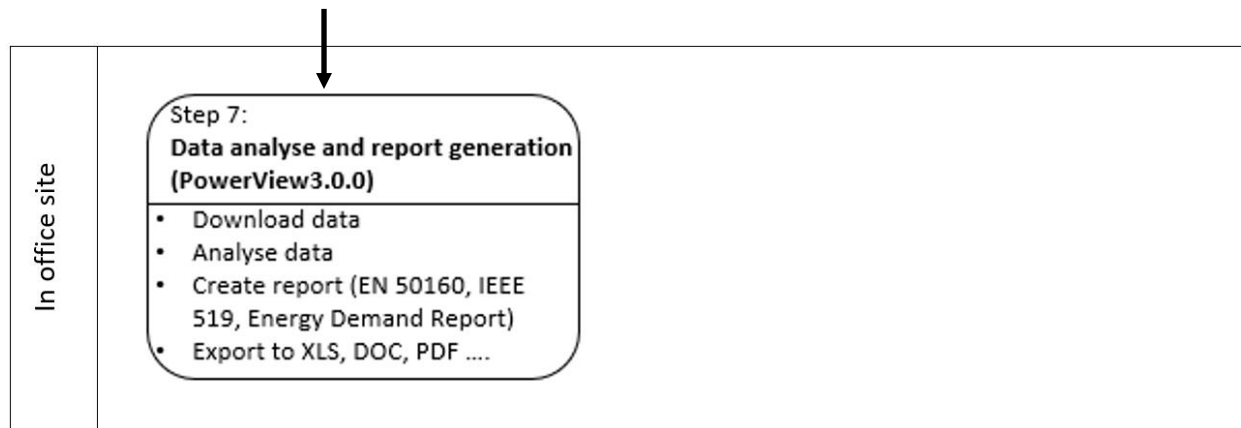


Figure 105: Recommended measurement practice

Step 1: Instrument setup

On site measurements can be very stressful, and therefore it is good practice to prepare measurement equipment in an office. Preparation of MI 2893/MI 2892/MI 2885 include following steps:

- Visually check instrument and accessories.
Warning: Don't use visually damaged equipment!
- Always use batteries that are in good condition and fully charge them before you leave an office.
Note: In problematic PQ environment where dips and interrupts frequently occur instrument power supply fully depends on batteries! Keep your batteries in good condition.
- Download all previous records from instrument and clear the memory. (See section 3.19 for instruction regarding memory clearing).
- Set instrument time and date. (See section 3.24.2 for instruction regarding time and date settings).

Step 2: PQI connection

Take care for the proper connection of voltage leads and current clamps (current direction). Voltage and current sequence should be correct to fulfil the requirements from the power quality standard positive sequence, load or generation measurement). In case, that GPS receiver is used for accurate time synchronisation, connect in in the proper place to enable good signal receiving.

Step 3: Measurement setup

Measurement setup adjustment is *performed* on measured site, after we find out details regarding nominal voltage, currents, type of wiring etc.

Step 3.1: Connection type, synchronisation

- Connect current clamps and voltage tips according to the "Device under measurement" (See section 4.2 for details).
- Select proper type of connection in "Connection setup" menu (See section 3.23.1 for details).
- Select synchronization channel. Synchronization to voltage is recommended, unless measurement is performed on highly distorted loads, such as PWM drives. In that case current synchronization can be more appropriate. (See section 3.23.1 for details).
- Select System frequency. System frequency is default mains system frequency. Setting this parameter is recommended if to measure signalling or flickers.

Step 3.2: Nominal voltage and ratio

- Select instrument nominal voltage according to the network nominal voltage.
Note: For 4W and 1W measurement all voltages are specified as phase-to-neutral (L-N). For 3W and Open Delta measurements all voltages are specified as phase-to-phase (L-L).
Note: Instrument assures proper measurement up to 150 % of chosen nominal voltage.
- In case of indirect voltage measurement, select appropriate "Voltage ratio" parameters, according to transformer ratio. (See section 3.23.1 and 4.2.2 for details).

Step 3.3: Current clamps setup


- Using "Select Clamps" menu, select proper Phase and Neutral channel current clamps (see sections 3.23.1 for details).
- Select proper clamps parameters (measuring range: automatic or fixed one) according to the type of connection (see section 4.2.3 for details).

Step 3.4: Inspection

After setup instrument and measurement is finished, user need to re-check if everything is connected and configured properly. Following steps are recommended:

- Using PHASE DIAGRAM menu check if voltage and current phase sequence is right regarding to the system. Additionally, check if current has right direction.
- Using U, I, f menu check if voltage and current have proper values.
- Check voltage and current THD.

Note: Excessive THD can indicate that too small range was chosen!

Note: In case of AD converter overvoltage or overloading current, icon  will be displayed.

- Using POWER menu check signs and indices of active, nonactive, apparent power and power factor.

If any of these steps give you suspicious measurement results, return to Step 2 and double check measurement setup parameters.

Step 3.5: Event setup

Select threshold values for: swell, dip and interrupts (see sections 3.23.2 and 3.17 for details).

Note: You can also trigger WAVEFORM RECORDER on events. Instrument will then capture waveform and inrush for each event.

Step 3.6: Alarm setup

Use this step if you would like only to check if some quantities cross some predefined boundaries (see sections 3.18 and 3.23.3 for details).

Note: You can also trigger WAVEFORM RECORDER on alarms. Instrument will then capture waveform and inrush for each alarm.

Step 3.7: Signalling setup

Use this step only if you are interested in measuring mains signalling voltage. See section 3.23.4 for details.

Step 3.8: RVC setup

Use this step if you are interested in detection of rapid voltage changes (RVC). See section 3.23.4 for details.

Step 3.9: Measuring methods

Select parameters related to the data structure organisation on the SD card, type of recorder starts time and transient selection. See section 3.23.4 for details.

Step 3.10: Transient setup (MI 2893 only; on MI 2892/MI 2885 Transient Recorder run as independent one – not simultaneously with the General Recorder)

Select parameters for defining triggers for capturing the transients, separate for voltage and currents. See section 3.23.4 for details.

Step 3.11: Inrush setup

Select parameters for defining trigger for capturing the inrush current. See section 3.23.4 for details.

Step 3.12: Waveform recorder setup

Select parameters for defining trigger for waveform recorder. See section 3.23.4 for details.

Step 4: Recorder setup and recording

Using GENERAL RECORDER menu select type of recording and configure recording parameters such as:

- Time Interval for data aggregation (Integration Period)
- Include events, alarms, ... capture if necessary. Waveforms will be automatically captured for selected options.
- Recording start time (optional)
- After setting recorder, recording can be started (see section 3.14 for recorder details).

Note: Available memory status in Recorder setup should be checked before starting recording. Max. recording duration and max. number of records are automatically calculated according to recorder setup and memory size.

Note: Recording usually takes several days. Assure that instrument during recording session is not reachable to the unauthorized persons. If necessary, use LOCK functionality described in section 3.24.5.

Note: If during record session instrument batteries are drained, due to long interruption for example, instrument will shut down. After electricity comes back, instrument will automatically start new recording session.

Step 5: Recording in progress

Press START button to start recording with all simultaneous registration of included network events.

Step 6: Measurement conclusion

Before leaving measurement site we need to:

- Preliminary evaluate recorded data using TREND screens.
- Stop recorder.
- Assure that we record and measure everything we needed.

Step 7: Data analyse and report generation (PowerView v3.0)

Download records using PC software PowerView v3.0 perform analysis and create reports. See PowerView v3.0 manual for details.

4.2 Connection setup

4.2.1 Connection to the LV Power Systems

This instrument can be connected to different type of networks. Proper connection should be selected to obtain the reliable results.

The actual connection scheme has to be defined in CONNECTION SETUP menu (see Figure below).

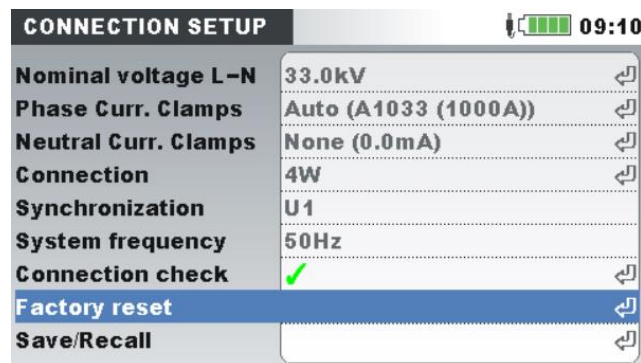


Figure 106: Connection setup menu

When connecting the instrument, it is essential that both current and voltage connections are correct. In particular the following rules have to be observed:

Clamp-on current clamp-on transformers

- The arrow marked on the clamp-on current transformer should point in the direction of current flow, from supply to load.
- If the clamp-on current transformer is connected in reverse the measured power in that phase would normally appear negative.

Phase relationships

- The clamp-on current transformer connected to current input connector I_1 has to measure the current in the phase line to which the voltage probe from L_1 is connected.

3-phase 4-wire system (4W)

In order to select this connection scheme, choose following connection on the instrument:

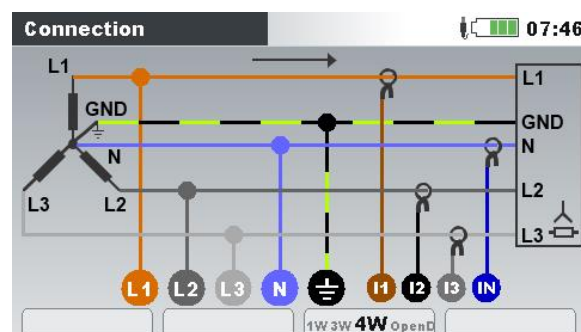


Figure 107: Choosing 3-phase 4-wire system on instrument

Instrument should be connected to the network according to figure below:

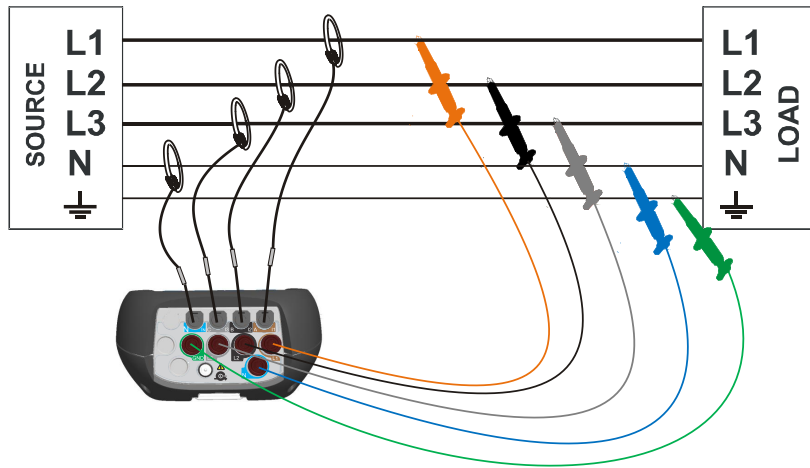


Figure 108: 3-phase 4-wire system

3-phase 3-wire system (3W)

In order to select this connection scheme, choose following connection on the instrument:

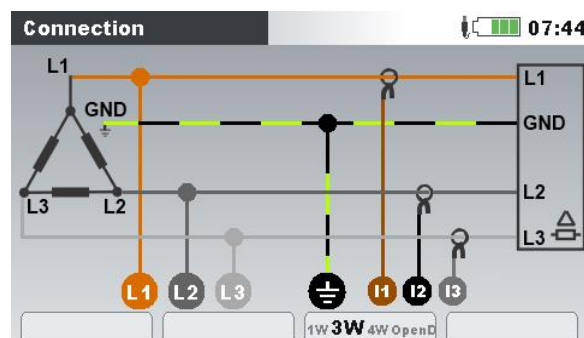


Figure 109: Choosing 3-phase 3-wire system on instrument

Instrument should be connected to the network according to figure below.

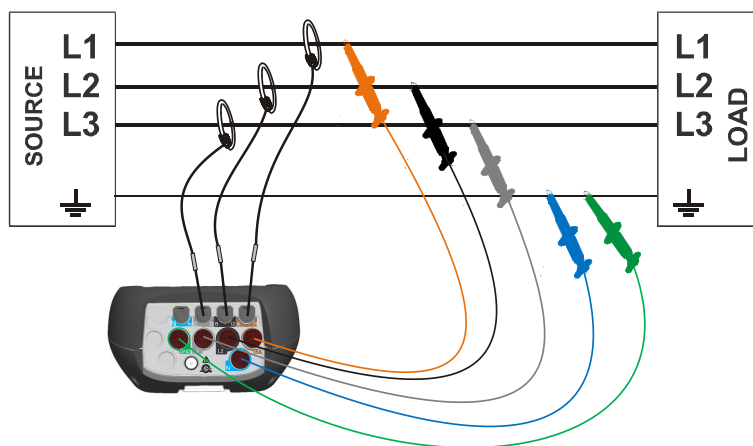


Figure 110: 3-phase 3-wire system

Open Delta (Aaron) 3-wire system (OpenD)

In order to select this connection scheme, choose following connection on the instrument:

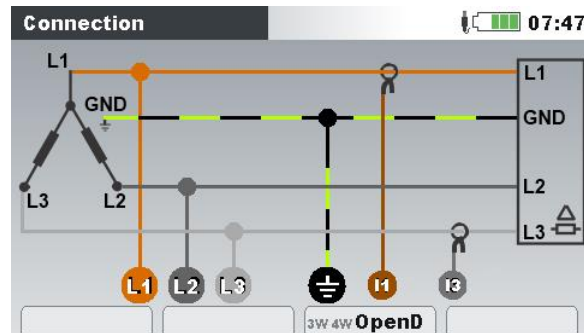


Figure 111: Choosing Open Delta (Aaron) 3-wire system on instrument

Instrument should be connected to the network according to figure below.

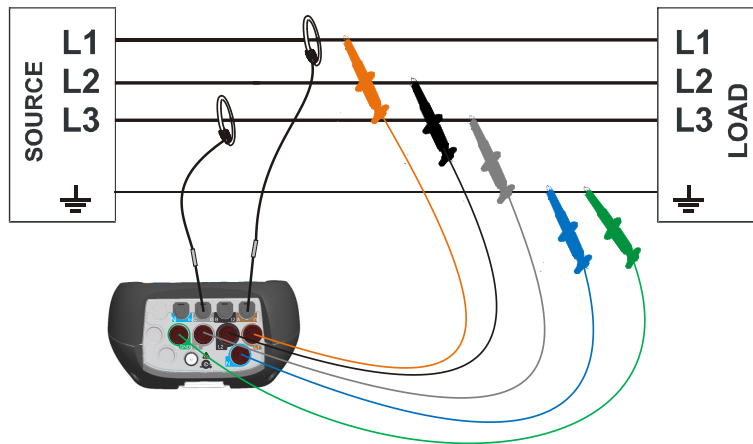


Figure 112: Open Delta (Aaron) 3-wire system

1-phase 3-wire system (1W)

In order to select this connection scheme, choose following connection on the instrument:

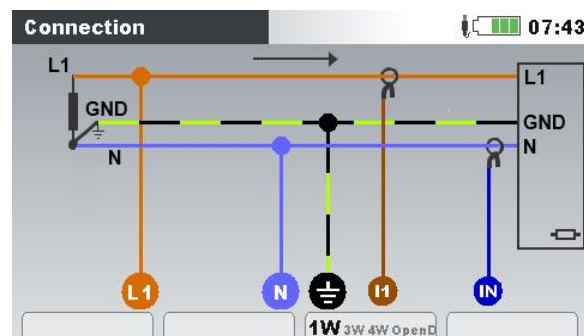


Figure 113: Choosing 1-phase 3-wire system on instrument

Instrument should be connected to the network according to figure below.

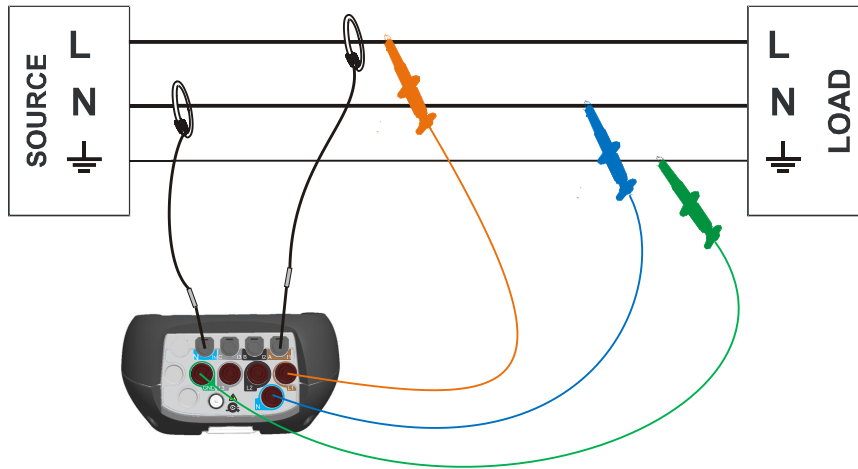


Figure 114: 1-phase 3-wire system

Note: In case of events capturing, it is recommended to connect unused voltage terminals to N voltage terminal.

2-phase 4-wire system (2W)

In order to select this connection scheme, choose following connection on the instrument:

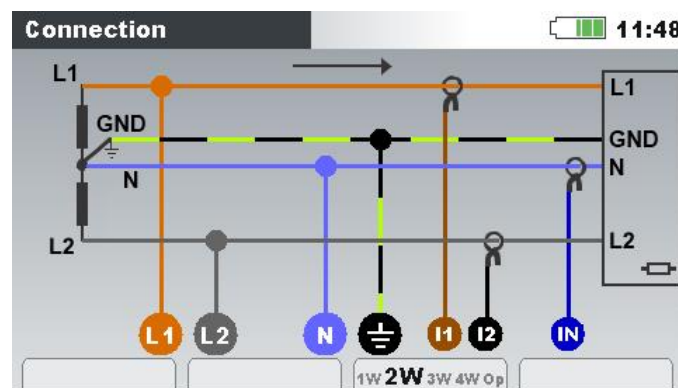


Figure 115: Choosing 2-phase 4-wire system on instrument

Instrument should be connected to the network according to figure below.

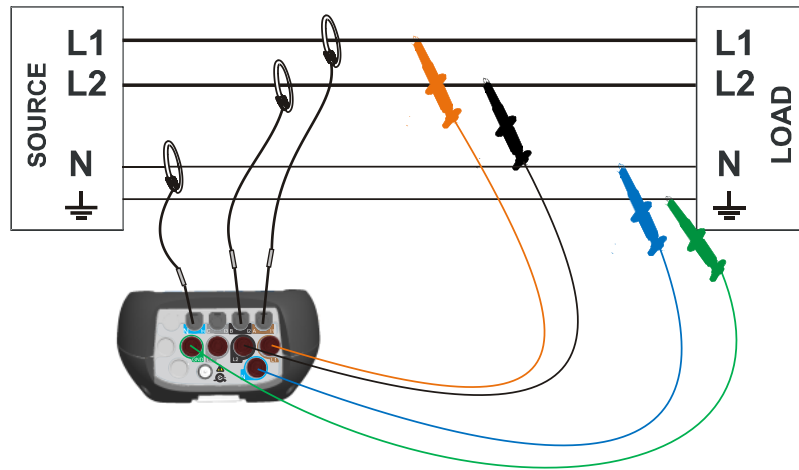


Figure 116: 2-phase 4-wire system

Note: In case of events capturing, it is recommended to connect unused voltage terminal to N voltage terminal.

Single - phase Inverter (INV1W)

In order to select this connection scheme, choose following connection on the instrument:

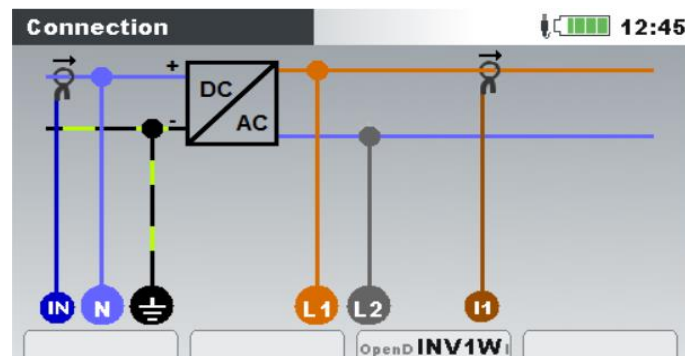


Figure 117: Choosing single- phase Inverter system on instrument

Instrument should be connected to the network according to figure below.

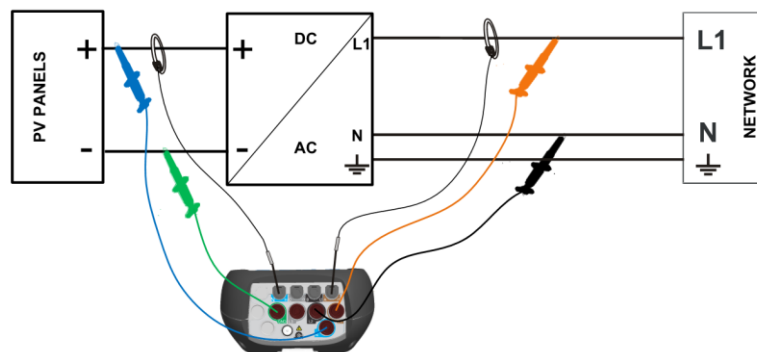


Figure 118: Single – phase inverter system

Note: In case of events capturing, it is recommended to connect unused voltage terminal to N voltage terminal.

Three - phase photovoltaic Inverter (INV3W)

In order to select this connection scheme, choose following connection on the instrument:

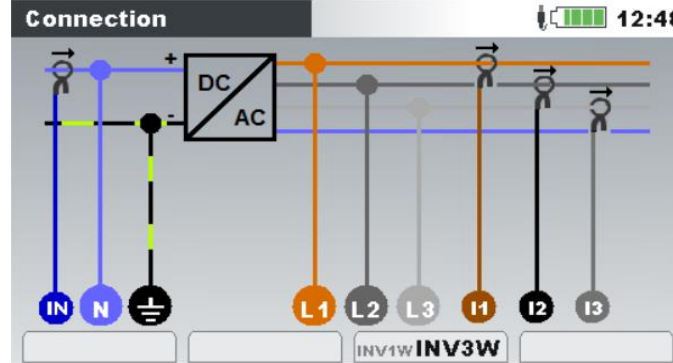


Figure 119: Choosing three- phase Inverter system on instrument

Instrument should be connected to the network according to figure below.

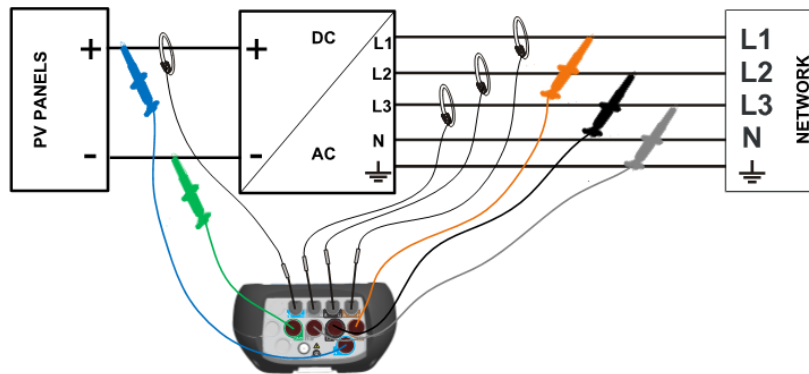


Figure 120: Three – phase inverter system

4.2.2 Connection to the MV or HV Power System

In systems where voltage is measured at the secondary side of a voltage transformer (for example: 11 kV / 110 V), the voltage transformer ratio should be entered. Afterward nominal voltage can be set to ensure correct measurement. In the next figure settings for this particular example is shown. See 3.23.1 for details.

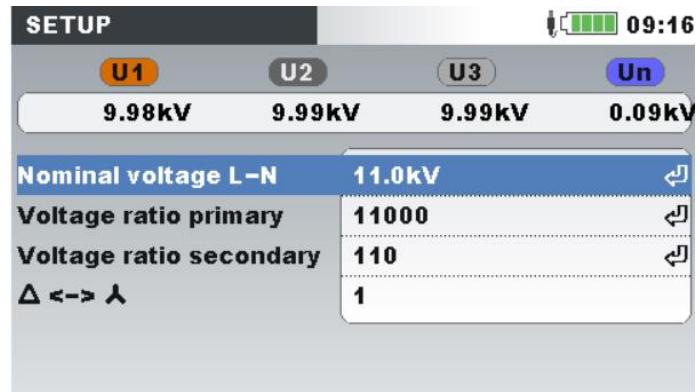


Figure 121: Voltage ratio for 11 kV / 110 transformer example

Instrument should be connected to the network according to figure below.

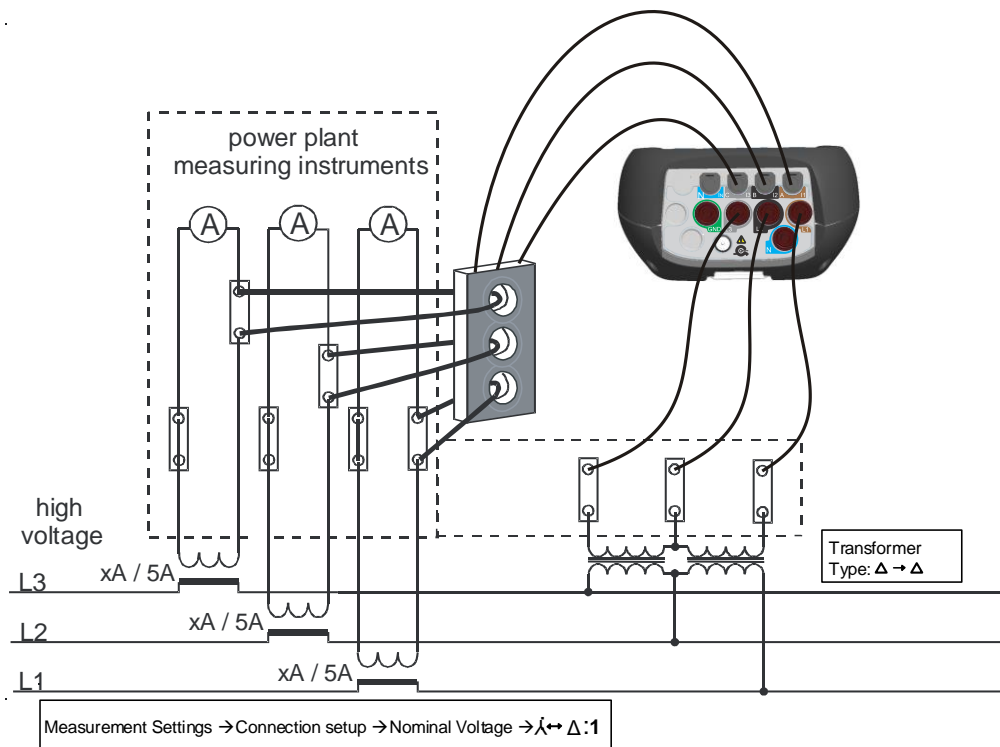


Figure 122: Connecting instrument to the existing current transformers in medium voltage system (Aaron / OpenDelta)

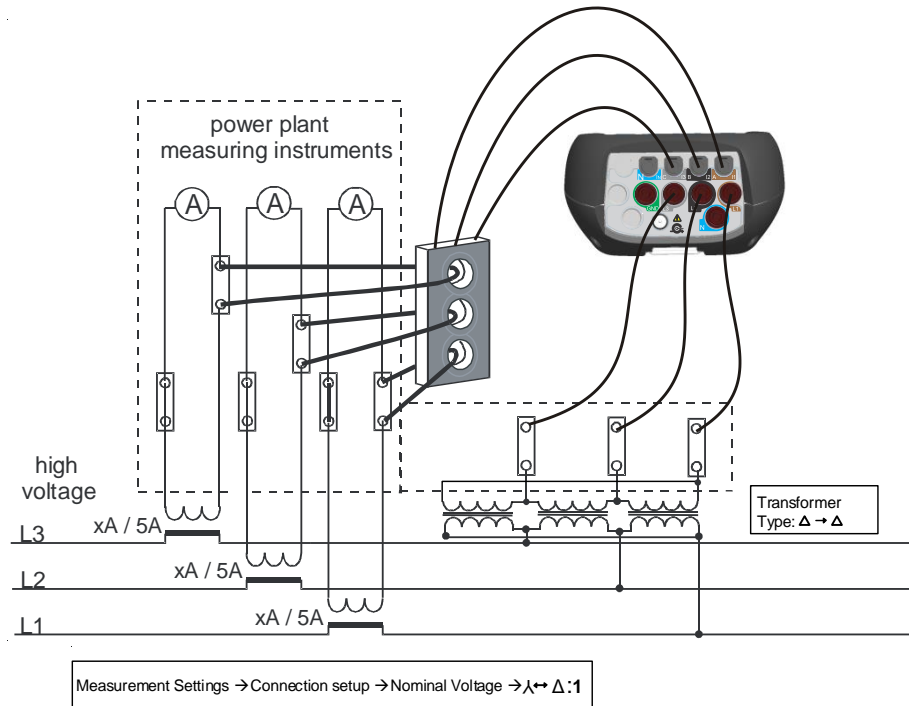


Figure 123: Connecting instrument to the existing current transformers in medium voltage system (Delta – Delta)

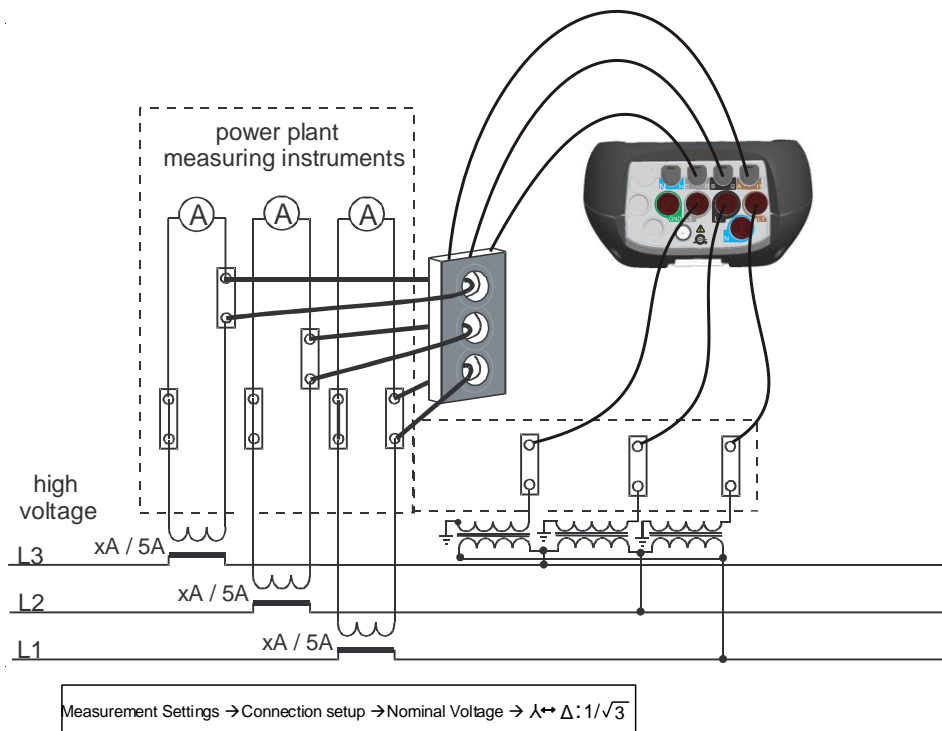


Figure 124: Connecting instrument to the existing current transformers in medium voltage system (Delta – Star)

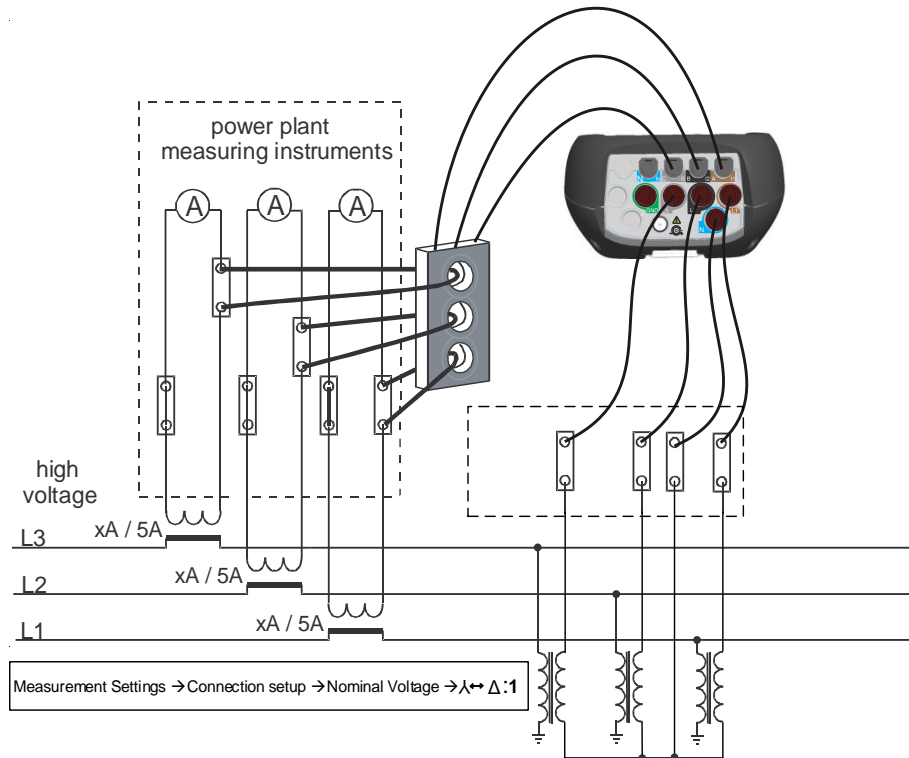


Figure 125: Connecting instrument to the existing current transformers in medium voltage system (Star – Star)

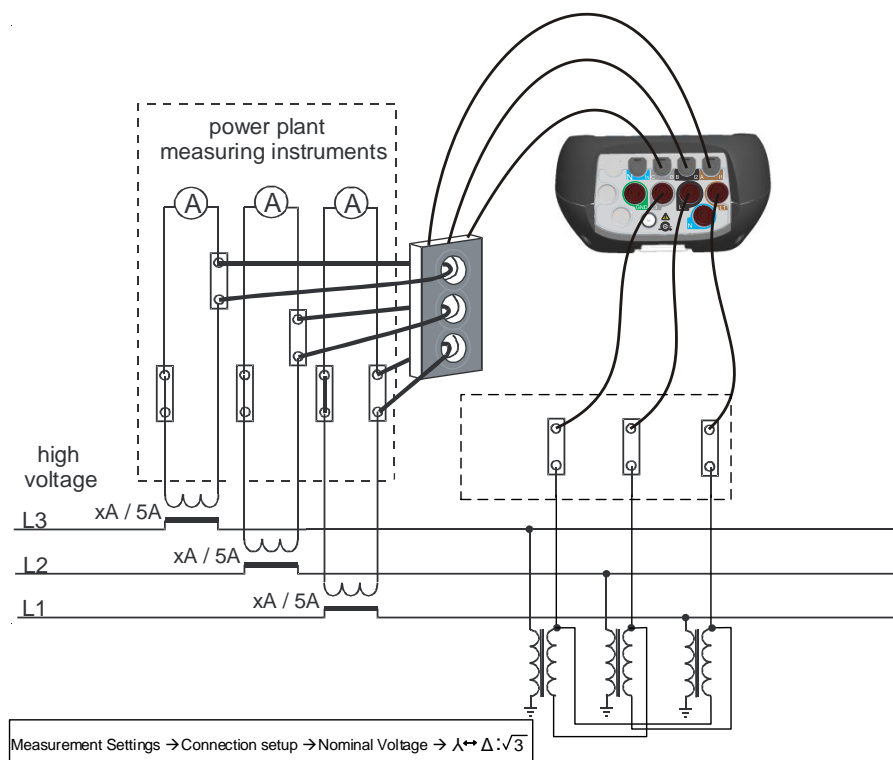


Figure 126: Connecting instrument to the existing current transformers in medium voltage system (star – delta)

4.2.3 Current clamp selection and transformation ratio setting

Clamp selection can be explained by two typical use cases: **direct current measurement** and **indirect current measurement**. In next section recommended practice for both cases is shown.

Auto range current clamp operation

Most of Metrel current clamps are developed as Smart clamps. They are automatically recognised by the instrument. Most of clamps support more different current ranges, for example 30/300/3000 A (Current clamps A 1501/A 1502/A 1227/A 1445/A 1582). Power Quality Instrument could operate in so called “Auto” range, where instrument automatically select the most optimal current clamp range. In this case, the most accurate current measurements are guaranteed.

Note 1: In case of “auto range” selection, Inrush measurements are not reliable.

Note 2: In case of “auto range” selection, synchronisation could not be selected to current.

Note 3: Current clamps with external current range (range selection on the clamps itself) selection does not support “auto range”.

Note 4: Current clamp needs specific time during current range changing to stabilize the readings (stabilization time is bigger for flex than for iron clamps). During stabilization time, current values are not presented (for the registration periods, shorter than 1 minute).

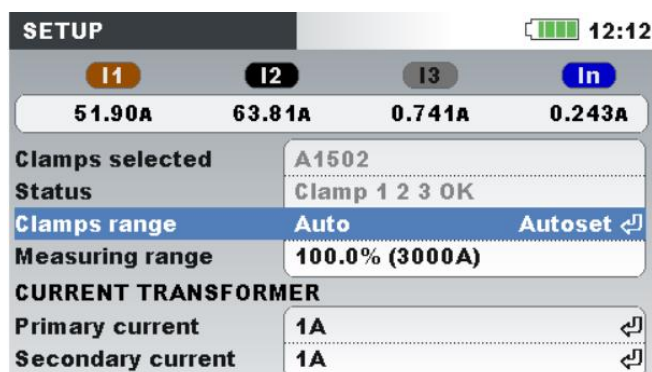


Figure 127: Smart current clamps auto range selection

Direct current measurement with clamp-on current transformer

In this type of measurement load/generator current is measured directly with one of clamp-on current transformer. Current to voltage conversion is **performed directly** by the clamps.

Direct current measurement can be *performed* by any clamp-on current transformer. We particularly recommend Smart clamps: flex clamps A 1502, A1227 and iron clamps A1281, A 1588 for example. Also, other Metrel clamp models A1033 (1000 A), A1069 (100 A), etc. can be used. For more details about the current clamps, please check the Metrel's General catalogue.

In the case of large loads there can be few parallel feeders which can't be embraced by single clamps. In this case we can measure current only through one feeder as shown on figure below.

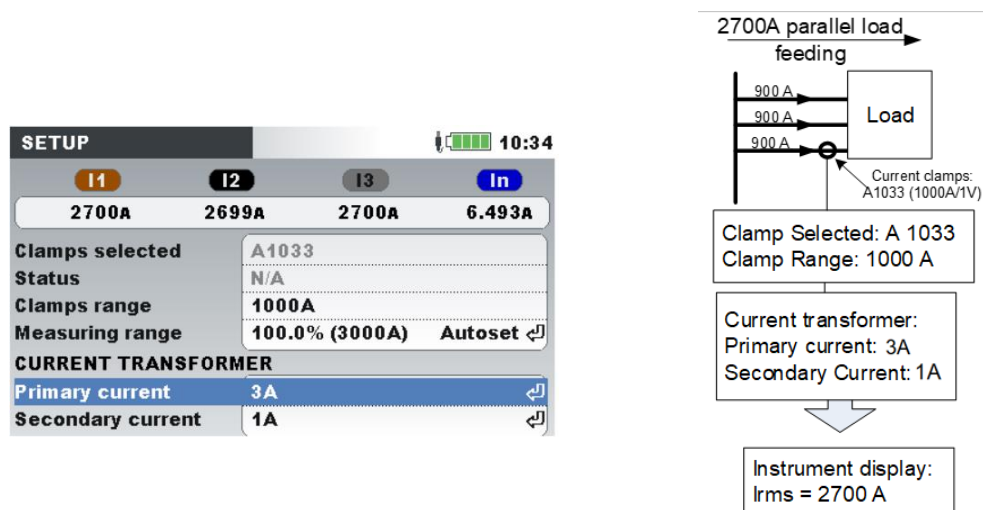


Figure 128: Parallel feeding of large load

Example: 2700 A current load is fed by 3 equal parallel cables. In order to measure current, we can embrace only one cable with clamps, and select: **Current transformer, Primary current: 3 A, Secondary current: 1 A** in clamp menu.

Note: During setup current range can be observed by “Measuring range: 100% (3000 A/V)” row.

Indirect current measurement

Indirect current measurement with primary current transducer is assumed if user selects 5 A current clamps: A 1588 or A 1037. Load current is in that case measured **indirectly** through additional primary current transformer.

In **example** below we have 100 A of primary current flowing through primary transformer with ratio 600 A : 5 A. Settings are shown in following figure.

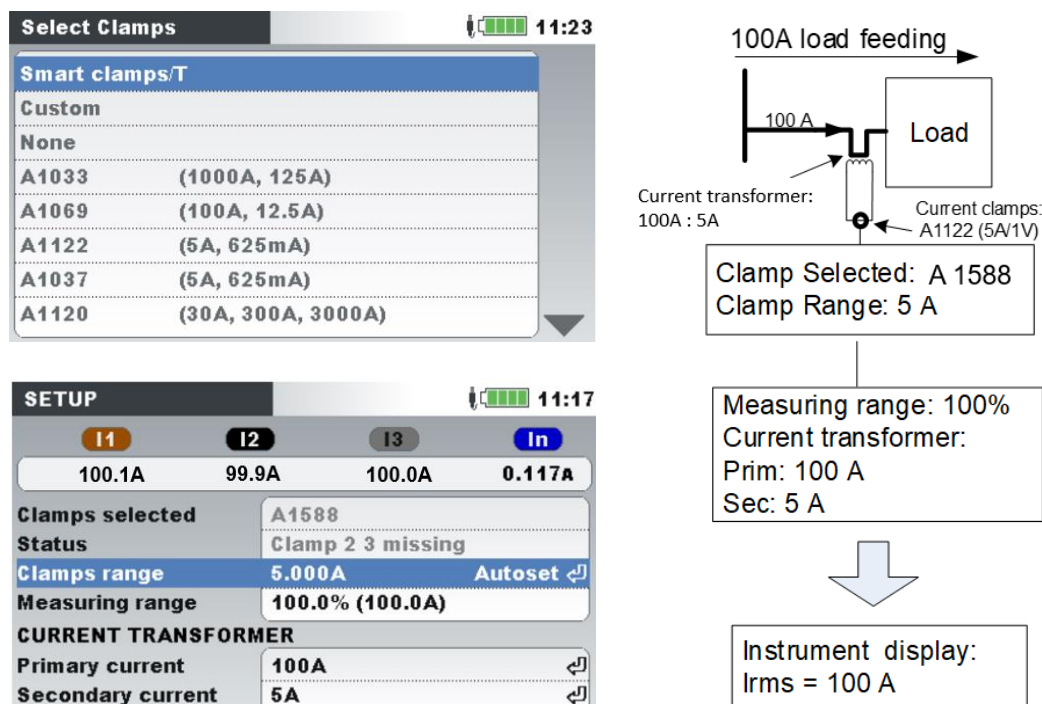


Figure 129: Current clamps selection for indirect current measurement

Over-dimensioned current transformer

Installed current transformers on the field are usually over-dimensioned for “possibility to add new loads in future”. In that case current in primary transformer can be less than 10% of rated transformer current. For such cases it is recommended to select 10% current range as shown on figure below.

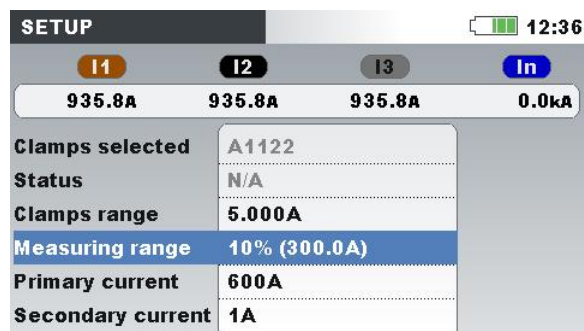


Figure 130: Selecting 10% of current clamps range

Note that if we want to perform direct current measure with 5 A clamps (secondary current measurement), primary transformer ratio should be set to 5 A : 5 A.

**WARNINGS!**

- The secondary winding of a current transformer must not be open when it is on a live circuit.
- An open secondary circuit can result in dangerously high voltage across the terminals.

Automatic current clamps recognition

Metrel developed Smart current clamps product family in order to simplify current clamps selection and settings. Smart clamps are multi-range switchless current clamps automatically recognized by instrument. In order to activate smart clamp recognition, the following procedure should be followed for the first time:

1. Turn on the instrument
2. Connect clamps (for example A 1227) to MI2893/MI 2892/MI 2885
3. Enter: Measurement Setup → Connection setup → Phase/Neutral Curr. Clamps menu
4. Select: Smart clamps/T
5. Clamps type will be automatically recognized by the instrument.
6. User should then select clamp range (Auto range or fixed one) and confirm settings.

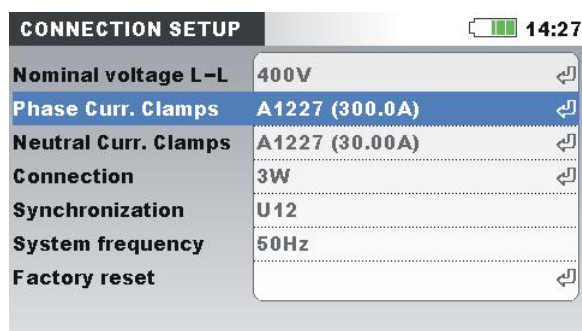


Figure 131: Automatically recognised clamps setup

Instrument will remember clamps setting for the next time. Therefore, user only need to:

1. Plug clamps to the instrument current input terminals
2. Turn on the instrument

Instrument will recognize clamps automatically and set ranges as was settled on measurement before. If clamps were disconnected following pop up will appear on the screen (See Figure below). Use cursor keys to select Smart clamp current range.



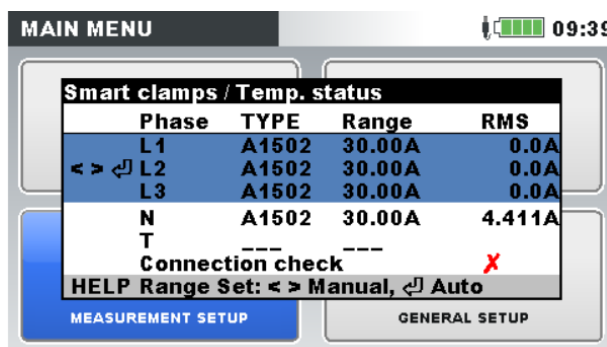


Figure 132: Automatically recognised clamps status

 Table 124: Keys in Smart clamps pop up window



Changes Clamps current range.

 

Selects Phase or Neutral current clamps.



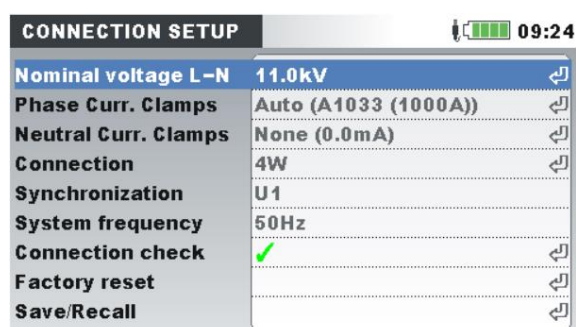
Confirms selected range and returns to previous menu.

Clamps Status menu indicates that there is an inconsistency between current clamps defined in Clamps Setup menu and clamps present at the moment.

Note: Do not disconnect smart clamps during recording.

4.2.4 Connection check

Connection check menu in CONNECTION SETUP check if instrument measurement complies with instrument setup and connection.




Connection check mark can be marked with OK (✓) or Fail (✗) sign and indicate overall connection status:

- Connection check is marked with green OK sign (✓) if instrument is connected properly and measured values comply with given measurement setup.
- Connection check is marked with yellow OK sign (✓), indicate that some measurements are not as expected. This does not mean that something is necessary wrong, but require user attention to double check connection and instrument settings. In this case, measurements are outside the optimal range.
- Fail sign (✗) indicate that that instrument is connected incorrectly or measurement setup does not correspond with measured value. In this case it is necessary to readjust measurement settings, and check instrument connections.

By pressing ENTER key, detailed Connection check will be shown

| Connection: Consumed | | | | | 08:57 |
|----------------------|---------|---------|---------|--------|-------------|
| | L1 | L2 | L3 | N | |
| U | ✓ 229.5 | ✓ 229.8 | ✓ 229.5 | 1.03 | v |
| I | ✓ 2.500 | ✓ 3.750 | ✓ 5.000 | 1.567 | A |
| P | 0.574 | 0.862 | 1.147 | | kW |
| Phase | ✓ 0.0 | ✓ 0.0 | ✓ 0.0 | 359.0 | ° |
| Useq | ✓ 1 2 3 | | | Ptot | 2.583 kW |
| Iseq | ✓ 1 2 3 | | | f | ✓ 49.999 Hz |
| DATE/TIME | VIEW | | | LIMITS | |

Table 125: Connection check description and screen symbols

| Measure- ment | Status | Description | Action to resolve issue |
|------------------|--------|--|---|
| U | ✓ | Measured voltage is within 90% ÷ 110% range. All voltage measurements (RMS, harmonics, voltage events) are valid. | |
| U | ✗ | Measured voltage is not within 90% ÷ 110% range of Nominal voltage. All voltage measurements (RMS, harmonics, voltage events) can be compromised. | Set correct Nominal voltage value and check voltage leads. |
| I | ✓ | Measured current is within 10% ÷ 110% of selected clamp measuring range. All current measurements (RMS, harmonics, voltage events) are valid. | |
| I | ✓ | Measured current is within 5% ÷ 10% or 110% ÷ 150% of selected clamp measuring range. | If higher current is expected during recorder campaign, this warning can be ignored. Otherwise, it is recommended to decrease current range. |
| I | ✗ | Measured current is less than 5% or higher than 150% of clamp measuring range. Accuracy of current measurements (RMS, harmonics...) can be compromised. | Go to Current clamp settings and change Clamp Measuring Range or press AUTOSET I button and let instrument to choose optimal current range. |
| Phase | ✓ | Phase angle between voltage and current is less than 90°. This indicate that measured current flow in the same direction as voltage. Power measurements are valid. | |
| Phase | ✗ | Phase angle between voltage and current is more than 90°. This indicate that measured current has opposite flow than voltage. Power measurements are compromised. | Check clamp direction ( icon is present in status bar) and see if current channel corresponds to the voltage channel (if current I ₁ is measured on voltage U ₁) |
| Useq | ✓ 123 | Voltage sequence is correct. Unbalance and power measurement are valid. | |
| Useq | ✗ 321 | Voltage sequence is reverse. Unbalance and power measurement are compromised. | Switch voltage leads U ₂ and U ₃ in-between to obtain right sequence. |
| Useq | ✗ - | Phase angle between voltages is not 120° ± 30°. Unbalance and power measurement are compromised. | Check voltage leads, and check if selected Connection correspond to the actual network. |
| Iseq | ✓ 123 | Current sequence is correct, phase angle between currents is less than 120° ± 60°. Unbalance and power measurement are valid. | |
| Iseq | ✓ 123 | Current sequence is correct, but phase angle between currents is more than 120° ± 60°. | This is valid situation if there are large inductive/capacitive load in the network. However, this can be also caused by improper |




| | | | |
|------|---|--|---|
| | | | instrument connection. Check clamp direction ( icon is present in status bar) and see if current channel corresponds to the voltage channel (if current I ₁ is measured on voltage U ₁). |
| Iseq |  321 | Current sequence is reverse. Unbalance and power measurement are compromised. | Switch current clamps I ₂ and I ₃ in-between. |
| Iseq |  - | Current phase angle between currents is not 120° ± 60°. Unbalance and power measurement are compromised. | Check voltage leads, and check if selected Connection correspond to the actual network. |

Table 126: Keys in Connection check screen

F1

DATE/TIME

Open Date/time setup screen (for quick real-time clock check)

F2

VIEW

Selects which measurement setup should be considered:
Consumed or Generated.

F3








AUTOSET I

MI 2893 performs the most optimal clamp current range (Auto range is performed automatically)

F4

LIMITS

Check limits for measured parameters:

| LIMITS | | |  09:06 |
|--------|-------------------------------|-----------------|---|
| U | 90%–110% U _n | 207.0–253.0v |  |
| I | 5%–10% I _{clamps} | 50.00–100.0A |  |
| I | 10%–110% I _{clamps} | 100.0–1100A |  |
| I | 110%–150% I _{clamps} | 1100–1500A |  |
| f | 85%–115% f | 42.500–57.500Hz |  |
| Phase | ±90° | |  |

ESC

Returns to the one menu back.

4.2.5 Temperature probe connection

Temperature measurement is performed using smart temperature probe connected to the any current input channel. In order to activate temperature probe recognition, following procedure should be followed for the first time:



1. Turn on the instrument
2. Connect temperature probe to MI 2893/MI 2892/MI 2885 neutral current input terminal
3. Enter: Measurement setup → Connection setup → Phase/Neutral curr. clamps
4. Select: Smart clamps/T
5. Temperature probe should be now automatically recognized by the instrument

Instrument will remember settings for the next time. Therefore, user only needs to plug temperature probe to the instrument.

4.2.6 GPS time synchronization device connection

MI 2893/MI 2892/MI 2885 have the ability to synchronize its system time clock with Coordinated Universal Time (UTC time) provided by externally connected GPS module (optional accessory - A 1355). In order to be able to use this particular functionality, GPS unit should be attached to the instrument and placed outside. Once this is done, GPS module will try to establish connection and get satellite time clock. MI 2893/MI 2892/MI 2885 distinguishes two different states regarding GPS module functionality.

Table 127: GPS functionality



| | |
|---|--|
|  | GPS module detected, position not valid or no satellite GPS signal reception. |
|  | GPS module detected, satellite GPS signal reception, date and time valid and synchronized, synchronization pulses active |

Once an initial position fix is obtained, instrument will set time and date to GPS + Time zone - user selected in Set Date/Time menu (see figure below).



Figure 133: Set time zone screen

 Table 128: Keys in Set time zone screen

| | |
|---|--|
|  | Changes Time zone. |
|  | Confirms selected Time zone and returns to "GENERAL SETUP" menu. |

When the time zone is set, MI 2893/MI 2892/MI 2885 will synchronize its system time clock and internal RTC clock with the received UTC time. GPS module also provides the instrument with extremely accurate synchronization pulses every second (PPS – Pulse Per Second) for synchronization purposes in case of lost satellite reception.

Note: GPS synchronization should be done before starting measurements.

For detailed information please check user manual of A 1355 GPS Receiver.

4.2.1 Printing support

MI 2893/MI 2892/MI 2885 support direct printing to Seiko DPU 414 printer. User can print any screen under MEASUREMENTS menu. In order to print, connect instrument with the printer according to the figure below and press and hold **ESC** key for 5 seconds. Characteristic “beep” signal will indicate that printing is started.

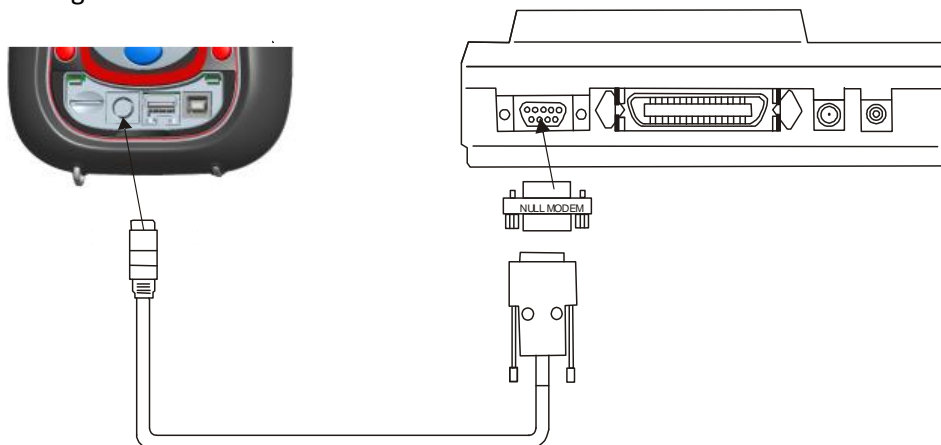


Figure 134: Connecting printer DPU 414 with instrument

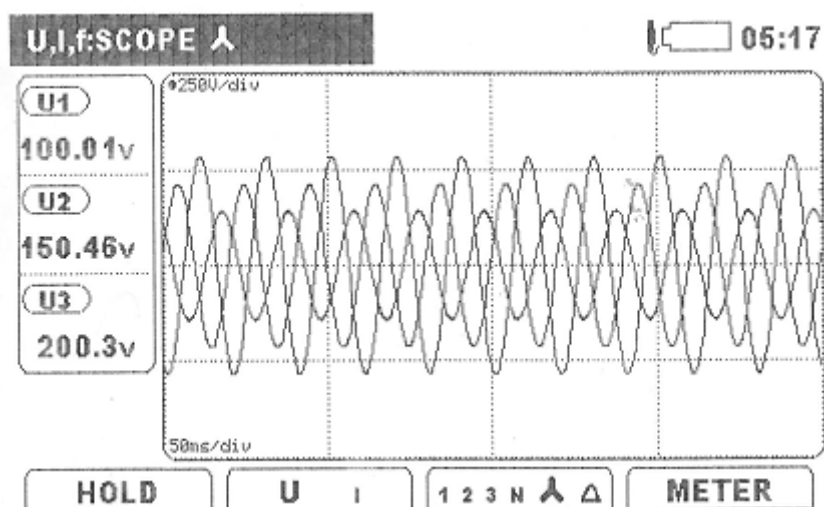


Figure 135: SCOPE screen print

Instructions for printer setup

Printer is configured to work with instrument directly. However, if non-original printer device is used, printer should be properly configured before use, according to the following procedure:

1. Fit paper into printer.
2. Turn off printer.
3. Hold “On Line” key and turn on printer.
Printer will print settings of dip switches.
4. Press “On Line” key to continue.
5. Press “Feed” key in order to set **Dip SW-1, SW No. 1** (OFF) according to the table below.
6. Press “On line” key in order to set **Dip SW-1, SW No. 2** (ON) according to the table below.
7. Continue procedure according to the table below.
8. After **Dip SW-1, SW No. 8** is set, press Continue – “On line” key.

9. Continue procedure according to the table below: Dip **SW-2** and Dip **SW-3**.
10. After **Dip SW-3 No. 8** is set, press Write – “Feed” key for saving new configuration into memory.
11. Turn Off/On printer.

Table 129: DPU 414 Dip switches settings are shown on table below:


| SW No. | Dip SW-1 | | Dip SW-2: | | Dip SW-3 | |
|--------|----------|-------------------------|-----------|-------------------------|----------|------------------------------|
| 1. | OFF | Input = Serial | ON | Printing Cols = 40 | ON | Data Length = 8 bits |
| 2. | ON | Printing Speed = High | ON | User Font Back-up = ON | ON | Parity setting = No |
| 3. | ON | Auto Loading = ON | ON | Character Sel. = Normal | ON | Parity condition = Odd |
| 4. | OFF | Auto LF = OFF | ON | Zero = Normal | OFF | Busy Control = XON/XOFF |
| 5. | OFF | Setting Cmd. = Disable | ON | International | OFF | Baud Rate Select = 19200 bps |
| 6. | OFF | Printing Density = 100% | ON | Character Set U.S.A. | ON | |
| 7. | ON | | ON | | ON | |
| 8. | ON | | OFF | | OFF | |

Note: Use “On Line” key as “OFF” and “Feed” key as “ON”.

4.3 Remote instrument connection (over Internet / Internet(3G/GPRS) / Intranet (LAN))

4.3.1 Communication principle

MI 2893/MI 2892/MI 2885 instrument use Ethernet port for connection to PowerView through internet. As companies frequently use firewalls to limit internet traffic options, whole communication is routed through dedicated “Metrel Route Server”. In this way instrument and PowerView can avoid firewalls and router restrictions. Communication is established in four steps:

1. User selects INTERNET or INTERNET (3G/GPRS) or INTRANET (LAN) connection under COMMUNICATION menu, and checks if connection to Metrel server can be established (Status bar icon  should appear within 2 minutes).
Note: Outgoing ports 80, 443, 7781 ÷ 8888 to the gprs.metrel.si server should be opened on remote firewall where instrument is placed!
2. User enters instrument serial number on PowerView and connects to the instrument over Metrel server.

Note: In case of using accessory A 1622 3G Wi-Fi modem for internet connection, please check A 1622 instruction manual in order to properly set up modem, before using it.

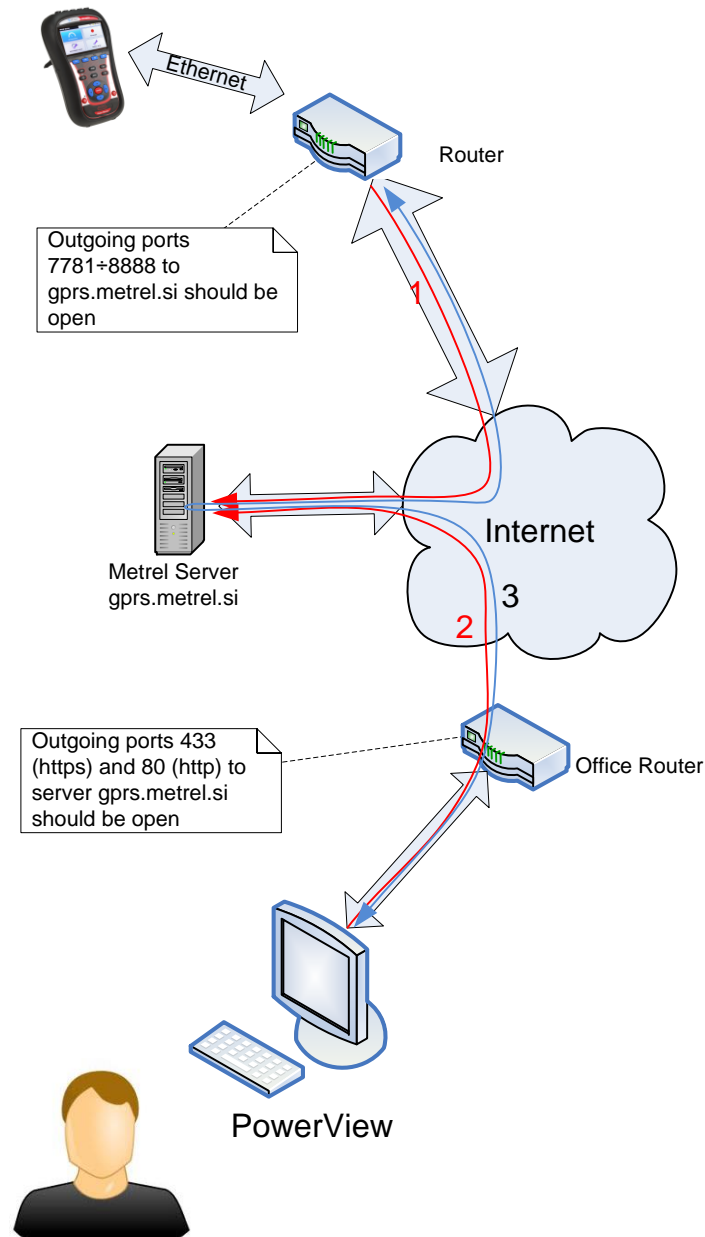


Figure 136: Schematic view on the remote measurements

4.3.2 Instrument setup on remote measurement site

Installation procedure on remote site starts by connecting MI 2893/MI 2892/MI 2885 instrument to the grid or measurement point. As measurement campaign can last for days or weeks it is necessary to assure reliable power supply to the instrument. Additionally, fully charged instrument batteries can provide power to the instrument during interrupts and blackouts for more than 5 hours (from 5 to 7 hours for MI 2892/2885) and more than 3 hours (from 3 – to 5 hours for MI 2893), depends on the battery capacity and battery state. After instrument installation, connection parameters should be set.

In order to establish remote connection with instrument through PC software PowerView v3.0, instrument communication parameters should be configured. Figure below shows COMMUNICATION menu in GENERAL SETUP.

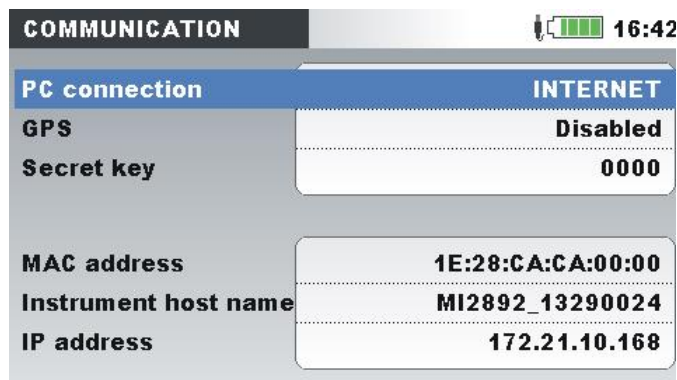


Figure 137: Internet connection setup screen

Following parameters should be entered in order to establish Internet communication:

Table 130: Internet setup parameters

| | | |
|----------------------|-----------------|---|
| PC connection | Internet | Select internet connection in order to communicate with PowerView over internet connection. |
| Secret key | 0000 | Enter number code (4-digits). User need to store this number, as will be later asked by PowerView v3.0, during connection procedure |





After entering parameters user should connect Ethernet cable. Instrument will receive IP address from DHCP Server. It can take up to 2 minutes in order to get new IP number. Once instrument IP address is obtained, it will try to connect to Metrel server, over which communication with PowerView is assured. Once everything is connected,  icon will appear on the Status bar. Connection status can be also observed on instrument Status bar, as shown on table below.

Table 131: Internet status bar icons


| | |
|---|---|
|  | Internet connection is not available. Instrument is trying to obtain IP address and then connect to Metrel server. |
|  | Instrument is connected to the internet and Metrel server, and ready for communication. Note: Outgoing ports 80, 443, 7781 ÷ 8888 to the gprs.metrel.si server should be opened on remote firewall! |
|  | Communication in progress. Instrument is connected to the PowerView instance. |

4.3.3 PowerView setup for instrument remote access

In order to access remotely to the instrument, PC software PowerView v3.0 should be configured properly (See PowerView v3.0 manual for instructions how to install to your PC). PowerView v3.0 communicates over 80 and 443 ports, on similar way as your internet browser.

Note: Outgoing ports 80, 443 to the gprs.metrel.si server should be opened on local firewall!

PowerView settings

Press on Remote  Remote in toolbar in order to open remote connection settings, as shown on figure below.

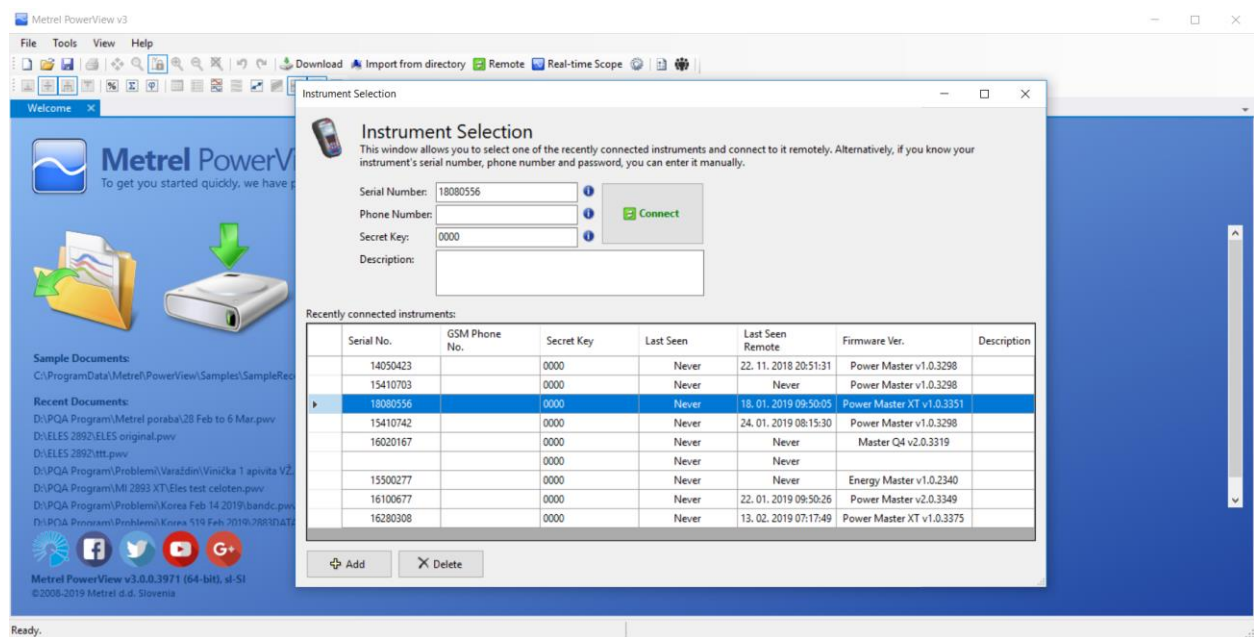
 




Figure 138: PowerView v3.0 remote connection settings form

User needs to fill following data into form:

Table 132: Instrument selection form parameters

| | | |
|-----------------------|---------------------|---|
| Serial Number: | Required | Enter Power Quality Instrument serial number |
| Phone Number: | Not Required | Leave this field empty |
| Secret Key: | Required | Enter number code which was entered in instrument Communication settings menu as: Secret Key . |
| Description: | Optional | Enter instrument description |

By pressing  Add button, user can add another instrument configuration.  Delete button is used to remove selected instrument configuration from the list. Connection procedure will begin, by pressing on  Connect button.

4.3.4 Remote connection

Establishing connection

After entering PowerView v3.0 remote settings and pressing on **Connect** button, Remote Connection window will appear (shown below).

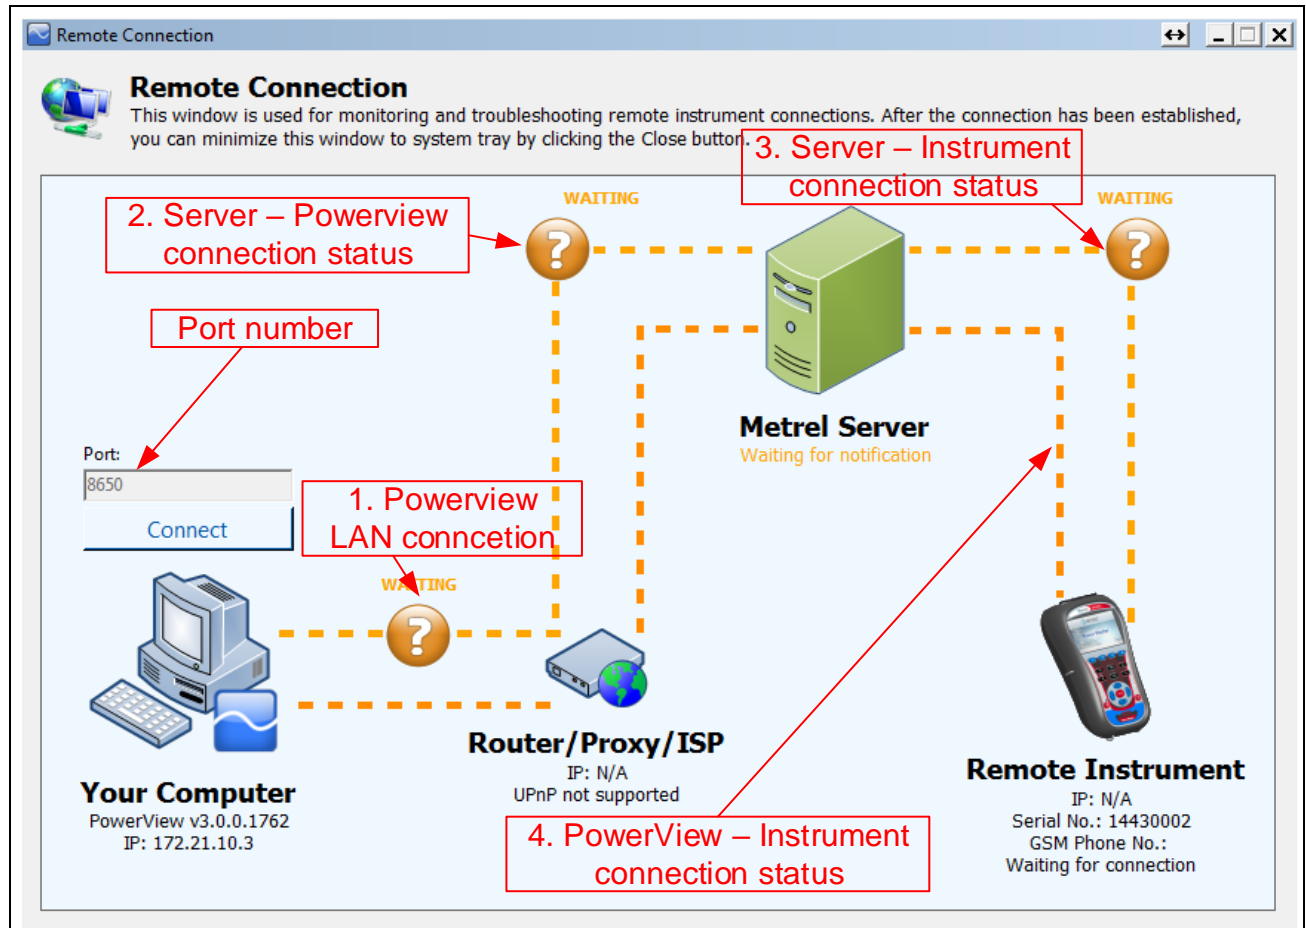


Figure 139: PowerView v3.0 remote connection monitor

This window is used for monitoring and troubleshooting remote instrument connection. Remote connection can be divided into 4 steps.

Step 1: PowerView v3.0 connection to Local Area Network (LAN)

After entering "Remote Connection" PowerView v3.0 will try to establish internet connection automatically. In order to establish connection, PowerView v3.0 requires http connection to the internet. If connection was successful, a green icon and "CONNECTED" status will appear between "Your Computer" and "Router/Proxy/ISP" icons, as shown on figure below. In case of ERROR, please ask your network administrator to provide PowerView v3.0 http access to the internet.

Step 2: PowerView v3.0 connection to Metrel Server

After establishing internet connection in Step 1, PowerView v3.0 will contact Metrel Server. If connection was successful, a green icon and "CONNECTED" status will appear between "Metrel Server" and "Router/Proxy/ISP" icons, as shown on figure below. In case of ERROR, please ask your network

administrator for help. Note, that outgoing communication to gprs.metrel.si over 80 and 443 ports should be enabled.

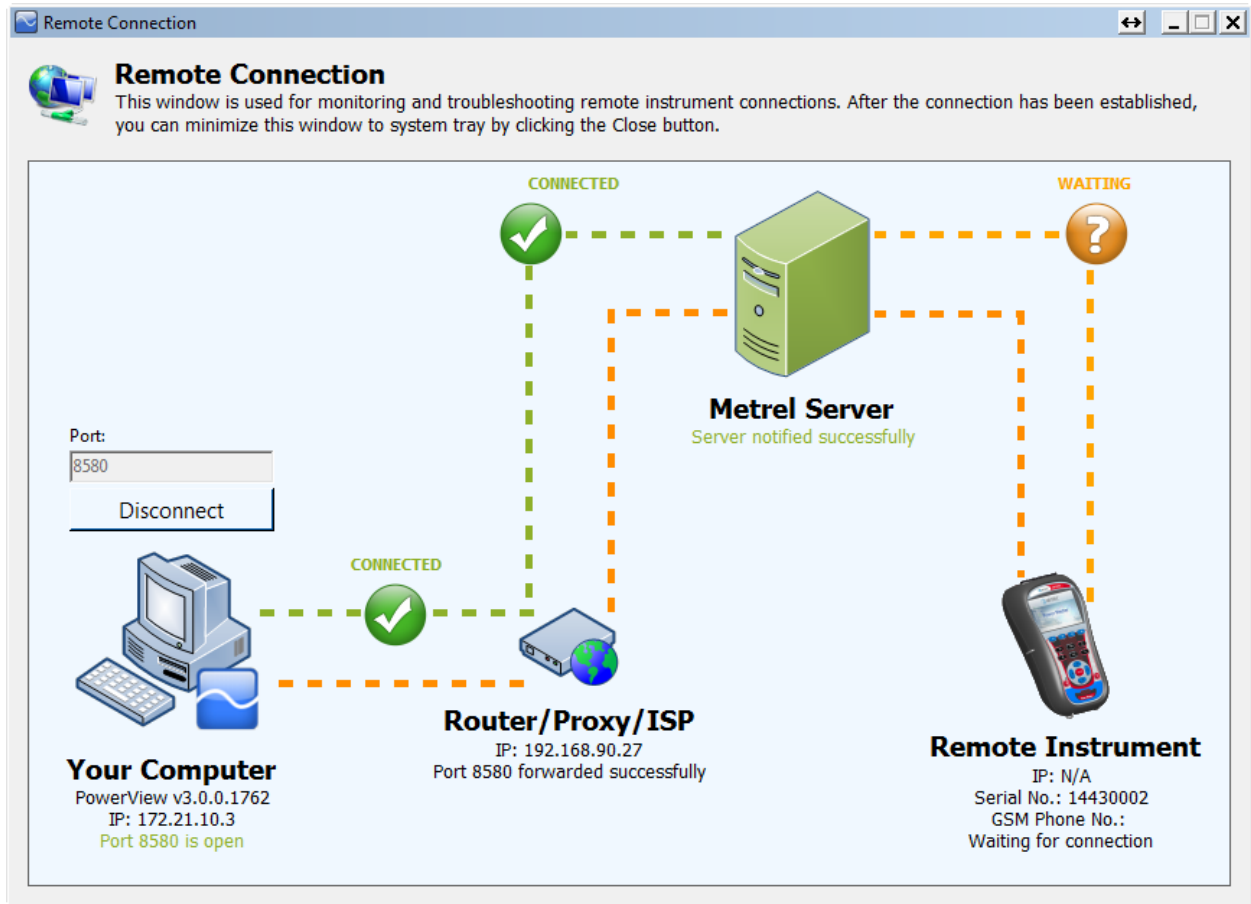


Figure 140: PowerView connection to LAN and Metrel Server established (Steps 1 & 2)

Note: Step 1 and Step 2 are automatically executed, after entering Remote Connection.

Step 3: Remote Instrument connection to Metrel Server

After the PowerView v3.0 successful connects to the Metrel Server, server will check if your instrument is waiting for your connection. If that is a case, instrument will establish connection with Metrel server. The green icon and "CONNECTED" status will appear between "Metrel Server" and "Remote Instrument" icon, as shown on figure below.

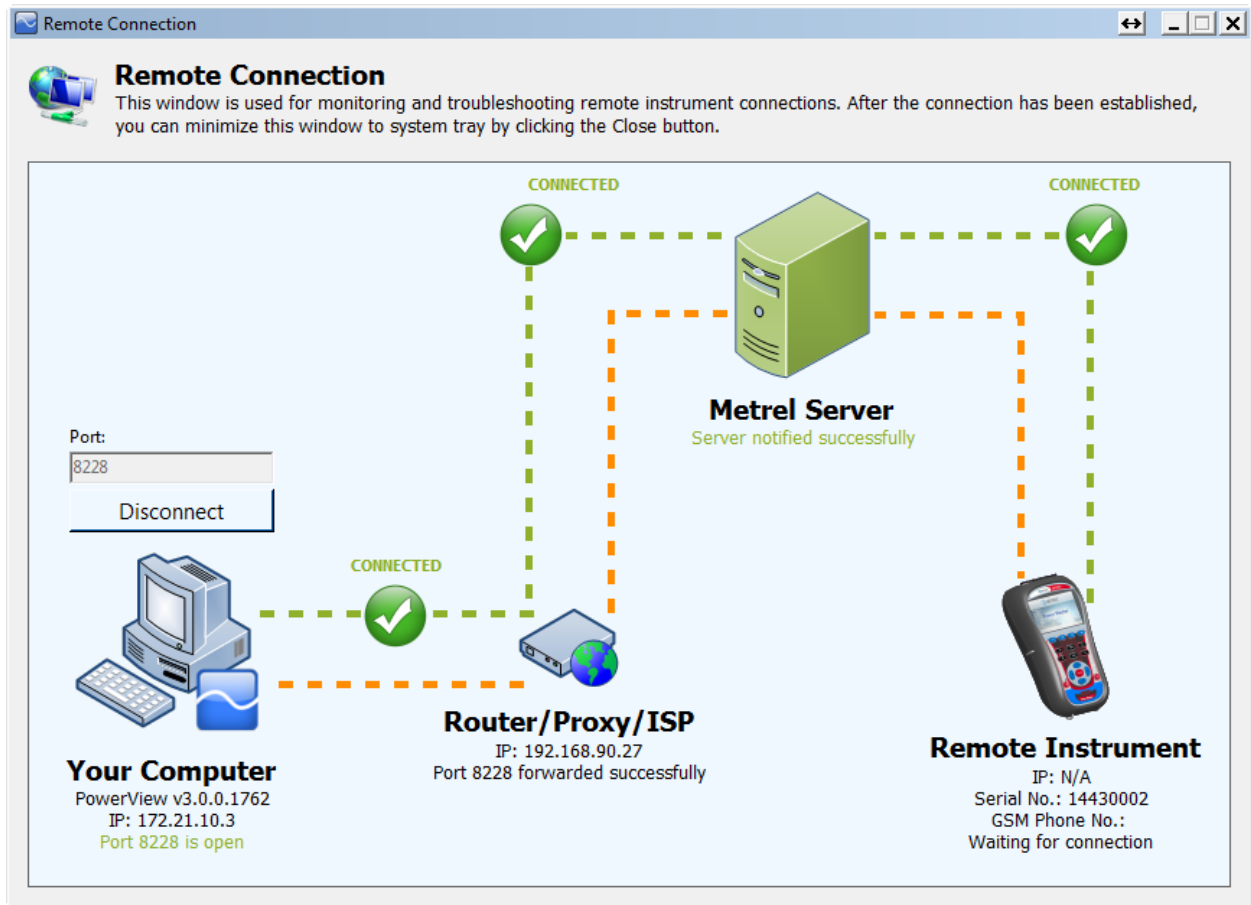


Figure 141: Remote instrument connection to Metrel Server established (Step 3)

Step 4: Remote Instrument connection to PowerView v3.0

After first three steps were successfully finished, MI 2893/MI 2892/MI 2885 instrument will automatically connect to the PowerView v3.0 via VPN connection, made through Metrel server and establish connection.

If Remote Instrument connection to PowerView v3.0 was successful, a green icon and "CONNECTED" status will appear between "Router/Proxy/ISP" and "Remote Instrument" icon, as shown on figure below. This window can now be closed as it is not needed any more. and it should be proceeded to remote instrument access described in following sections.

In case if connection drops status "ERROR" or "WAITING" will appear in PowerView remote connection window. Connection will be automatically restored and started operation will continue.

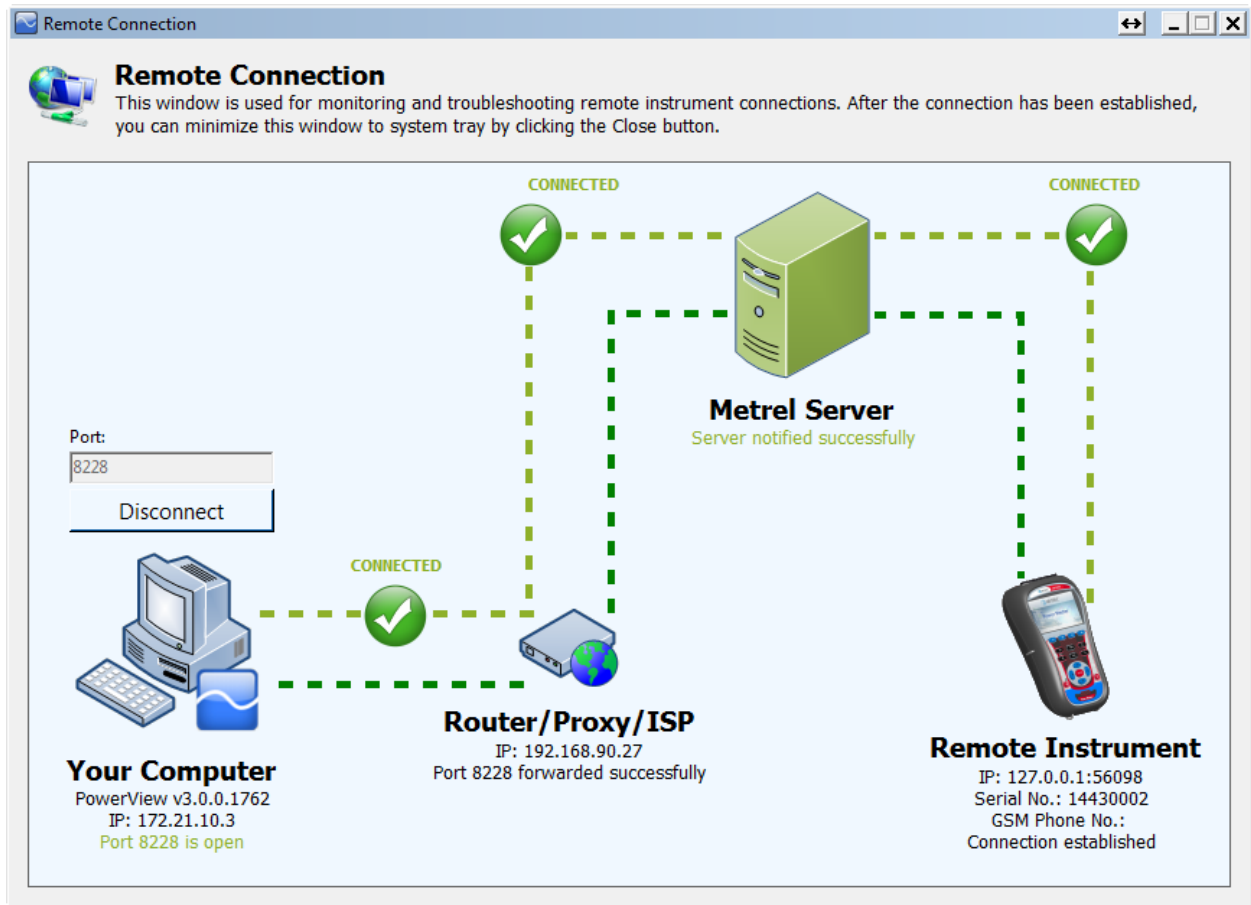


Figure 142: Remote instrument connection to PowerView v3.0 established (Step 4)

While the data is refreshed, the Remote button is displayed in green, to indicate that the connection is active, as shown below. If it is displayed in orange colour, it means that the communication was broken and it should be reinitialized by user.

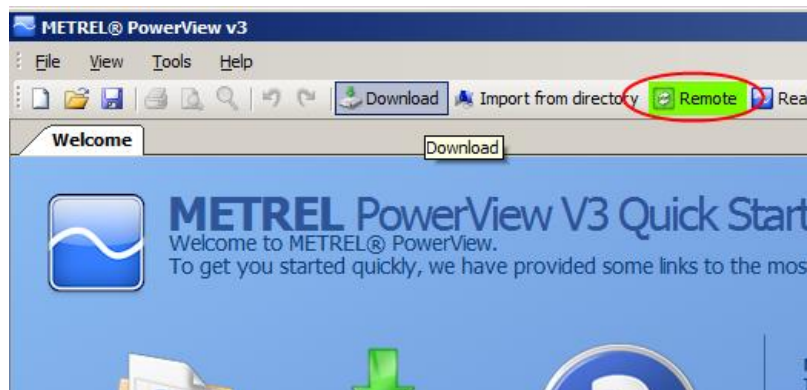


Figure 143: Active connection indication


 
Remote connection screen can also be accessed through Windows tray bar, by clicking on  icon. This is particularly useful to reconnect instrument and PowerView v3.0, after network failure.



Figure 144: Remote connection icon

Downloading data

If remote connection settings are correct and “Remote Instrument” is connected to PowerView v3.0, download data is possible. Open the download window by pressing F5, or by clicking on the



button in the toolbar, or by selecting Download from Tools menu.

Download window will be displayed, and PowerView v3.0 will immediately try to connect to the instrument and detect the instrument model and firmware version.

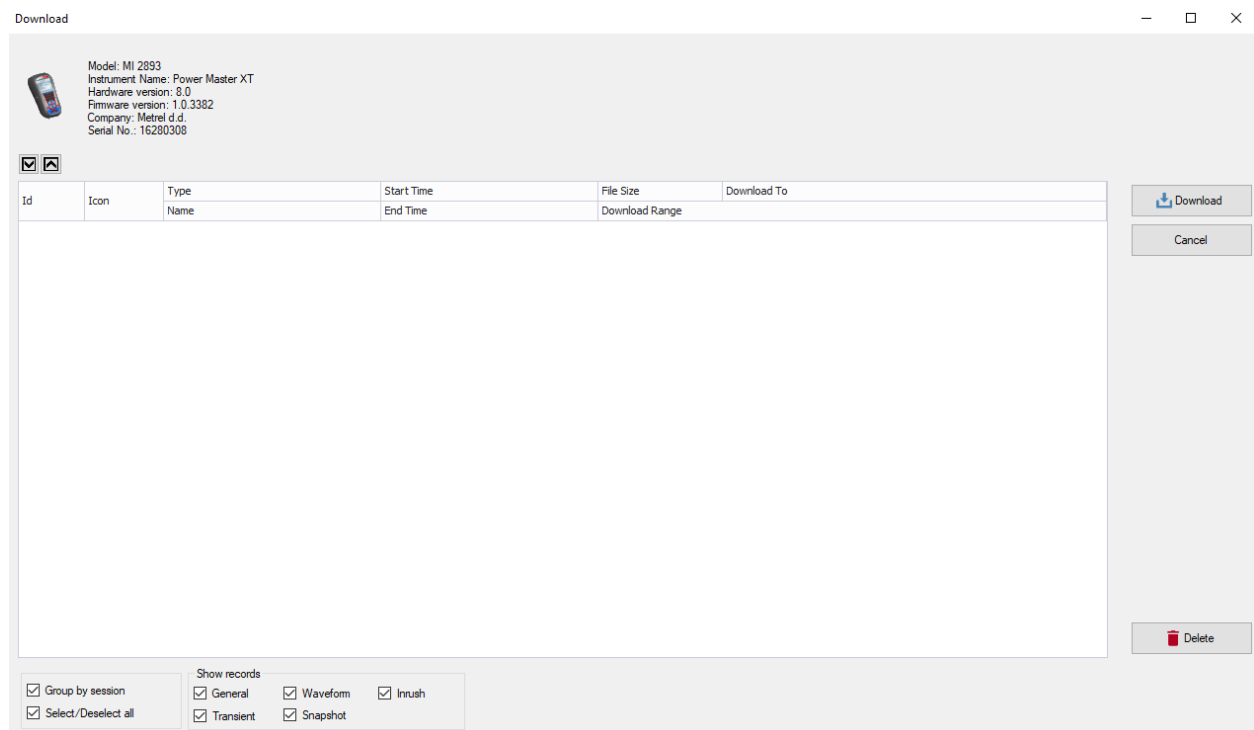


Figure 145: Detection of the instrument type

After a moment, instrument type should be detected, or an error message will be received, with the appropriate explanation. If connection can't be established, please check your connection settings.

When the instrument model is detected, PowerView v3.0 will download a list of records from the instrument. Any of the records from the list can be selected by simply clicking on them. Additional, “Select/Deselect all” tick box is available to select or deselect all records on displayed page. Selected records entries will have a green background.

Before downloading, a destination site node for each record can be defined. Each entry in a list contains a drop-down list of sites in all currently open documents in PowerView v3.0. If no document is opened, all records will be downloaded to a new site and saved into a new file.

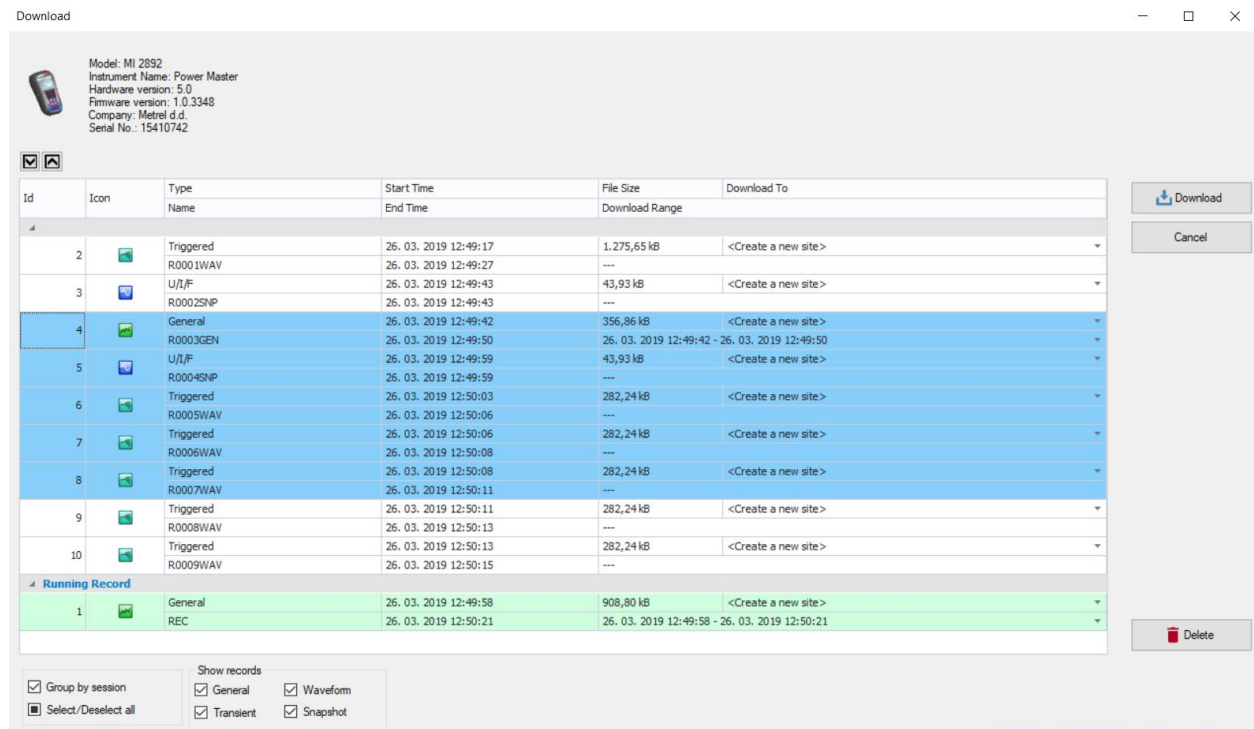


Figure 146: Selecting records from a list for download

Figure above show example were six records are select. To start download, click on the “Download” button.

Immediately after download, a new document window will be shown in PowerView v3.0, with the selected records placed inside a new site node. A backup PowerView v3.0 file is always created at this point, compressed into a *.zip file and saved inside your *MyDocuments/Metrel/PowerView/PQData* folder. This backup copy is made every time a file is created or opened, to make sure that you can recover all your downloaded data in case of accidental delete or change. However, note that records that were not selected in the Download window are not downloaded and therefore not saved to disk, so check that all relevant records are downloaded before deleting them from the instrument.

Real time scope

If remote connection settings are correct and remote instrument is connected to PowerView v3.0, click the **Real-Time Scope** button to open the Real time scope window. A new document window will be opened, as shown on the picture below.

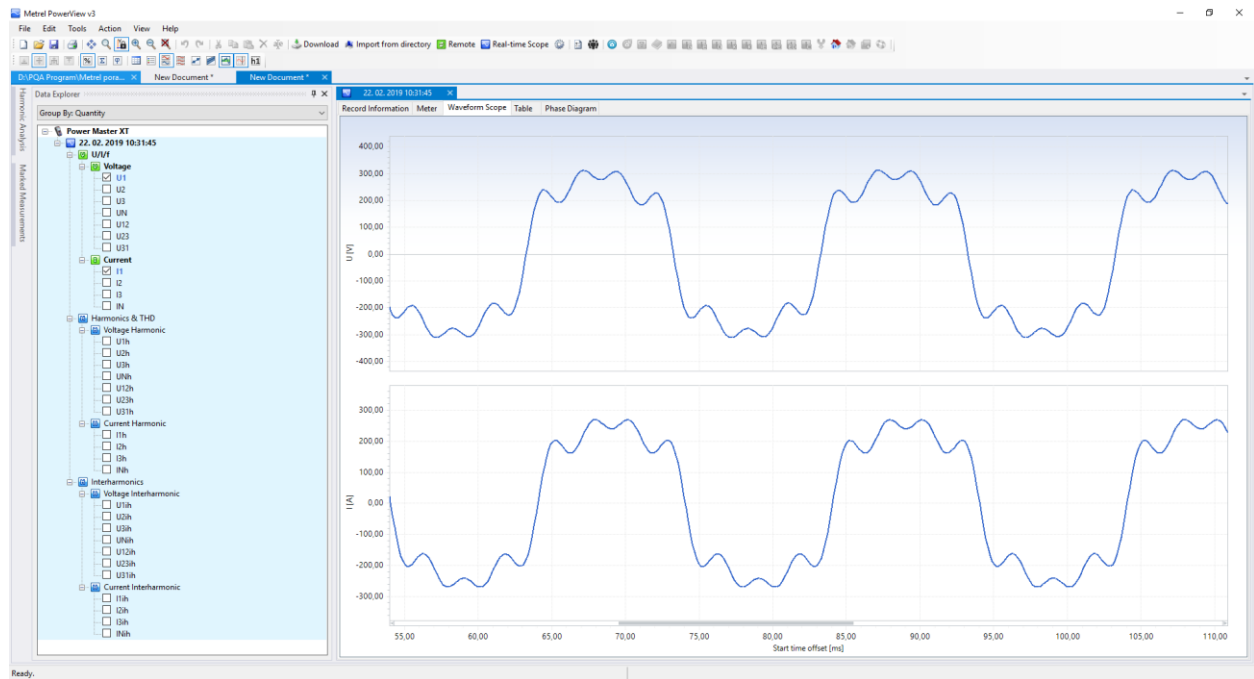


Figure 147: Real time scope window in remote connection, with several channels selected

The figure above shows an online window, with several channels selected. While online view is active, data are automatically updated. Updating speed will depend on your connection speed, and each new update is initiated as soon as the previous one has been downloaded, to ensure fastest possible refresh rate. While Real time scope is active, **Real-Time Scope** button is displayed in green, to indicate that the connection is active.

Depending on your connection speed, it may take a few seconds until the instrument is detected and first online scope is downloaded. All tree nodes will be completely expanded when the first record is shown, to enable easier channel selection. You may also notice that the downloaded record node will not be located within a site node, like in other records, but rather placed in a special instrument node. However, this record can be moved to any other node, or saved.

To close the online view, click the **Real-Time Scope** button again, or close the online window.

Remote instrument configuration

Instrument configuration tool helps you to change instrument settings, manage recording settings, start or stop recordings and manage instrument memory remotely. In order to begin, select "Remote instrument configuration" in PowerView v3.0 "Tools" menu. A form shown on figure below should pop up on the screen.

Note: Remote connection procedure described in 4.3 should be performed successfully before starting remote instrument configuration.

Instrument Configuration Tool
This windows allows you to change instrument configuration settings, manage recording settings, start/stop the recording, and manage instrument's record/event/alarm memory.

General setup

Instrument name: TEST97 Last known instrument time: 22. 02. 2019 11:19:02 Time zone: UTC +0:0 Set time

Measurement Setup

- General Recorder
- Waveform Recorder
- Transient Recorder

Connection setup

230 V

Potential transformer ratio

Voltage ratio: 1 : 1

Ph. Curr. Clamps: A1033

N. Curr. Clamps: A1033

Connection: 4W

Synchronization: Voltage

System frequency (Hz): 50

Event Signalling RVC Inrush Transient Measuring Methods

| Event | Threshold (%) | Hysteresis (%) |
|-----------|----------------|----------------|
| Swell | 110 (253,00 V) | 2 (4,60 V) |
| Dip | 90 (207,00 V) | 2 (4,60 V) |
| Interrupt | 5 (11,50 V) | 2 (4,60 V) |

Settings status : Done. 22. 02. 2019 11:18:39

Figure 148: Remote Instrument Configuration form

Please click on the “Read” button in order to receive current instrument settings. After retrieving data from the remote instrument, form should be filled with data, as shown on figure below. Changed parameters, will be sent back to the instrument by clicking on the “Write” button.

In order to remotely control instrument recorders, please click on the “Recorder” node as shown on figure below. User can select any of the instrument recorders and configure accompanying parameters. For description of particular recorder settings, see appropriate section in this manual. Changed parameters, will be sent back to the instrument by clicking on the “Write” button.

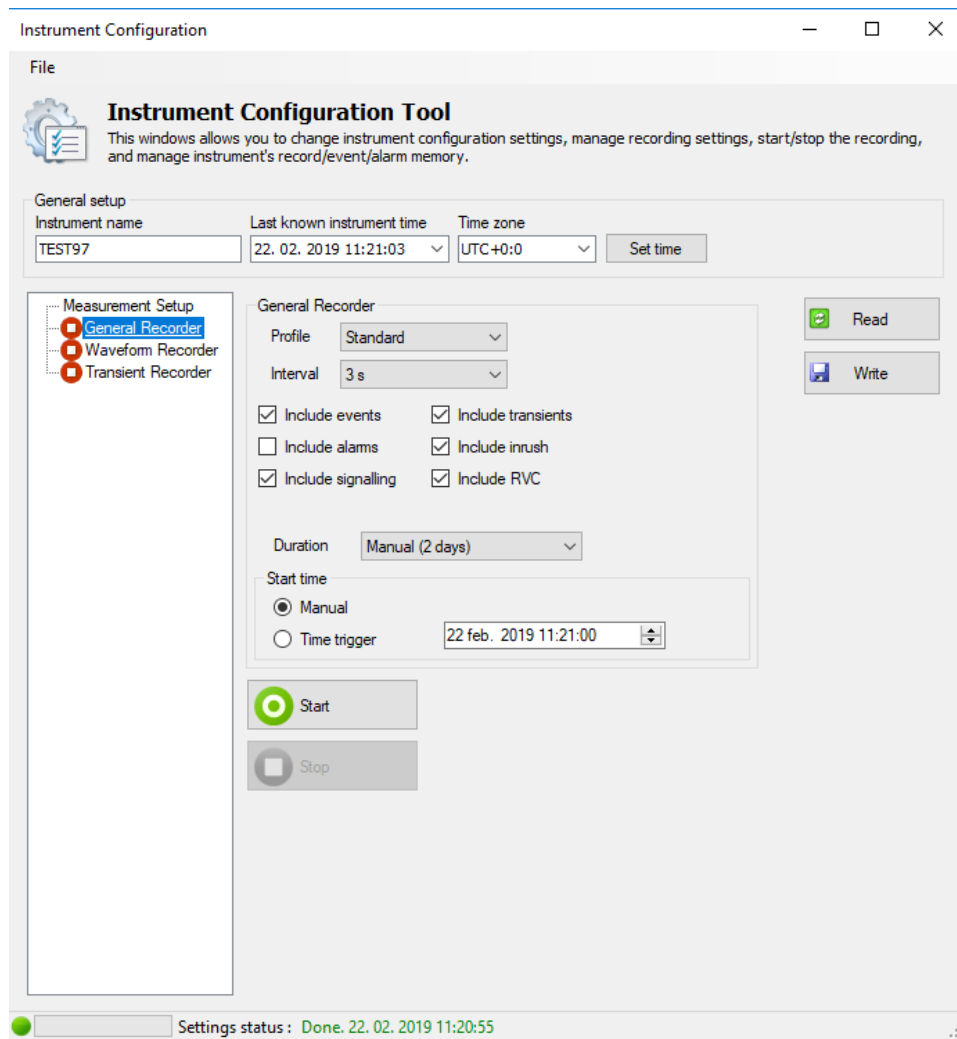


Figure 149: Remote Recorder configuration

By clicking on “Start” button, instrument will start selected recorder in the same manner as would user start recorder directly on instrument. Green icon indicates that Recorder is active, while red icon indicates that recorder is stopped.

Additionally, PowerView v3.0 will disable changing parameters during recording. Trigger button in waveform or transient recorder will trigger recorder in similar way as TRIGGER button on instrument, when pressed. Recording can be terminated by pressing on “Stop” button, or will automatically finish, after conditions are met, for example after given period of time or after event capturing. By pressing on “Read” button, user can receive instrument status in any moment.

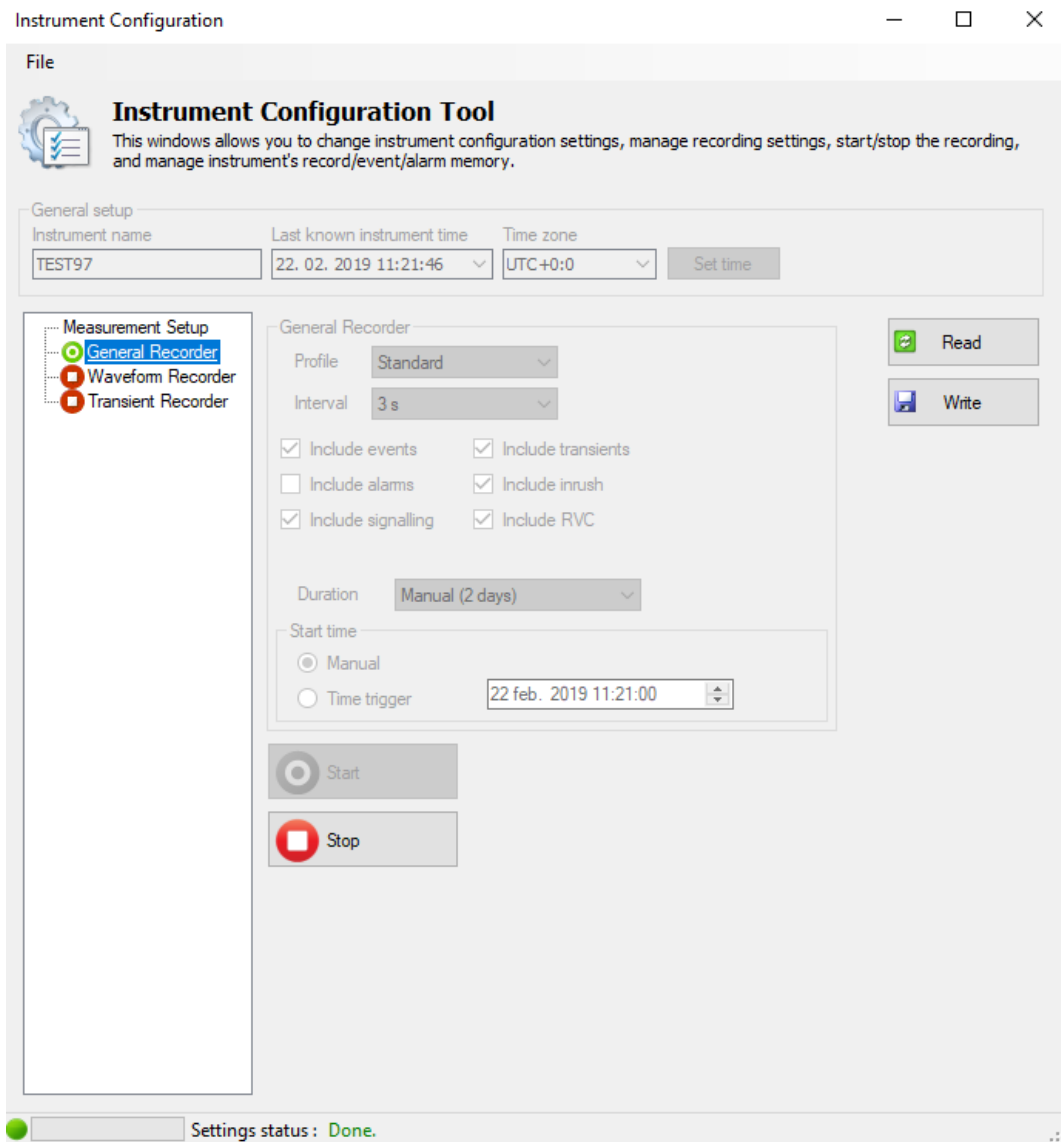


Figure 150: Recording in progress

4.4 Number of measured parameters and connection type relationship

Parameters which MI 2893/MI 2892/MI 2885 displays and measures, mainly depends on network type, defined in CONNECTION SETUP menu – **Connection** type. In example if user choose single phase connection system, only measurements relate to single phase system will be present. Table below shows dependencies between measurement parameters and type of network.

Table 133: Quantities measured by instrument

| | | Connection type | | | | | | | | | | | | | | | | | | | | | | | |
|----------------|-------------------|-----------------|---|----|----|---|-----|-----|-----|-----|-----|-------|-----|-----|-----|-----|----|----|----|---|-----|-----|-----|-----|--|
| Menu | | 1W | | 2W | | | | 3W | | | | OpenD | | | | 4W | | | | | | | | | |
| | | L1 | N | L1 | L2 | N | L12 | Tot | L12 | L23 | L31 | Tot | L12 | L23 | L31 | Tot | L1 | L2 | L3 | N | L12 | L23 | L31 | Tot | |
| Voltage | RMS | • | • | • | • | • | • | | • | • | • | | • | • | • | | • | • | • | • | • | • | • | | |
| | THD | • | • | • | • | • | | | • | • | • | | • | • | • | | • | • | • | • | | | | | |
| | Crest Factor | • | • | • | • | • | • | | • | • | • | | • | • | • | | • | • | • | • | • | • | • | | |
| | Frequency | • | | • | | | | | • | | | | • | | | | • | | | | | | | | |
| | Harmonics (0÷50) | • | • | • | • | • | | | • | • | • | | • | • | • | | • | • | • | • | | | | | |
| | Interharm. (0÷50) | • | • | • | • | • | | | • | • | • | | • | • | • | | • | • | • | • | | | | | |
| | Unbalance | | | | | | | • | | | | • | | | | • | | | | | | | | • | |
| | Flicker | • | | • | • | | | | • | • | • | | • | • | • | | • | • | • | | | | | | |
| | Signalling | • | | • | • | | | | • | • | • | | • | • | • | | • | • | • | | | | | | |
| | Events | • | | • | • | | | | • | • | • | | • | • | • | | • | • | • | | | | | | |
| | | L1 | N | L1 | L2 | N | L12 | Tot | L1 | L2 | L3 | Tot | L1 | L2 | L3 | Tot | L1 | L2 | L3 | N | L12 | L23 | L31 | Tot | |
| Current | RMS | • | • | • | • | | | | • | • | • | | • | • | • | | • | • | • | | | | | | |
| | THD | • | • | • | • | | | | • | • | • | | • | • | • | | • | • | • | | | | | | |
| | Harmonics (0÷50) | • | • | • | • | | | | • | • | • | | • | • | • | | • | • | • | | | | | | |
| | Interharm. (0÷50) | • | • | • | • | | | | • | • | • | | • | • | • | | • | • | • | | | | | | |
| | Unbalance | | | | | | | • | | | | • | | | | • | | | | | | | | • | |
| Consumed Pwr. | Combined | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |
| | Fundamental | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |
| | Nonfundament. | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |
| | Energy | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |
| | Power factors | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |
| Generated Pwr. | Combined | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |
| | Fundamental | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |
| | Nonfundament. | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |
| | Energy | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |
| | Power Factors | • | | • | • | | | • | | | | • | | | | • | • | • | • | | | | | • | |



































| | | Connection type | | | | | | |
|----------------|-------------------|-----------------|-----|----------|-----|-----|-----|-----|
| Menu | | INV - 1W | | INV - 3W | | | | |
| | | L1 | INV | L12 | L23 | L31 | Tot | INV |
| Voltage | RMS | • | • | • | • | • | | • |
| | AC | | • | | | | | • |
| | DC | | • | | | | | • |
| | THD | • | | • | • | • | | |
| | Crest Factor | • | | • | • | • | | |
| | Frequency | • | | • | | | | |
| | Harmonics (0-50) | • | | • | • | • | | |
| | Interharm. (0-50) | • | | • | • | • | | |
| | Unbalance | | | | | | • | |
| | Flicker | • | | • | • | • | | |
| | Signalling | • | | • | • | • | | |
| | Events | • | | • | • | • | | |
| | | L1 | N | L12 | L23 | L31 | Tot | N |
| Current | RMS | • | • | • | • | • | | • |
| | AC | | • | | | | | • |
| | DC | | • | | | | | • |
| | THD | • | | • | • | • | | |
| | Harmonics (0-50) | • | | • | • | • | | |
| | Interharm. (0-50) | • | | • | • | • | | |
| | Unbalance | | | | | | • | |
| Consumed Pwr. | Combined | • | • | | | | • | • |
| | AC | | • | | | | | • |
| | DC | | • | | | | | • |
| | Fundamental | • | | | | | • | |
| | Nonfundament. | • | | | | | • | |
| | Energy | • | | | | | • | |
| | Power factors | • | | | | | • | |
| Generated Pwr. | Combined | • | • | | | | • | • |
| | AC | | • | | | | | • |
| | DC | | • | | | | | • |
| | Fundamental | • | | | | | • | |
| | Nonfundament. | • | | | | | • | |
| | Energy | • | | | | | • | |
| | Power Factors | • | | | | | • | |








































































































 


 


 




































































    Note: Frequency measurement depends on synchronization (reference) channel, which can be voltage or current.



















































In the similar manner recording quantities are related to connection type too. Recording Signals in GENERAL RECORDER menu are chosen according to the **Connection** type, and record **PROFILE** in according to the next table.

Table 134: Quantities recorded by instrument (Standard Profile)

| | | | Connection type | | | | | | | | | | | | | | | | | | | | | | | | | |
|---------------|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| Menu | | | 1W | | 2W | | | | 3W | | | | OpenD | | | | 4W | | | | | | | | | | | |
| | | | L1 | N | L1 | L2 | N | L12 | Tot | L12 | L23 | L31 | Tot | L12 | L23 | L31 | Tot | L1 | L2 | L3 | N | L12 | L23 | L31 | Tot | | | |
| Voltage | RMS | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | |
| | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | |
| | THD | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | | | |
| | Crest Factor | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | |
| | Frequency | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | | | | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | | | <div><div></div><div></div><div></div></div> | | | | | | | | | |
| | Harmonics (0-50) | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | | | |
| | Interharm. (0-50) | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | | | |
| | Unbalance | | | | | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | | | | | | | | <div><div></div><div></div><div></div></div> | |
| | Flicker | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | | | |
| | Signalling | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | | | |
| Events | • | | • | • | | | | | • | • | • | | | • | • | • | | • | • | • | | | | | | | | |
| | | | L1 | N | L1 | L2 | N | L12 | Tot | L12 | L1 | L2 | L3 | Tot | L2 | L3 | Tot | L1 | L2 | L3 | N | L12 | L23 | L31 | Tot | | | |
| Current | RMS | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | | | |
| | THD | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | | | |
| | Harmonics (0-50) | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | | | |
| | Interharm. (0-50) | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | | | |
| | Unbalance | | | | | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | | | | | | | <div><div></div><div></div><div></div></div> | | |
| | | | L1 | N | L1 | L2 | N | L12 | Tot | L12 | L1 | L2 | L3 | Tot | L2 | L3 | Tot | L1 | L2 | L3 | N | L12 | L23 | L31 | Tot | | | |
| Power | Combined | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | |
| | Fundamental | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | | |
| | | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | | |
| Nonfundament. | <div><div></div><div></div><div></div></div> | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | <div><div></div><div></div><div></div></div> | | | | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | <div><div></div><div></div><div></div></div> | | | | | <div><div></div><div></div><div></div></div> | | | | |

| | | | | | | | | | | | | | | | | | | | | | | | | |
|----------------|--|---|--|---|---|--|--|---|--|--|--|---|--|--|--|---|---|---|---|--|--|--|--|---|
| | |  | |  |  | | |  | | | |  | | | |  |  |  |  | | | | |  |
| Active Energy | |  | | | | | |  | | | |  | | | |  |  |  |  | | | | |  |
| Reactive Ener. | |  | | | | | |  | | | |  | | | |  |  |  |  | | | | |  |
| Power factors | |  | | | | | |  | | | |  | | | |  |  |  |  | | | | |  |

| | | Connection type | | | | | | |
|---------|-------------------|---|---|---|---|---|---|---|
| Menu | | INV-1W | | INV-3W | | | | |
| | | L1 | N | L12 | L23 | L31 | Tot | N |
| Voltage | RMS |    |    |    |    |    |    |    |
| | AC | |    | | | | |    |
| | DC | |    | | | | |    |
| | THD |   | |   |   |   | | |
| | Crest Factor |    | |    |    |    | | |
| | Frequency |    | |    | | | | |
| | Harmonics (0-50) |    | |    |    |    | | |
| | Interharm. (0-50) |    | |    |    |    | | |
| | Unbalance | | | | | |    | |
| | Flicker |    | |    |    |    | | |
| | Signalling |    | |    |    |    | | |
| | Events | • | | • | • | • | | |
| | | L1 | N | L12 | L23 | L31 | Tot | N |
| Current | RMS |    |    |    |    |    | |    |
| | AC | |    | | | | |    |
| | DC | |    | | | | |    |
| | THD |    | |    |    |    | | |
| | Harmonics (0-50) |    | |    |    |    | | |
| | Interharm. (0-50) |    | |    |    |    | | |
| | Unbalance | | | | | |   | |

| | | L1 | N | L12 | L23 | L31 | Tot | N |
|-------|----------------|--|---|-----|-----|-----|--|---|
| Power | Combined |    |    | | | |    |    |
| | AC | |    | | | | |    |
| | DC | |    | | | | |    |
| | Fundamental |    | | | | |    | |
| | Nonfundament. |    | | | | |    | |
| | Active Energy |   | | | | |   | |
| | Reactive Ener. |   | | | | |   | |
| | Power factors |    | | | | |    | |

Legend:









































- - Quantity included.
-  - Maximal value for each interval is recorded.
-  - RMS or arithmetic average for each interval is recorded (see 5.1.15 for details).
-  - Minimal value for each interval is recorded.
-  - Active RMS or arithmetic average (AvgON) for each interval is recorded (see 5.1.15 for details).

  



Table 135: Quantities recorded by instrument (Limited Profile)

| | | | Connection type | | | | | | | | | | | | | | | | | | | | | | | | |
|---------|-------------------|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|---|
| Menu | | | 1W | | 2W | | | | 3W | | | | OpenD | | | | 4W | | | | | | | | | | |
| | | | L1 | N | L1 | L2 | N | L12 | Tot | L12 | L23 | L31 | Tot | L12 | L23 | L31 | Tot | L1 | L2 | L3 | N | L12 | L23 | L31 | Tot | | |
| Voltage | RMS | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> |
| | THD | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | |
| | Crest Factor | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | |
| | Frequency | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | | | |
| | Harmonics (0-25) | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | |
| | Interharm. (0-25) | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | |
| | Unbalance | | | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> |
| | Flicker | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | |
| | Signalling | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | |
| | Events | • | | • | • | | | | | | • | • | • | | • | • | • | | • | • | • | | | | | | |
| | | | L1 | N | L1 | L2 | N | L12 | Tot | L12 | L1 | L2 | L3 | Tot | L2 | L3 | Tot | L1 | L2 | L3 | N | L12 | L23 | L31 | Tot | | |
| Current | RMS | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | |
| | THD | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | |
| | Harmonics (0-25) | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | |
| | Interharm. (0-25) | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | |
| | Unbalance | | | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | |
| | | | L1 | N | L1 | L2 | N | L12 | Tot | L12 | L1 | L2 | L3 | Tot | L2 | L3 | Tot | L1 | L2 | L3 | N | L12 | L23 | L31 | Tot | | |
| Power | Combined | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> |
| | Fundamental | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | |
| | Nonfundament. | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | |
| | Active Energy | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | |
| | Reactive Ener. | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | |
| | Power factors | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | | | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | <div><div><div></div></div><div><div></div></div><div><div></div></div></div> | | |

| | | Connection type | | | | | | |
|---------|-------------------|-----------------|---|--------|-----|-----|-----|---|
| Menu | | INV-1W | | INV-3W | | | | |
| | | L1 | N | L12 | L23 | L31 | Tot | N |
| Voltage | RMS | | | | | | | |
| | AC | | | | | | | |
| | DC | | | | | | | |
| | THD | | | | | | | |
| | Crest Factor | | | | | | | |
| | Frequency | | | | | | | |
| | Harmonics (0-50) | | | | | | | |
| | Interharm. (0-50) | | | | | | | |
| | Unbalance | | | | | | | |
| | Flicker | | | | | | | |
| | Signalling | | | | | | | |
| | Events | • | | • | • | • | | |
| | | L1 | N | L12 | L23 | L31 | Tot | N |
| Current | RMS | | | | | | | |
| | AC | | | | | | | |
| | DC | | | | | | | |
| | THD | | | | | | | |
| | Harmonics (0-50) | | | | | | | |
| | Interharm. (0-50) | | | | | | | |
| | Unbalance | | | | | | | |
| | | L1 | N | L12 | L23 | L31 | Tot | N |
| Power | Combined | | | | | | | |
| | AC | | | | | | | |

| | | | | | | |
|----------------|--|--|--|--|--|--|
| DC |     | | | | |     |
| Fundamental |     | | | | |     |
| Nonfundament. |     | | | | |     |
| Active Energy |  | | | | |  |
| Reactive Ener. |  | | | | |  |
| Power factors |     | | | | |     |

Legend:

- - Quantity included.
-  - Maximal value for each interval is recorded.
-  - RMS or arithmetic average for each interval is recorded (see 5.1.15 for details).
-  - Minimal value for each interval is recorded.
-  - Active RMS or arithmetic average (AvgON) for each interval is recorded (see 5.1.15 for details).

5 Theory and internal operation

This section contains basic theory of measuring functions and technical information of the internal operation of the MI 2893/MI 2892/MI 2885 instrument, including descriptions of measuring methods and logging principles.

5.1 Measurement methods

5.1.1 Measurement aggregation over time intervals

Standard compliance: IEC 61000-4-30 Class A (Section 4.4)

The basic measurement time interval for:

- Voltage
- Current
- Power
- Harmonics
- Inter-harmonics
- Signalling
- Unbalance

is a 10/12-cycle time interval. The 10/12-cycle measurement is resynchronized on each Interval tick according to the IEC 61000-4-30 Class A. Measurement methods are based on the digital sampling of the input signals, synchronised to the fundamental frequency. Each input (4 voltages and 4 currents) is simultaneously sampled.

5.1.2 Voltage measurement (magnitude of supply voltage)

Standard compliance: IEC 61000-4-30 Class A (Section 5.2)

All voltage measurements represent RMS values of the voltage magnitude over a 10/12-cycle time interval. Every interval is contiguous, and not overlapping with adjacent intervals.

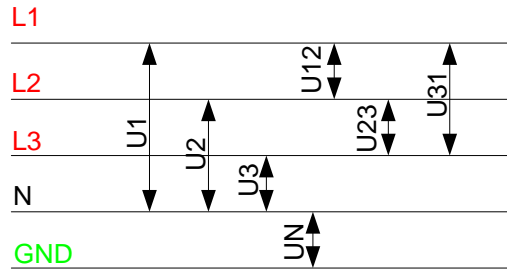


Figure 151: Phase and Phase-to-phase voltage

Voltage values are measured according to the following equation:

Phase voltage:
$$U_p = \sqrt{\frac{1}{M} \sum_{j=1}^M u_{pj}^2} \quad [V], p: 1,2,3,N \quad (1)$$

Line voltage:
$$U_{pg} = \sqrt{\frac{1}{M} \sum_{j=1}^M (u_{pj} - u_{gj})^2} \quad [V], pg.: 12,23,31 \quad (2)$$

Phase voltage crest factor:
$$CF_{Up} = \frac{U_{pPk}}{U_p}, p: 1,2,3,N \quad (3)$$

Line voltage crest factor:
$$CF_{Upg} = \frac{U_{pgPk}}{U_{pg}}, pg.: 12, 23, 31 \quad (4)$$

The instrument has internally 3 voltage measurement ranges, which are automatically selected regarding to the nominal voltage.

5.1.3 Current measurement (magnitude of supply current)

Standard compliance: Class A (Section 5.13)

All current measurements represent RMS values of the samples of current magnitude over a 10/12-cycle time interval. Each 10/12-cycle interval is contiguous and non-overlapping.

Current values are measured according to the following equation:

Phase current:
$$I_p = \sqrt{\frac{1}{M} \sum_{j=1}^M I_{pj}^2} \quad [A], p: 1,2,3,N \quad (5)$$

Phase current crest factor:
$$I_{p_{cr}} = \frac{I_{p_{max}}}{I_p}, p: 1,2,3, N \quad (6)$$

The instrument has internally two current ranges: 10% and 100% range of nominal transducer current. Additionally, Smart current clamps models offer few measuring ranges, automatic clamp detection and automatic range selection.

5.1.4 Frequency measurement

Standard compliance: IEC 61000-4-30 Class A (Section 5.1)

During RECORDING with aggregation time **Interval: ≥ 10 sec** frequency reading is obtained every 10 s. The fundamental frequency output is the ratio of the number of integral cycles counted during the 10 s time clock interval, divided by the cumulative duration of the integer cycles. Harmonics and interharmonics are attenuated with digital filter in order to minimize the effects of multiple zero crossings.

The measurement time intervals are non-overlapping. Individual cycles that overlap the 10 s time clock are discarded. Each 10 s interval begin on an absolute 10 s time clock, with uncertainty as specified in section 6.2.20.

For RECORDING with aggregation time **Interval: < 10 sec** and on-line measurements, frequency reading is obtained from 10/12 cycles frequency. The frequency is ratio of 10/12 cycles, divided by the duration of the integer cycles.

Frequency measurement is *performed* on chosen **Synchronization** channel, in CONNECTION SETUP menu.

5.1.5 Modern Power measurement

Standard compliance: IEEE 1459-2010

See section 3.23.6 how to select Modern Power measurement method. Please note that instrument record all measurement (Classic and Modern), regardless of selected method. Data presentation could be changed on the instrument LCD or inside the PowerView3.0.

Instrument fully complies with power measurement defined in the latest IEEE 1459 standard. The old definitions for active, reactive, and apparent powers are valid as long as the current and voltage waveforms remained nearly sinusoidal. This is not the case today, where we have various power electronics equipment, such as Adjustable Speed Drives, Controlled Rectifiers, Cyclo-converters, Electronically Ballasted Lamps. Those represent major nonlinear and parametric loads proliferating among industrial and commercial customers. New Power theory splits power to fundamental and nonfundamental components, as shown on figure below.

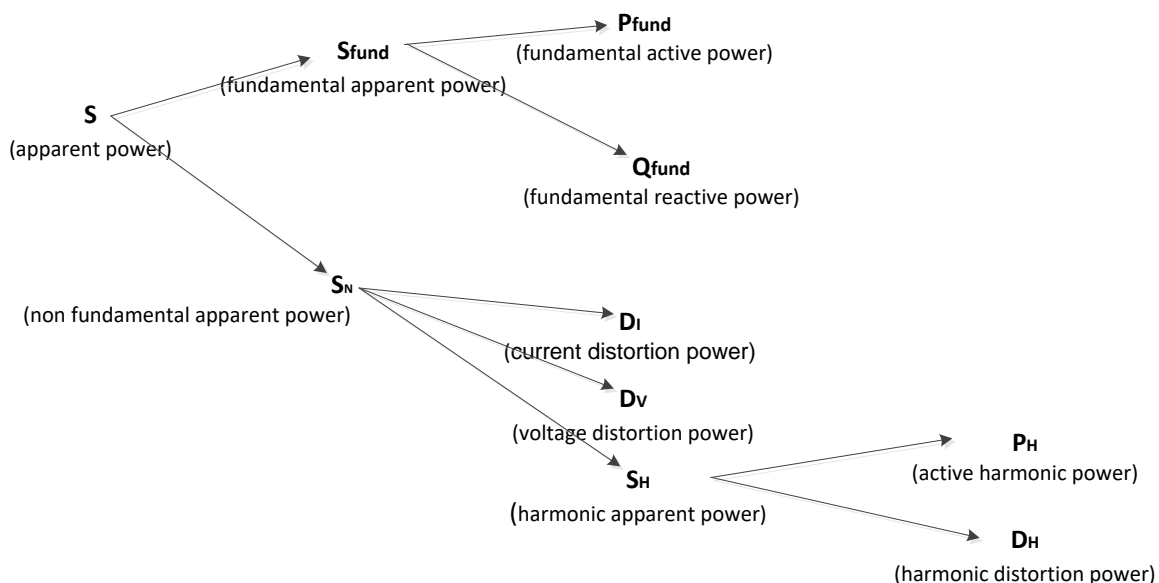


Figure 152: IEEE 1459 phase power measurement organisation (phase)

In table below summary of all power measurement is shown.

Table 136: Summary and grouping of the phase power quantities

| Quantity | Combined powers | Fundamental powers | Nonfundamental Powers |
|--------------------------|-----------------|--------------------|-----------------------|
| Apparent (VA) | S | S_{fund} | S_N, S_H |
| Active (W) | P | P_{fund} | P_H |
| Nonactive/reactive (var) | N | Q_{fund} | D_I, D_V, D_H |
| Line utilization | $PF_{ind/cap}$ | $DPF_{ind/cap}$ | - |
| Harmonic pollution (%) | - | - | S_N/S_{fund} |

Power measurement for three phase systems are slightly different as shown on figure below.

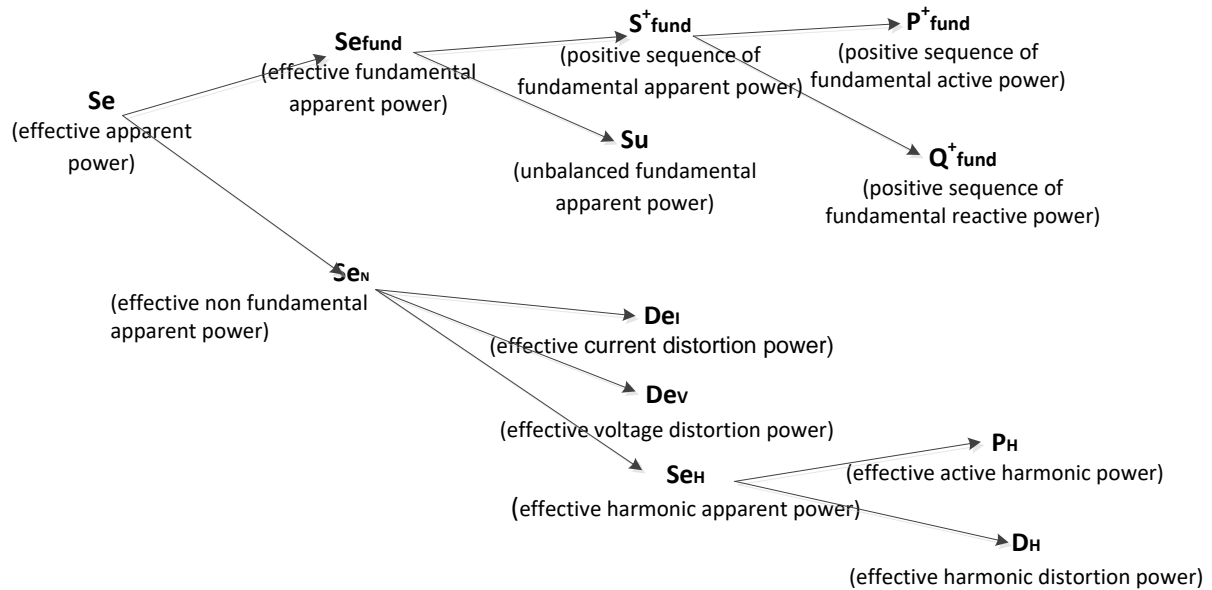


Figure 153: IEEE 1459 phase power measurement organisation (totals)

Table 137: Power summary and grouping of the total power quantities

| Quantity | Combined powers | Fundamental powers | Nonfundamental Powers |
|--------------------------|-----------------|-----------------------|-----------------------|
| Apparent (VA) | Se | S_{fund}, S^+, Su | S_N, S_H |
| Active (W) | P | P^+_{tot} | P_H |
| Nonactive/reactive (var) | N | Q^+_{tot} | De_i, De_v, De_H |
| Line utilization | $PF_{ind/cap}$ | $DPF^+_{tot ind/cap}$ | - |
| Harmonic pollution (%) | - | - | S_N/S_{fund} |

Combined phase power measurements

Standard compliance: IEEE STD 1459-2010

All combined (fundamental + nonfundamental) active power measurements represent RMS values of the samples of instantaneous power over a 10/12-cycle time interval. Each 10/12-cycle interval is contiguous and non-overlapping.

Combined phase active power: (7)

$$P_p = \frac{1}{N} \sum_{j=1}^N P_{p_j} = \frac{1}{N} \sum_{j=1}^N U_{p_j} * I_{p_j} \quad [\text{W}], p: 1,2,3$$

Combined apparent and nonactive power, and power factor are calculated according to the following equations:

Combined phase apparent power: (8)

$$S_p = U_p * I_p \quad [\text{VA}], p: 1,2,3$$

Combined phase nonactive power:

$$N_p = \text{Sign}(Q_p) \cdot \sqrt{S_p^2 - P_p^2} \quad [\text{var}], p: 1,2,3 \quad (9)$$

Phase power factor: $PF_p = \frac{P_p}{S_p}, p: 1,2,3 \quad (10)$

Total combined power measurements

Standard compliance: IEEE STD 1459-2010

Total combined (fundamental + nonfundamental) active, nonactive and apparent power and total power factor are calculated according to the following equation:

Total active power: $P_{tot} = P1 + P2 + P3 \quad [\text{W}], \quad (11)$

Total nonactive power: $N_{tot} = N1 + N2 + N3 \quad [\text{var}], \quad (12)$

Total apparent power (effective): $S_{e_{tot}} = 3 \cdot U_e \cdot I_e \quad [\text{VA}], \quad (13)$

Total power factor (effective): $PF_{e_{tot}} = \frac{P_{tot}}{S_{e_{tot}}}. \quad (14)$

In this formula U_e and I_e are calculated differently for three phase four wire (4W) and three phase three wire (3W) systems.

Effective voltage U_e and current I_e in 4W systems:

$$I_e = \sqrt{\frac{I_1^2 + I_2^2 + I_3^2 + I_N^2}{3}} \quad U_e = \sqrt{\frac{3 \cdot (U_1^2 + U_2^2 + U_3^2) + U_{12}^2 + U_{23}^2 + U_{31}^2}{18}} \quad (15)$$

Effective voltage U_e and current I_e in 3W systems:

$$I_e = \sqrt{\frac{I_1^2 + I_2^2 + I_3^2}{3}} \quad U_e = \sqrt{\frac{U_{12}^2 + U_{23}^2 + U_{31}^2}{9}} \quad (16)$$

Fundamental phase power measurements

Standard compliance: IEEE STD 1459-2010

All fundamental power measurements are calculated from fundamental voltages and currents obtained from harmonic analysis (see section 5.1.8 for details).

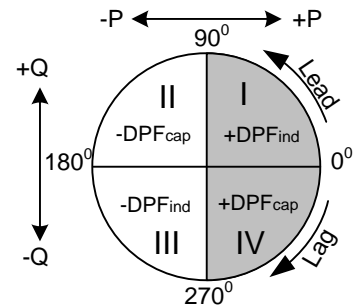
Fundamental phase active power:

$$P_{fundP} = U_{fundP} \cdot I_{fundP} \cdot \cos \varphi_{U_p - I_p} \quad [\text{W}], p: 1,2,3 \quad (17)$$

Fundamental apparent and reactive power and power factor are calculated according to the following equations:

Fundamental phase apparent power:

$$S_{fundP} = U_{fundP} \cdot I_{fundP} \quad [\text{VA}], p: 1,2,3 \quad (18)$$



Fundamental phase reactive power:

$$Q_{fundP} = U_{fundP} \cdot I_{fundP} \cdot \sin \varphi_{U_p - I_p} \quad [\text{var}], p: 1,2,3 \quad (19)$$

Phase displacement power factor:

$$DPF_p = \cos \varphi_p = \frac{P_p}{S_p}, p: 1,2,3 \quad (20)$$

Positive sequence (total) fundamental power measurements

Standard compliance: IEEE STD 1459-2010

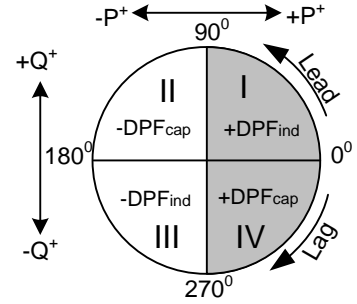
According to the IEEE STD 1459, positive sequence power (P^+ , Q^+ , S^+) are recognised as very important intrinsic power measurements. They are calculated according to the following equation:

Positive sequence active power:

$$P_{tot}^+ = 3 \cdot U^+ \cdot I^+ \cos \varphi^+ \quad [\text{W}], \quad (21)$$

Positive sequence reactive power:

$$Q_{tot}^+ = 3 \cdot U^+ \cdot I^+ \sin \varphi^+ \quad [\text{var}], \quad (22)$$



Positive sequence apparent power:

$$S_{tot}^+ = 3 \cdot U^+ \cdot I^+ \text{ [VA]}, \quad (23)$$

Positive sequence power factor:

$$DPF_{tot}^+ = \frac{P_{tot}^+}{S_{tot}^+}. \quad (24)$$

U^+ , U^- , U^0 and φ^+ are obtained from unbalance calculus. See section 5.1.11 for details.

Nonfundamental phase power measurements

Standard compliance: IEEE STD 1459-2010

Nonfundamental power measurements are measured according to following equations:

Phase nonfundamental apparent power:

$$S_{Np} = \sqrt{D_{Ip}^2 + D_{Vp}^2 + S_{Hp}^2} \text{ [VA], } p: 1,2,3 \quad (25)$$

Phase current distortion power

$$D_{Ip} = S_{fundP} \cdot THD_{Ip} \text{ [VA], } p: 1,2,3 \quad (26)$$

Phase voltage distortion power:

$$D_{Vp} = S_{fundP} \cdot THD_{Vp} \text{ [var], } p: 1,2,3 \quad (27)$$

Phase harmonic apparent power

$$S_{Hp} = S_{fundP} \cdot THD_{Vp} \cdot THD_{Ip} \text{ [var], } p: 1,2,3 \quad (28)$$

Phase active harmonic power:

$$P_{Hp} = P_p - P_{fundP} \text{ [W], } p: 1,2,3 \quad (29)$$

Phase harmonic distortion power

$$D_{Hp} = \sqrt{S_{Hp}^2 - P_{Hp}^2} \text{ [var], } p: 1,2,3 \quad (30)$$

Total nonfundamental power measurements

Standard compliance: IEEE STD 1459-2010

Total nonfundamental power quantities are calculated according to the following equations:

(31)

Total nonfundamental effective apparent power:

$$SeN_{tot} = \sqrt{DeI_{tot}^2 + DeV_{tot}^2 + SeH_{tot}^2} \quad [\text{VA}]$$

Total effective current distortion power:

$$DeI_{tot} = 3 \cdot Ue_{fund} \cdot IeH \quad [\text{var}]$$

where:

$$IeH = \sqrt{Ie^2 - Ie_{fund}^2}$$

(32)

Total effective voltage distortion power:

$$DeV_{tot} = 3 \cdot Ue_H \cdot Ie_{fund} \quad [\text{var}]$$

where:

$$UeH = \sqrt{Ue^2 - Ue_{fund}^2}$$

(33)

Total effective apparent power:

$$SeH_{tot} = Ue_H \cdot Ie_H \quad [\text{VA}]$$

(34)

Total effective harmonic power:

$$PH_{tot} = PH_1 + PH_2 + PH_3 \quad [\text{W}]$$

where:

$$PH_1 = P_1 - P_{fund1}, PH_2 = P_2 - P_{fund2}, PH_3 = P_3 - P_{fund3}$$

(35)

Total effective distortion power

$$DeH = \sqrt{SeH^2 - PH^2} \quad [\text{var}]$$

(36)

Harmonic pollution

$$HP = \frac{SeN_{tot}}{Se_{fundtot}} \cdot 100 [\%]$$

where:

$$Se_{fundtot} = 3 \cdot Ue_{fund} \cdot Ie_{fund}$$

(37)

Load unbalance

$$LU = \frac{Su_{fund}}{S_{tot}^+}$$

(38)

5.1.6 Classic Vector and Arithmetic Power measurement

Standard compliance: IEC 61557-12

See section 3.23.6 how to select Modern Power measurement method. Please note that instrument record all measurement (Classic and Modern), regardless of selected method.

Instrument fully complies with classic Vector and Arithmetic power measurement defined in the latest IEC 61557-12 standard (Annex A) and IEEE 1459 (Section 3.2.2.5 and 3.2.2.6). There is large number of measurement equipment installed on various points on network where this measurement algorithms are used for measurement and recording. In order to compare past measurement with current, use one of classic Power measurement. The measurements for active, reactive, and apparent powers have

physical meaning as long as the current and voltage waveforms remained nearly sinusoidal. On figure below, graphical interpretation of Vector and Arithmetic power measurements are shown.

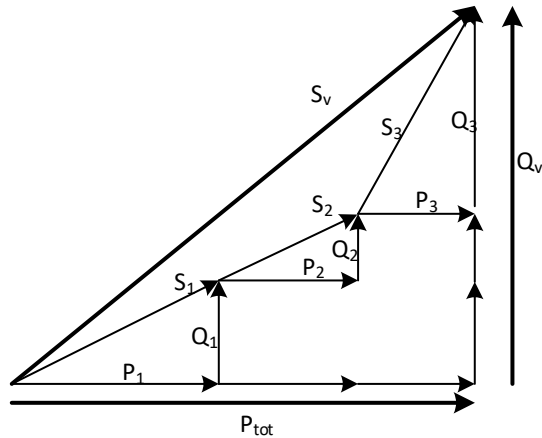


Figure 154: Vector representation of total power calculus

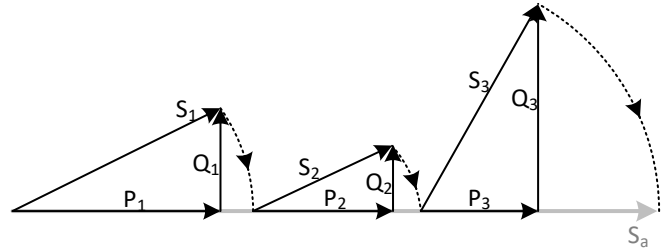


Figure 155: Arithmetic representation of total power calculus

In table below summary of all power measurement is shown.

Table 138: Summary and grouping of the phase power quantities

| Quantity | Combined powers | Fundamental powers |
|--------------------------|-----------------|--------------------|
| Apparent (VA) | S | S_{fund} |
| Active (W) | P | P_{fund} |
| Nonactive/reactive (var) | N | Q_{fund} |
| Line utilization | $PF_{ind/cap}$ | $DPF_{ind/cap}$ |

Table 139: Power summary and grouping of the total power quantities

| Quantity | Combined powers | Fundamental powers |
|--------------------------|--------------------|---------------------|
| Apparent (VA) | S_v | $S_{v_{fund}}$ |
| Active (W) | P | P_{tot} |
| Nonactive/reactive (var) | N | Q_{tot} |
| Line utilization | $PF_{v_{ind/cap}}$ | $DPF_{v_{ind/cap}}$ |

Combined phase power measurements

All Classic combined phase power measurements are identical with Modern combined phase power measurement. See 5.1.5 section Combined phase power measurements for details.

Total Vector combined power measurements

Standard compliance: IEC 61557-12 Annex A and IEEE STD 1459-2010 Section 3.2.2.6

Total Vector combined (fundamental + nonfundamental) active, nonactive and apparent power and total power factor are calculated according to the following equation:

$$\text{Total active power:} \quad P_{tot} = P_1 + P_2 + P_3 \quad [\text{W}], \quad (39)$$

$$\text{Total nonactive power (vector):} \quad N_{tot} = N_1 + N_2 + N_3 \quad [\text{var}], \quad (40)$$

$$\text{Total apparent power (vector):} \quad Sv_{tot} = \sqrt{P_{tot}^2 + N_{tot}^2} \quad [\text{VA}], \quad (41)$$

$$\text{Total power factor (effective):} \quad PFv_{tot} = \frac{P_{tot}}{Sv_{tot}}. \quad (42)$$

Total Arithmetic combined power measurements

Standard compliance: IEC 61557-12 Annex A and IEEE STD 1459-2010 Section 3.2.2.5

Total Arithmetic combined (fundamental + nonfundamental) active, nonactive and apparent power and total power factor are calculated according to the following equation:

$$\text{Total active power:} \quad P_{tot} = P_1 + P_2 + P_3 \quad [\text{W}], \quad (43)$$

$$\text{Total apparent power (arithmetic):} \quad Sa_{tot} = S_1 + S_2 + S_3 \quad [\text{VA}], \quad (44)$$

$$\text{Total nonactive power (arithmetic):} \quad Na_{tot} = \sqrt{Sa_{tot}^2 - P_{tot}^2} \quad [\text{var}], \quad (45)$$

$$\text{Total power factor (arithmetic):} \quad Pfa_{tot} = \frac{P_{tot}}{Sa_{tot}}. \quad (46)$$

Fundamental phase power measurements

Standard compliance: IEEE STD 1459-2010

All Classic fundamental phase power measurements are identical with Modern fundamental phase power measurement. See 5.1.5 section Fundamental phase power measurements for details.

Total Vector fundamental power measurements

Standard compliance: IEC 61557-12 Annex A and IEEE STD 1459-2010 Section 3.2.2.6

Total Vector fundamental active, reactive and apparent power and total displacement vector power factor are calculated according to the following equation:

$$\text{Total fundamental active power:} \quad P_{fundtot} = P_{fund1} + P_{fund2} + P_{fund3} \quad [\text{W}], \quad (47)$$

$$\text{Total fundamental reactive power (vector):} \quad Q_{fundtot} = Q_{fund1} + Q_{fund2} + Q_{fund3} \quad [\text{var}], \quad (48)$$

$$\text{Total fundamental apparent power (vector):} \quad Sv_{fundtot} = \sqrt{P_{fundtot}^2 + Q_{fundtot}^2} \quad [\text{VA}], \quad (49)$$

Total displacement power factor (vector):
$$DPF_{v_{tot}} = \frac{P_{fundtot}}{S_{v_{fundtot}}} . \quad (50)$$

All fundamental power measurements are calculated from fundamental voltages and currents obtained from harmonic analysis (see section 5.1.8 for details).

Total Arithmetic fundamental power measurements

Standard compliance: IEC 61557-12 Annex A and IEEE STD 1459-2010 Section 3.2.2.5

Total Arithmetic fundamental active, reactive and apparent power and total displacement arithmetic power factor are calculated according to the following equation:

Total fundamental active power:
$$P_{fundtot} = P_{fund1} + P_{fund2} + P_{fund3} \text{ [W]}, \quad (51)$$

Total apparent power (arithmetic):
$$Sa_{fundtot} = S_{fund1} + S_{fund2} + S_{fund3} \text{ [VA]}, \quad (52)$$

Total nonactive power (arithmetic):
$$Qa_{fundtot} = \sqrt{Sa_{fundtot}^2 - P_{fundtot}^2} \text{ [var]}, \quad (53)$$

Total power factor (arithmetic):
$$DPFa_{tot} = \frac{P_{fundtot}}{Sa_{fundtot}} . \quad (54)$$

All fundamental power measurements are calculated from fundamental voltages and currents obtained from harmonic analysis (see section 5.1.8 for details).

5.1.7 Energy

Standard compliance: IEC 62053-21 Class 1S, IEC 62053-23 Class 2 ... MI 2893/MI 2892

Standard compliance: IEC 62053-21 Class 1, IEC 62053-23 Class 2 ... MI 2885

Energy measurement is divided in two sections: ACTIVE energy based on active power measurement and REACTIVE energy, based on fundamental reactive power measurement. Each of them has two energy counters for consumed and generated energy.

Calculations are shown below:

Active energy:

Consumed:
$$Ep_p^+ = \sum_{i=1}^m P_p^+(i)T(i) \text{ [kWh]}, p: 1,2,3, tot \quad (55)$$

Generated:
$$Ep_p^- = \sum_{i=1}^m P_p^-(i)T(i) \text{ [kWh]}, p: 1,2,3, tot$$

Reactive energy:

Consumed:
$$Eq_p^+ = \sum_{i=1}^m Q_{pInd}^+(i)T(i) + \sum_{i=1}^m Q_{pCap}^+(i)T(i) \text{ [kvarh]}, p: 1,2,3, tot \quad (56)$$

Generated:
$$Eq_p^- = \sum_{i=1}^m Q_{pCap}^-(i)T(i) + \sum_{i=1}^m Q_{pInd}^-(i)T(i) \text{ [kvarh]}, p: 1,2,3, tot$$

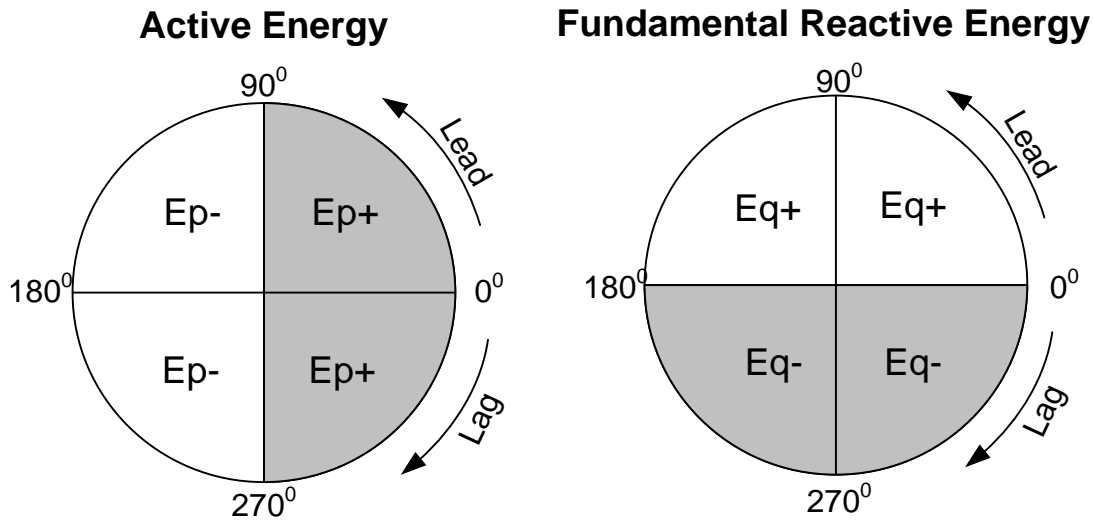


Figure 156: Energy counters and quadrant relationship

Instrument has 3 different counters sets:

1. Total counters are used for measuring energy over a complete recording. When recorder starts it sums the energy to existent state of the counters.
2. Last integration period counter measures energy during recording over last completed interval. It is calculated at end of each interval.
3. Current integration period counter measures energy during recording over current time interval.

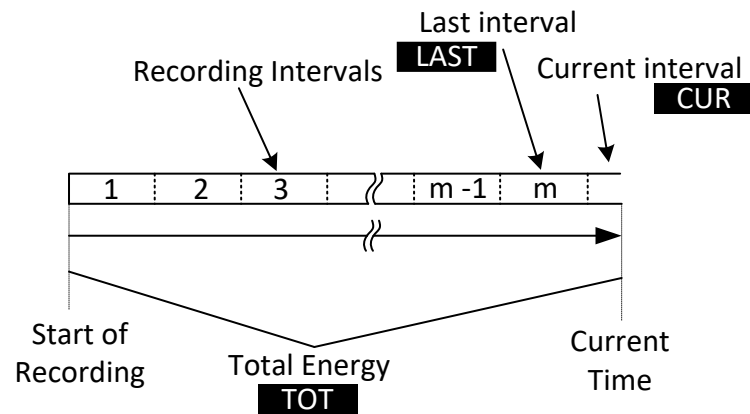


Figure 157: Instrument energy counters

5.1.8 Harmonics and interharmonics

Standard compliance: IEC 61000-4-30 Class A (Section 5.7)

IEC 61000-4-7 Class I

Calculation called fast Fourier transformation (FFT) is used to translate AD converted input signal to sinusoidal components. The following equation describes relation between input signal and its frequency presentation.

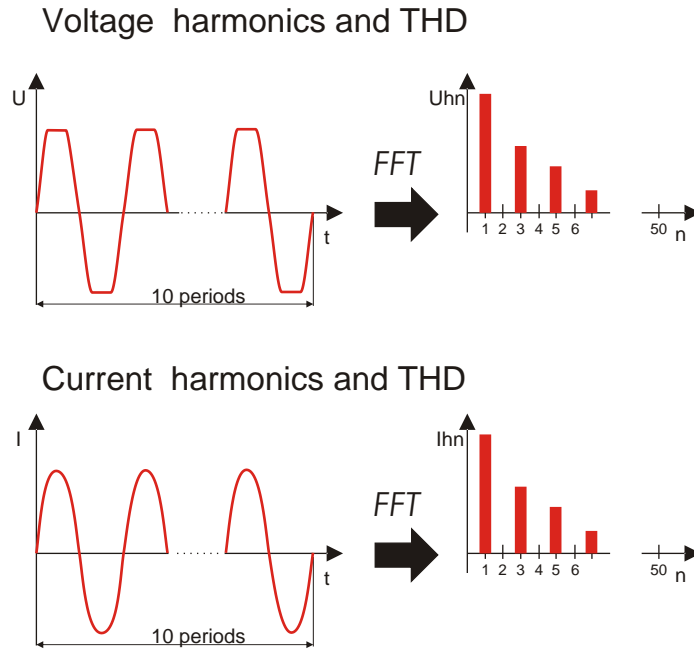


Figure 158: Current and voltage harmonics

$$u(t) = c_0 + \sum_{k=1}^{1024} c_k \sin\left(\frac{k}{10} \cdot 2\pi f_1 t + \varphi_k\right) \quad (57)$$

f_1 – frequency of signal fundamental (in example: 50 Hz)

c_0 – DC component

k – ordinal number (order of the spectral line) related to the frequency basis $f_{c1} = \frac{1}{T_N}$

T_N – is the width (or duration) of the time window ($T_N = N \cdot T_1$; $T_1 = 1/f_1$). Time window is that time span of a time function over which the Fourier transformation is performed.

c_k – is the amplitude of the component with frequency $f_{ck} = \frac{k}{10} f_1$

φ_k – is the phase of the component c_k

$U_{c,k}$ – is the RMS voltage value of component c_k

$I_{c,k}$ – is the RMS current value of component c_k

Phase voltage and current harmonics are calculated as RMS value of harmonic subgroup (*sg*): square root of the sum of the squares of the RMS value of a harmonic and the two spectral components immediately adjacent to it.

$$n^{\text{th}} \text{ voltage harmonic: } U_p h_n = \sqrt{\sum_{k=-1}^1 U_{C,(10-n)+k}^2} \quad p: 1,2,3 \quad (58)$$

$$n^{\text{th}} \text{ current harmonic: } I_p h_n = \sqrt{\sum_{k=-1}^1 I_{C,(10-n)+k}^2} \quad p: 1,2,3 \quad (59)$$

Total harmonic distortion is calculated as ratio of the RMS value of the harmonic subgroups to the RMS value of the subgroup associated with the fundamental:

$$\text{Total voltage harmonic distortion: } THD_{U_p} = \sqrt{\sum_{n=2}^{40} \left(\frac{U_p h_n}{U_p h_1} \right)^2}, \quad p: 1,2,3 \quad (60)$$

$$\text{Total current harmonic distortion: } THD_{I_p} = \sqrt{\sum_{n=2}^{40} \left(\frac{I_p h_n}{I_p h_1} \right)^2}, \quad p: 1,2,3 \quad (61)$$

Spectral component between two harmonic subgroups are used for interharmonics assessment. Voltage and current interharmonic subgroup of n-th order is calculated using RSS (root sum square) principle:

$$n^{\text{th}} \text{ voltage interharmonic: } U_p i h_n = \sqrt{\sum_{k=2}^8 U_{C,(10 \cdot n) + k}^2} \quad p: 1,2,3 \quad (62)$$

$$n^{\text{th}} \text{ current interharmonic: } I_p i h_n = \sqrt{\sum_{k=2}^8 I_{C,(10 \cdot n) + k}^2} \quad p: 1,2,3 \quad (63)$$

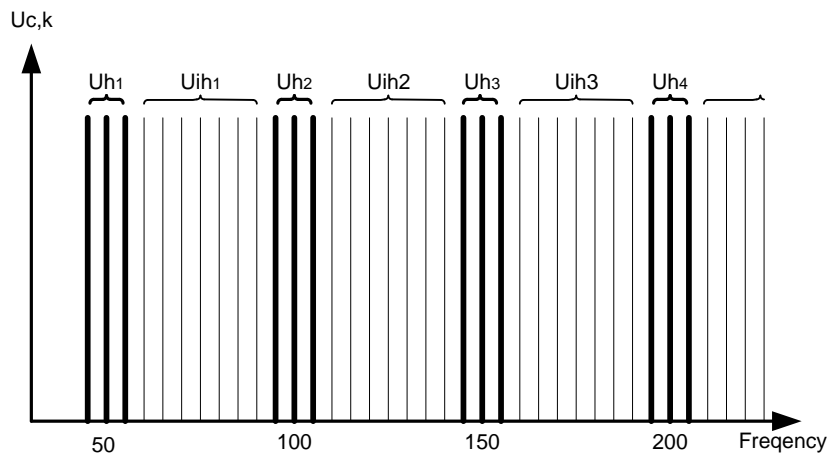


Figure 159: Illustration of harmonics / interharmonics subgroup for 50 Hz supply

The K factor is a factor that is developed to indicate the amount of harmonics that the load generates. The K rating is extremely useful when designing electric systems and sizing components. It is calculated as:

$$\text{K - factor: } K_p = \frac{\sum_{n=1}^{50} (I_p h_n \cdot n)^2}{\sum_{n=1}^{50} I_p h_n^2}, \quad p: 1,2,3 \quad (64)$$

5.1.9 Signalling

Standard compliance: IEC 61000-4-30 Class A (Section 5.10)

Signalling voltage is calculated on a FFT spectrum of a 10/12-cycle interval. Value of mains signalling voltage is measured as:

- RMS value of a single frequency bin if signalling frequency is equal to spectral bin frequency, or

- RSS value of four neighbouring frequency bins if signalling frequency differs from the power system bin frequency (for example, a ripple control signal with frequency value of 218 Hz in a 50 Hz power system is measured based on the RMS values of 210, 215, 220 and 225 Hz bins).

Mains signalling value calculated every 10/12 cycle interval are used in alarm and recording procedures. However, for EN50160 recording, results are aggregated additionally on 3 s intervals. Those values are used for confronting with limits defined in standard.

5.1.10 Flicker

Standard compliance: IEC 61000-4-30 Class A (Section 5.3)

IEC 61000-4-15 Class F1

Flicker is a visual sensation caused by unsteadiness of a light. The level of the sensation depends on the frequency and magnitude of the lighting change and on the observer. Change of a lighting flux can be correlated to a voltage envelope on figure below.

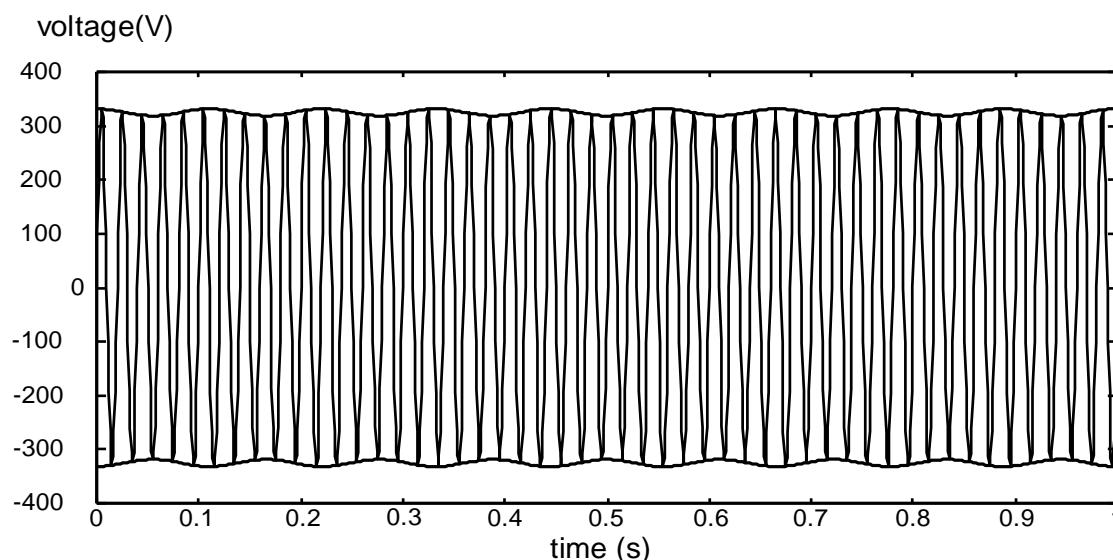


Figure 160: Voltage fluctuation

Flickers are measured in accordance with standard IEC 61000-4-15. Standard defines the transform function based on a 230 V / 60 W and 120 V / 60 W lamp-eye-brain chain response. That function is a base for flicker meter implementation and is presented on figure below.

P_{st1min} – is a short flicker estimation based on 1-minute interval. It is calculated to give quick preview of 10 minutes short term flicker.

P_{st} – 10 minutes, short term flicker is calculated according to IEC 61000-4-15

P_{lt} – 2 hours, long term flicker is calculated according to the following equation:

$$P_{lt} = \sqrt[3]{\frac{\sum_{i=1}^N P_{st_i}^3}{N}} \quad p: 1,2,3 \quad (65)$$

5.1.11 Voltage and current unbalance

Standard compliance: IEC 61000-4-30 Class A (Section 5.7)

The supply voltage unbalance is evaluated using the method of symmetrical components. In addition to the positive sequence component U^+ , under unbalanced conditions there also exists negative sequence component U^- and zero sequence component U_0 . These quantities are calculated according to the following equations:

$$\begin{aligned}\vec{U}^+ &= \frac{1}{3}(\vec{U}_1 + a\vec{U}_2 + a^2\vec{U}_3) \\ \vec{U}_0 &= \frac{1}{3}(\vec{U}_1 + \vec{U}_2 + \vec{U}_3), \\ \vec{U}^- &= \frac{1}{3}(\vec{U}_1 + a^2\vec{U}_2 + a\vec{U}_3),\end{aligned}\tag{66}$$

where $a = \frac{1}{2} + \frac{j\sqrt{3}}{2} = 1e^{j120^\circ}$.

For unbalance calculus, instrument use the fundamental component of the voltage input signals (U_1 , U_2 , U_3), measured over a 10/12-cycle time interval.

The negative sequence ratio u^- , expressed as a percentage, is evaluated by:

$$u^-(\%) = \frac{U^-}{U^+} \times 100\tag{67}$$

The zero-sequence ratio u^0 , expressed as a percentage, is evaluated by:

$$u^0(\%) = \frac{U^0}{U^+} \times 100\tag{68}$$

Note: In 3W systems zero sequence components U_0 and I_0 are by definition zero.

The supply current unbalance is evaluated in same fashion.

5.1.12 Under-deviation and over-deviation

Voltage Under-deviation (U_{Under}) and Over-deviation (U_{Over}) measurement method: Standard compliance: IEC 61000-4-30 Class A (Section 5.12)

Basic measurement for the Under-deviation and Over-deviation is RMS voltage magnitude measured over a 10/12-cycle time interval. Each RMS voltage *magnitude* (i) obtained through recording campaign is compared to nominal voltage U_{Nom} from which we express two vectors according to the formulas below:

$$U_{Under,i} = \begin{cases} U_{RMS(10/12),i} & \text{if } U_{RMS(10/12)} \leq U_{Nom} \\ U_{Nom} & \text{if } U_{RMS(10/12)} > U_{Nom} \end{cases}\tag{69}$$

$$U_{Over,i} = \begin{cases} U_{RMS(10/12),i} & \text{if } U_{RMS(10/12)} \geq U_{Nom} \\ U_{Nom} & \text{if } U_{RMS(10/12)} < U_{Nom} \end{cases}\tag{70}$$

Aggregation is performed on the end of recording interval as:

$$U_{Under} = \frac{U_{Nom} - \sqrt{\frac{\sum_{i=1}^n U_{Under,i}^2}{n}}}{U_{Nom}} [\%]\tag{71}$$

$$U_{Over} = \frac{U_{Nom} - \sqrt{\frac{\sum_{i=1}^n U_{Over,i}^2}{n}}}{U_{Nom}} [\%] \quad (72)$$

Under-deviation and over-deviation parameters may be useful when it is important to avoid, for example, having sustained under-voltages being cancelled in data by sustained over-voltages.

Note: Under-deviation and Over-deviation parameters are always positive values.

5.1.13 Voltage events

Measurement method

Standard compliance: IEC 61000-4-30 Class A (Section 5.4)

The basic measurement for event is $U_{Rms(1/2)}$. $U_{Rms(1/2)}$ is value of the RMS voltage measured over 1 cycle, commencing at a fundamental zero crossing and refreshed each half-cycle.

The cycle duration for $U_{Rms(1/2)}$ depends on the frequency, which is determined by the last 10/12-cycle frequency measurement. The $U_{Rms(1/2)}$ value includes, by definition, harmonics, interharmonics, mains signalling voltage, etc.

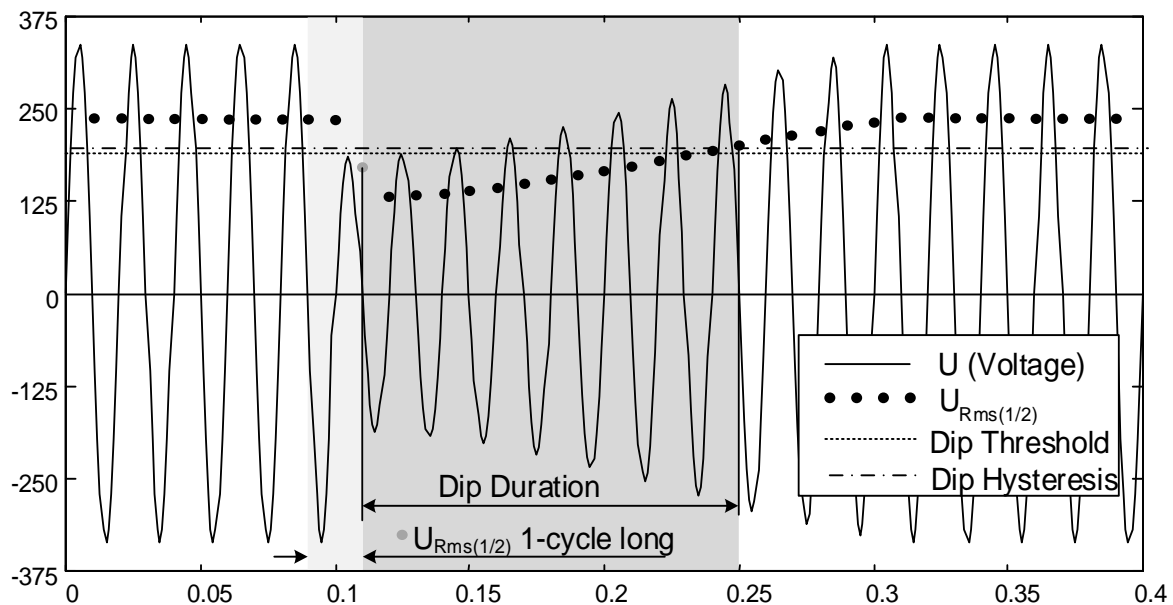


Figure 161: $U_{Rms(1/2)}$ 1-cycle measurement

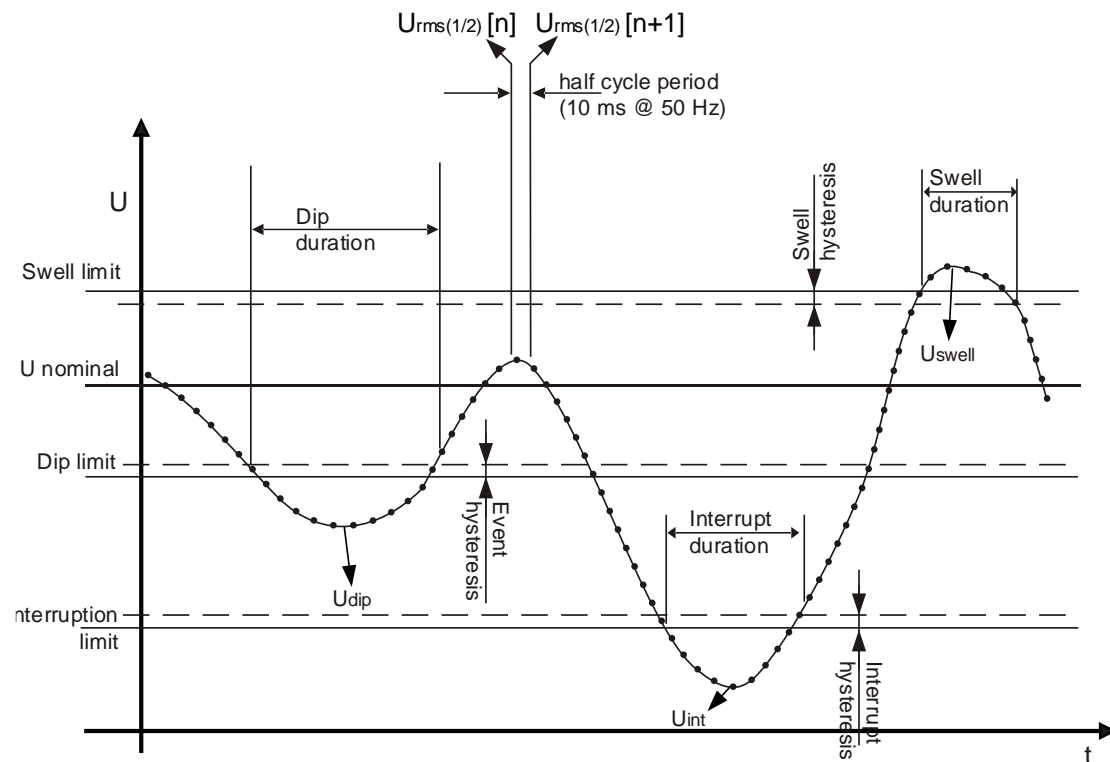


Figure 162: Voltage events definition

Voltage dip

Standard compliance: IEC 61000-4-30 Class A (Sections 5.4.1 and 5.4.2)

The **Dip Threshold** is a percentage of Nominal voltage defined in CONNECTION menu. The Dip Threshold and Hysteresis can be set by the user according to the use. **Dip Hysteresis** is difference in magnitude between the Dip start and Dip end thresholds. Instrument event evaluation in Event table screen depends on Connection type:


- On single-phase system (Connection type: 1W), a voltage dip begins when the $U_{Rms(1/2)}$ voltage falls below the dip threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or above the dip threshold plus the hysteresis voltage.
- On poly-phase systems (Connection type: 2W, 3W, 4W, Open Delta) two different views can be used for evaluation simultaneously:
 - Group view  with selected **ALL INT** view (in compliance with IEC 61000-4-30 Class A): a dip begins when the $U_{Rms(1/2)}$ voltage of one or more channels is below the dip threshold and ends when the $U_{Rms(1/2)}$ voltage on all measured channels is equal to or above the dip threshold plus the hysteresis voltage.
 - Phase view **Ph.** (for troubleshooting): a voltage dip begins when the $U_{Rms(1/2)}$ voltage of one channel falls below the dip threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or above the dip threshold plus the hysteresis voltage, on the same phase.



Figure 163: Voltage dip related screens on the instrument


A voltage dip is characterized by following data: **Dip Start time**, **Level (U_{Dip})** and **Dip duration**:

- U_{Dip} – residual dip voltage, is the lowest $U_{Rms(1/2)}$ value measured on any channel during the dip. It is shown in **Level** column in the Event Table on the instrument.
- The **Dip Start time** is time stamped with the time of the start of the $U_{Rms(1/2)}$ of the channel that initiated the event. It is shown in **START** column in the Event Table on the instrument. The Dip End time is time stamped with the time of the end of the $U_{Rms(1/2)}$ that ended the event, as defined by the threshold.
- The **Dip Duration** is the time difference between the Dip Start time and the Dip End time. It is shown in **Duration** column in the Event Table on the instrument.

Voltage swell

Standard compliance: IEC 61000-4-30 Class A (Sections 5.4.1 and 5.4.3)

The **Swell Threshold** is a percentage of nominal voltage defined in CONNECTION menu. The swell threshold can be set by the user according to the use. **Swell Hysteresis** is difference in magnitude between the Swell start and Swell end thresholds. Instrument event evaluation in Event table screen depends on Connection type:

- On single-phase system (Connection type: 1W), a voltage swell begins when the $U_{Rms(1/2)}$ voltage rises above the swell threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or below the swell threshold plus the hysteresis voltage.
- On poly-phase systems (Connection type: 2W, 3W, 4W, Open Delta) two different view can be used for evaluation simultaneously:
 - Group view  with selected **ALL INT** view: A swell begins when the $U_{Rms(1/2)}$ voltage of one or more channels is above the swell threshold and ends when the $U_{Rms(1/2)}$ voltage on all measured channels is equal to or below the swell threshold plus the hysteresis voltage.
 - Phase view **Ph.**: A swell begins when the $U_{Rms(1/2)}$ voltage of one channel rises above the swell threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or below the swell threshold plus the hysteresis voltage, on the same phase.

A voltage swell is characterized by following data: **Swell Start time**, **Level (U_{Swell})** and **Swell duration**:

- U_{Swell} – maximum swell magnitude voltage, is the largest $U_{Rms(1/2)}$ value measured on any channel during the swell. It is shown in **Level** column in the Event Table on the instrument.
- The **Swell Start time** is time stamped with the time of the start of the $U_{Rms(1/2)}$ of the channel that initiated the event. It is shown in **START** column in the Event Table on the instrument. The Swell End time is time stamped with the time of the $U_{Rms(1/2)}$ that ended the event, as defined by the threshold.
- The **Duration** of a voltage swell is the time difference between the beginning and the end of the swell. It is shown in **Duration** column in the Event Table on the instrument.

Voltage interrupt

Standard compliance: IEC 61000-4-30 Class A (Section 5.5)

Measuring method for voltage interruptions detection is same as for dips and swells, and is described in previous sections.

The **Interrupt Threshold** is a percentage of nominal voltage defined in CONNECTION menu. **Interrupt Hysteresis** is difference in magnitude between the Interrupt start and Interrupt end thresholds. The interrupt threshold can be set by the user according to the use. Instrument event evaluation in Event table screen depends on Connection type:


- On single-phase system (1W), a voltage interruption begins when the $U_{Rms(1/2)}$ voltage falls below the voltage interruption threshold and ends when the $U_{Rms(1/2)}$ value is equal to, or greater than, the voltage interruption threshold plus the hysteresis
- On poly-phase systems (2W, 3W, 4W, Open Delta) two different view can be used for evaluation simultaneously:
 - Group view  with selected **ALL INT** view: a voltage interruption begins when the $U_{Rms(1/2)}$ voltages of all channels fall below the voltage interruption threshold and ends when the $U_{Rms(1/2)}$ voltage on any one channel is equal to, or greater than, the voltage interruption threshold plus the hysteresis.
 - Phase view **Ph.:** a voltage interrupt begins when the $U_{Rms(1/2)}$ voltage of one channel fall below the interrupt threshold, and ends when the $U_{Rms(1/2)}$ voltage is equal to or above the interrupt threshold plus the hysteresis voltage, on the same phase.



Figure 164: Voltage interrupts related screens on the instrument

A voltage interrupt is characterized by following data: **Interrupt Start time**, **Level (U_{Int})** and **Interrupt Duration**:

- U_{Int} – minimum interrupt magnitude voltage, is the lower $U_{Rms(1/2)}$ value measured on any channel during the interrupt. It is shown in **Level** column in the Event Table on the instrument.
- The **Interrupt Start time** of a interrupt is time stamped with the time of the start of the $U_{Rms(1/2)}$ of the channel that initiated the event. It is shown in **START** column in the Event Table on the instrument. The Interrupt End time of the interrupt is time stamped with the time of the end of the $U_{Rms(1/2)}$ that ended the event, as defined by the threshold.
- The **Interrupt Duration** is the time difference between the beginning and the end of the interrupt. It is shown in **Duration** column in the Event Table on the instrument.

5.1.14 Alarms

Generally, alarm can be seen as an event on arbitrary quantity. Alarms are defined in alarm table (see section 3.23.3 for alarm table setup). The basic measurement time interval for: voltage, current, active, nonactive and apparent power, harmonics and unbalance alarms is a 10/12-cycle time interval.

Each alarm has attributes described in table below. Alarm occurs when 10/12-cycle measured value on phases defined as **Phase**, cross **Threshold value** according to defined **Trigger slope**, minimally for **Minimal duration** value.

Table 140: Alarm definition parameters

| | |
|-------------------------|--|
| Quantity | <ul style="list-style-type: none"> • Voltage • Current • Frequency • Active, nonactive and apparent power • Harmonics and interharmonics • Unbalance • Flickers • Signalling |
| Phase | L1, L2, L3, L12, L23, L31, All, Tot, N |
| Trigger slope | < - Fall , > - Rise |
| Threshold value | [Number] |
| Minimal duration | 200ms ÷ 10min |

Each captured alarm is described by the following parameters:

Table 141: Alarm signatures

| | |
|-----------------|--|
| Date | Date when selected alarm has occurred |
| Start | Alarm start time - when first value cross threshold. |
| Phase | Phase on which alarm occurred |
| Level | Minimal or maximal value in alarm |
| Duration | Alarm duration |

5.1.15 Rapid voltage changes (RVC)

Standard compliance: IEC 61000-4-30 Class A (Section 5.11)

Rapid Voltage Change (RVC) is generally speaking an abrupt transition between two “steady state” RMS voltage levels. It is considered as event, (similar to dip or swell) with start time and duration between steady state levels. However, those steady state levels does not exceed dip or swell threshold.

RVC event detection

Instrument RVC event detection implementation strictly follows IEC 61000-4-30 standard requirements. It begins with finding a voltage steady-state. RMS voltage is in a steady-state condition if 100/120 $U_{Rms(1/2)}$ values remain within an *RVC threshold* (this value is set by the user in MEASUREMENT SETUP → RVC Setup screen) from the arithmetic mean of those 100/120 $U_{Rms(1/2)}$ values. Every time a new $U_{Rms(1/2)}$ value is available, the arithmetic mean of the previous 100/120 $U_{Rms(1/2)}$ values, including the new value, is calculated. If a new $U_{Rms(1/2)}$ value crosses *RVC threshold*, RVC event is detected. After detection instruments wait for 100/120 half cycles, before searching for next voltage steady-state. If a voltage dip or voltage swell is detected during an RVC event, then the RVC event is discarded because the event is not an RVC event.

RVC event characterisation

An RVC event is characterized by four parameters: start time, duration, ΔU_{\max} and ΔU_{ss} .

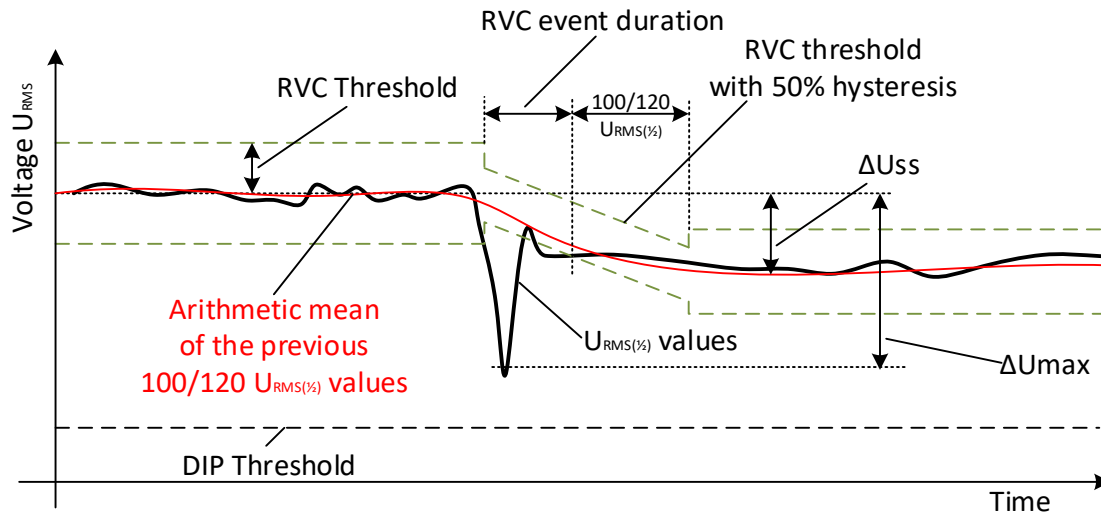


Figure 165: RVC event description

- **Start time** of an RVC event is time stamp when $U_{Rms(1/2)}$ value cross *RVC threshold* level
- RVC event **duration** is 100/120 half cycles shorter than the duration between adjacent steady states voltages.
- **ΔU_{\max}** is the maximum absolute difference between any of the $U_{Rms(1/2)}$ values during the RVC event and the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event. For poly-phase systems, the ΔU_{\max} is the largest ΔU_{\max} on any channel.
- **ΔU_{ss}** is the absolute difference between the final arithmetic mean 100/120 $U_{Rms(1/2)}$ value just prior to the RVC event and the first arithmetic mean 100/120 $U_{Rms(1/2)}$ value after the RVC event. For poly-phase systems, the ΔU_{ss} is the largest ΔU_{ss} on any channel.

5.1.16 Data aggregation in GENERAL RECORDING

Standard compliance: IEC 61000-4-30 Class A (Section 4.5)

Time aggregation period (IP) during recording is defined with parameter Interval: x min in GENERAL RECORDER menu.

A new recording interval commence at real time clock tick (10 minutes \pm half cycle, for Interval: 10 min) and it last until next real time clock plus time needed to finish current 10/12 cycle measurement. In the same time new measurement is started, as shown on next figure. The data for the IP time interval are aggregated from 10/12-cycle time intervals, according to the figure below. The aggregated interval is tagged with the absolute time. The time tag is the time at the conclusion of the interval. There is overlap, during recording, as illustrated on figure below.

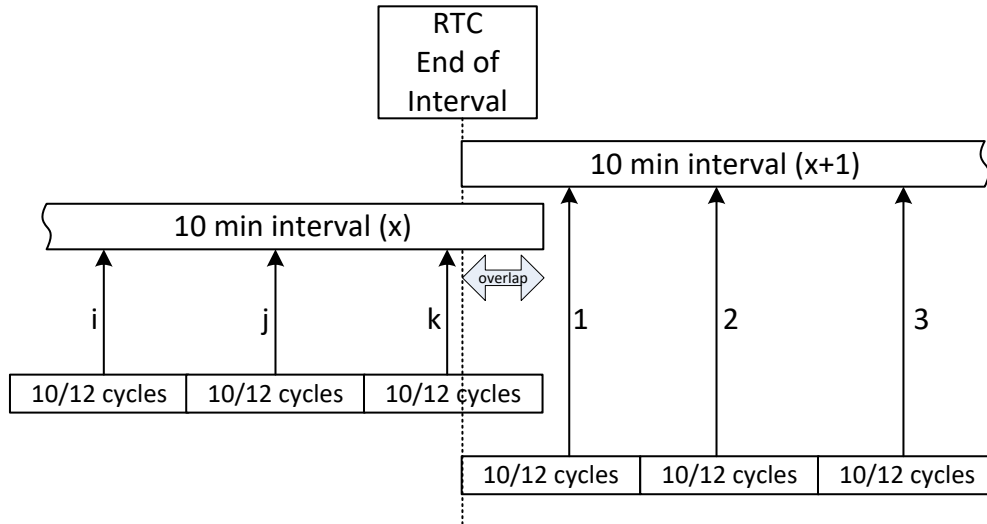


Figure 166: Synchronization and aggregation of 10/12 cycle intervals

Depending from the quantity, for each aggregation interval instrument computes average, minimal, maximal and/or active average value, this can be RMS (root means square) or arithmetical average. Equations for both averages are shown below.

$$\text{RMS average} \quad A_{RMS} = \sqrt{\frac{1}{N} \sum_{j=1}^N A_j^2} \quad (73)$$

Where:

A_{RMS} – quantity average over given aggregation interval

A – 10/12-cycle quantity value

N – number of 10/12 cycles measurements per aggregation interval.

$$\text{Arithmetic average:} \quad A_{avg} = \frac{1}{N} \sum_{j=1}^N A_j \quad (74)$$

Where:

A_{avg} – quantity average over given aggregation interval

A – 10/12-cycle quantity value

N – number of 10/12 cycles measurements per aggregation interval.

In the next table averaging method for each quantity is specified:

Table 142: Data aggregation methods

| Group | Value | Aggregation method | Recorded values |
|-----------|-----------|--------------------|----------------------|
| Voltage | U_{Rms} | RMS average | Min, Avg, AvgOn, Max |
| | THD_U | RMS average | AvgOn, Max |
| | CF_U | RMS average | Min, Avg, Max |
| Current | I_{Rms} | RMS average | Min, Avg, AvgOn, Max |
| | THD_I | RMS average | Avg, AvgOn, Max |
| | CF_I | RMS average | Min, Avg, AvgOn, Max |
| Frequency | $f(10s)$ | - | AvgOn |

| | | | |
|----------------|------------------------|--------------------|----------------------|
| | f(200ms) | RMS average | Min, AvgOn, Max |
| Power | Combined | Arithmetic average | Min, Avg, AvgOn, Max |
| | Fundamental | Arithmetic average | Min, Avg, AvgOn, Max |
| | Nonfundamental | Arithmetic average | Min, Avg, AvgOn, Max |
| Unbalance | U ⁺ | RMS | Min, Avg, AvgOn, Max |
| | U ⁻ | RMS | Min, Avg, AvgOn, Max |
| | U ⁰ | RMS | Min, Avg, AvgOn, Max |
| | u ⁻ | RMS | Min, Avg, AvgOn, Max |
| | u ⁰ | RMS | Min, Avg, AvgOn, Max |
| | I ⁺ | RMS | Min, Avg, AvgOn, Max |
| | I ⁻ | RMS | Min, Avg, AvgOn, Max |
| | I ⁰ | RMS | Min, Avg, AvgOn, Max |
| | i ⁻ | RMS | Min, Avg, AvgOn, Max |
| | i ⁰ | RMS | Min, Avg, AvgOn, Max |
| Harmonics | DC, U _{h0÷50} | RMS | Avg, Max |
| | DC, I _{h0÷50} | RMS | Avg, AvgOn, Max, |
| Interharmonics | U _{h0÷50} | RMS | Avg, Max |
| | I _{h0÷50} | RMS | Avg, AvgOn, Max |
| Signalling | U _{Sig} | RMS | Min, Avg, AvgOn, Max |

An *active average* value is calculated upon the same principle (arithmetic or RMS) as average value, but taking in account only measurement where measured value is not zero:

$$\text{RMS active average} \quad A_{RMSact} = \sqrt{\frac{1}{M} \sum_{j=1}^M A_j^2}; M \leq N \quad (75)$$

Where:

A_{RMSact} – quantity average over active part of given aggregation interval,

A – 10/12-cycle quantity value marked as “active”,

M – number of 10/12 cycles measurements with active (non zero) value.

$$\text{Arithmetic active average:} \quad A_{avgact} = \frac{1}{M} \sum_{j=1}^M A_j; M \leq N \quad (76)$$

Where:

A_{avgact} – quantity average over active part of given aggregation interval,

A – 10/12-cycle quantity value in “active” part of interval,

M – number of 10/12 cycles measurements with active (non zero) value.

Difference between standard average (Avg) and active average (AvgOn)

Example: Suppose we measure current on AC motor which is switched on for 5 min every 10 minutes. Motor consumes 100A. User set recording interval to 10 minutes.

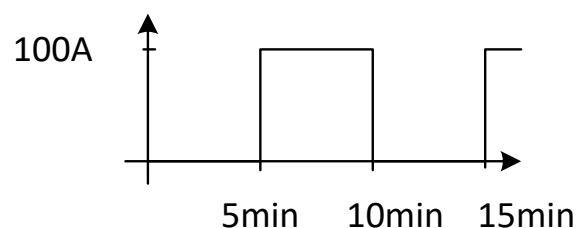


Figure 167: Avg vs. AvgOn, switching load current

After 10 minutes values will be:

Irms (rms average) = 50A

Irms (rms AvgOn) = 100A

AvgOn considers only those measurements where current is greater than zero.

Power and energy recording

Active power is aggregated into two different quantities: import (positive-consumed P+) and export (negative-generated P-). Nonactive power and power factor are aggregated into four parts: positive inductive (i+), positive capacitive (c+), negative inductive (i-) and negative capacitive (c-).

Consumed/generated and inductive/capacitive phase/polarity diagram is shown on figure below:

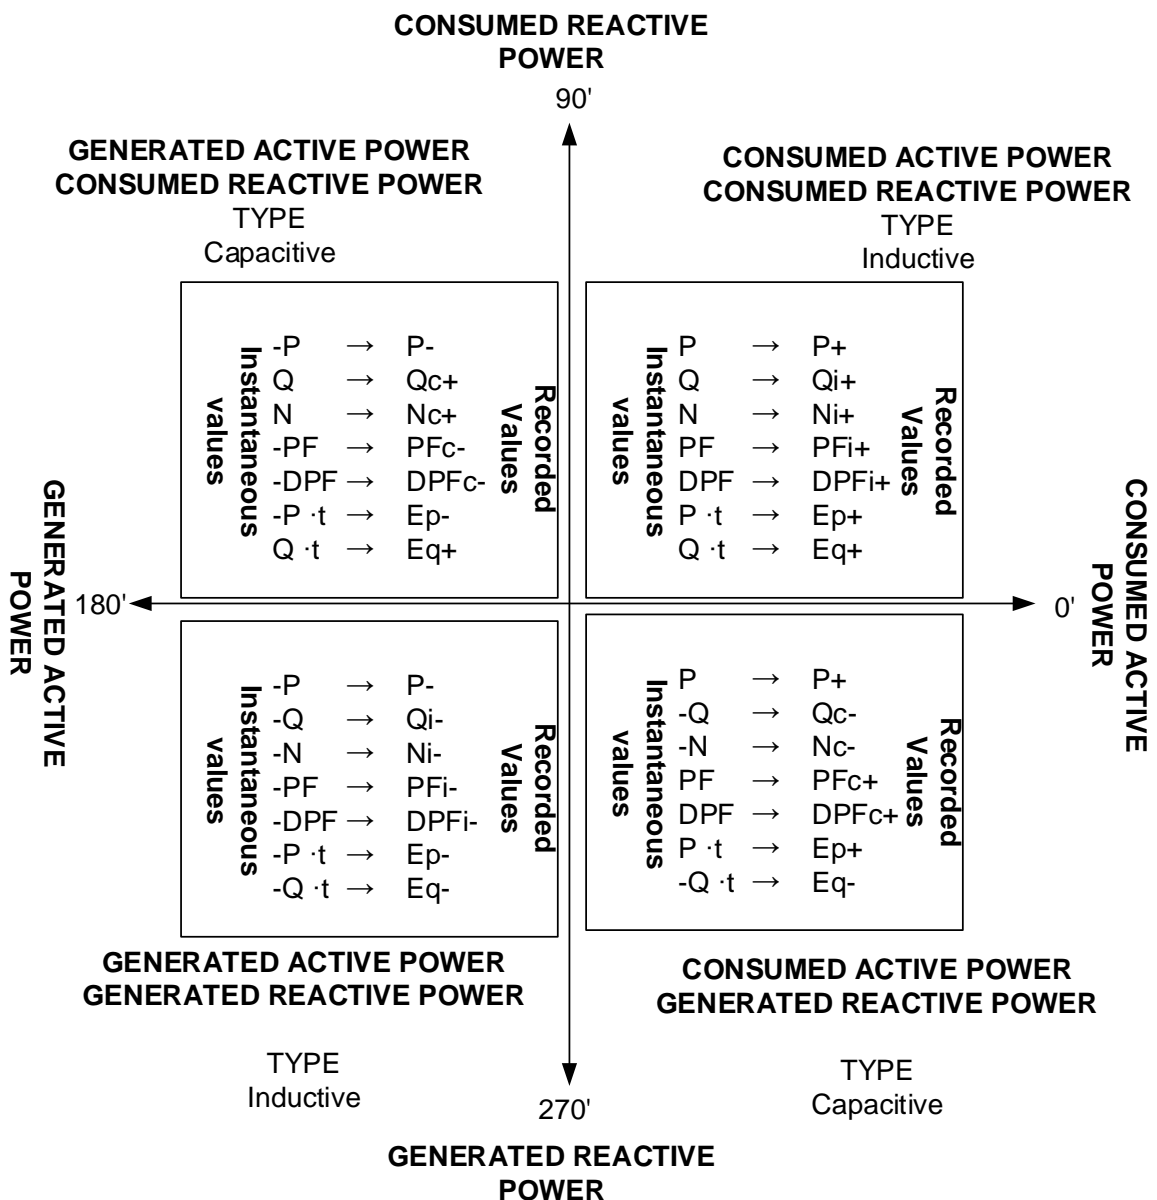


Figure 168: Consumed/generated and inductive/capacitive phase/polarity diagram

5.1.17 Flagged data

Standard compliance: IEC 61000-4-30 Class A (Section 4.7)

During a dip, swell, or interruption, the measurement algorithm for other parameters (for example, frequency measurement) might produce an unreliable value. The flagging concept avoids counting a single event more than once in different parameters (for example, counting a single dip as both a dip and a voltage variation), and indicates that an aggregated value might be unreliable. Flagging is only triggered by dips, swells, and interruptions. The detection of dips and swells is dependent on the threshold selected by the user, and this selection will influence which data are "flagged".

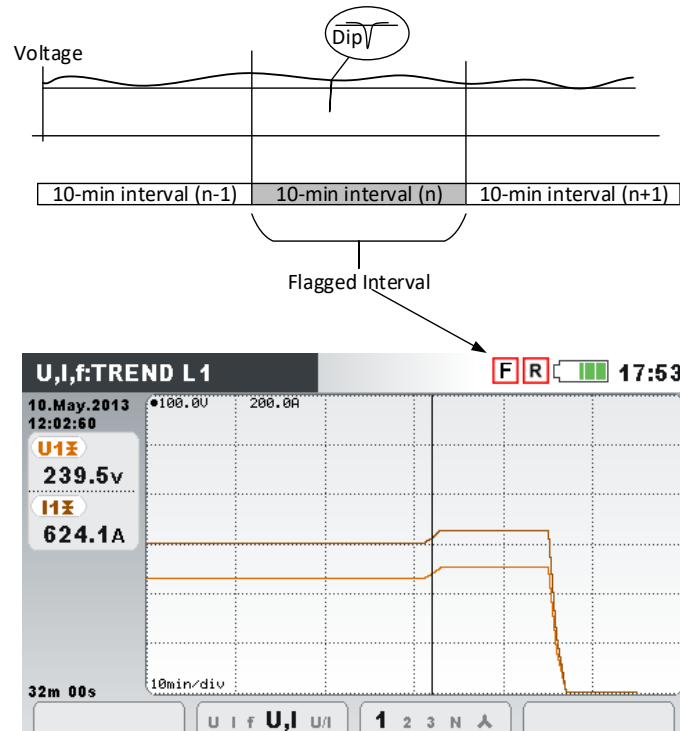



Figure 169: Flagging data indicate that aggregated value might be unreliable

5.1.18 Waveform snapshot

During measurement campaign MI 2893/MI 2892/MI 2885 have the ability to take waveform snapshot. This is particularly useful for storing temporary characteristics or network behaviour. Snapshot stores all network signatures and waveform samples for 10/12 cycles. Using MEMORY LIST function (see 3.19) or with PowerView v3.0 software, user can observe stored data. Waveform snapshot is captured by

starting GENERAL recorder or by pressing  for 3 seconds in any of MEASUREMENTS sub screens.



Long press on  triggers WAVEFORM SNAPSHOT. Instrument will record all measured parameters into file.

Note: WAVEFORM SNAPSHOT is automatically created at the start and end of GENERAL RECORDER.

5.1.19 Waveform recorder

Waveform recorder can be used in order to capture waveform of particular network event: such as voltage event, inrush or alarm. In waveform record samples of voltage and current are stored for given duration. Waveform recorder starts when the pre-set trigger occurs. Storage buffer is divided into pre-

trigger and post-trigger buffers. Pre and post-trigger buffers are composed of waveform snapshots taken before and after trigger occurrence, as shown on following figure.

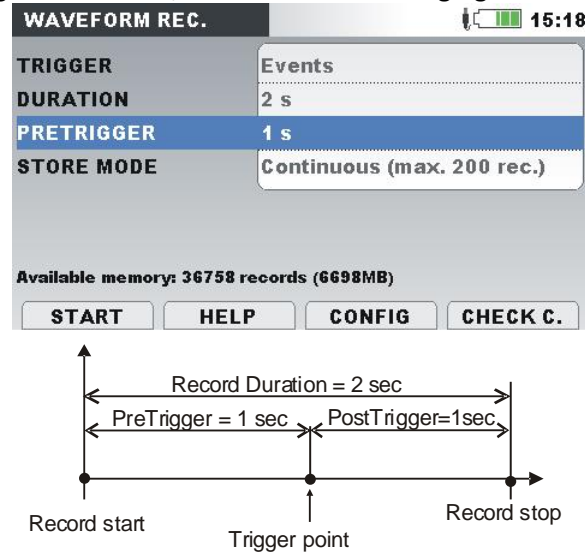


Figure 170: Triggering and pre-triggering description

Several trigger sources are possible:

- Manual trigger - user manually triggers waveform recording.
- Voltage events – instrument starts waveform recorder when voltage event occur. Voltage events are set up in EVENT SETUP menu (see 3.23.2 for details), where user defines threshold limits for each event type: Dip, Swell and Interrupt. Each time event occurs, waveform recorder starts recording. Instrument then capture $U_{Rms(1/2)}$ and $I_{Rms(1/2)}$ values into RxxxxINR.REC file and waveform samples for all voltages and currents channels into RxxxxWAV.REC file. If parameter PRETRIGGER is greater than zero, then recoding will start prior the event for defined time, and will finish when record DURATION length is reached. On following figure voltage dip is shown, where voltage drops from nominal value to the almost zero. When voltage drops below dip threshold, it triggers recorder, which capture voltage and current samples from one second before dip to one second after dip occurs. Note that if during this time period another event occurs, (as interrupt on figure below, for example) it will be captured within the same file. In case where voltage event last for longer time, new recording will start after first record is finished, soon as any new event occurs (voltage ramp-up event, shown as example on figure below).

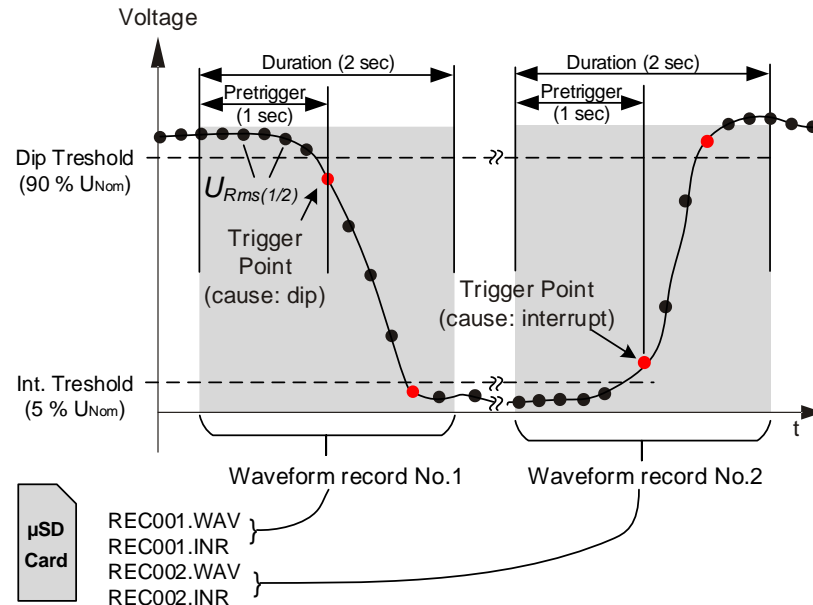


Figure 171: Voltage Event Triggering

- Voltage level – instrument starts waveform recorder when measured RMS voltage reaches given voltage threshold.

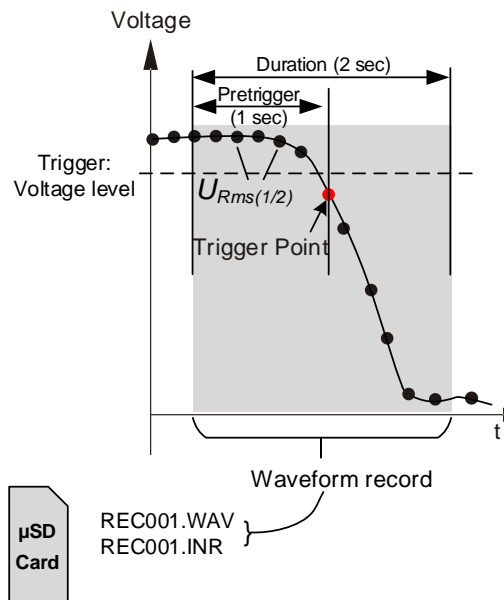


Figure 172: Voltage Level Triggering

- Current level - instrument starts waveform recorder when measured current reaches given current threshold. Typically, this type of triggering is used for capturing inrush currents.

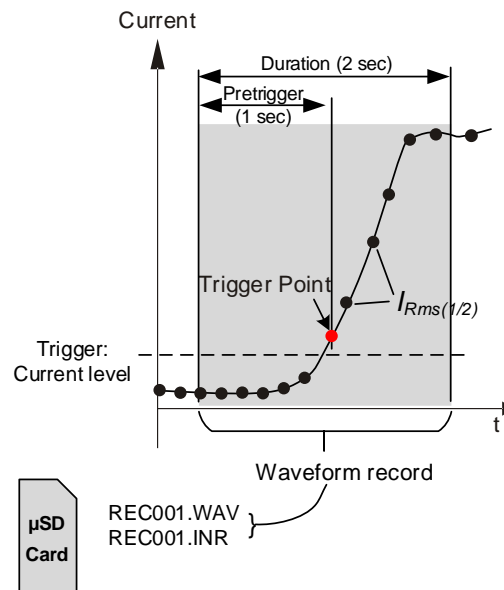


Figure 173: Current Level Triggering (Inrush)

- Alarms – instrument starts waveform recorder when any alarm from alarm list is detected. In order to see how to setup Alarm Table, please check section 3.23.3.
- Voltage events and alarms – instrument starts waveform recorder when either voltage event or alarm occur.
- Interval – instrument starts waveform recorder periodically, each time after given time interval
Interval: 10min finish.
- User can perform single or continuous waveform recordings up to 200 records (default value; maximum number could be changed by the user – up to 1500). In continuous waveform recording, MI 2893/MI 2892/MI 2885 will automatically initialize next waveform recording upon completion of the previous one.

Voltage event trigger

Waveform recorder can be set up to trigger on voltage events as shown on figure below.

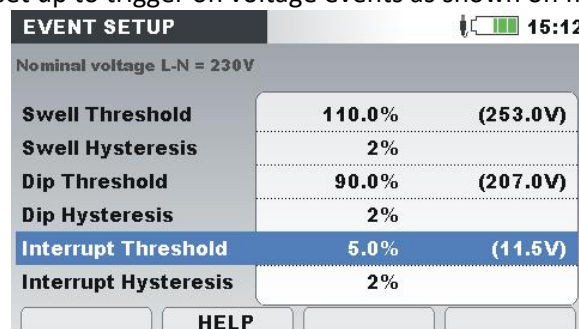


Figure 174: Waveform recorder setup for triggering on voltage events

Inrush recorder

In addition to the waveform record which represent voltage samples, instrument also store RMS voltage $U_{Rms(1/2)}$ and current $I_{Rms(1/2)}$. This type of record is particularly suitable for capturing motor inrush. It gives analysis of voltage and current fluctuations during start of motor or other high-power consumers. For current $I_{Rms(1/2)}$ value (half cycle period RMS current refreshed each half cycle) is measured, while for

voltage $U_{Rms(1/2)}$ values (one cycle RMS voltage refreshed each half cycle) is measured for each interval. In following figures, Level triggering is shown.

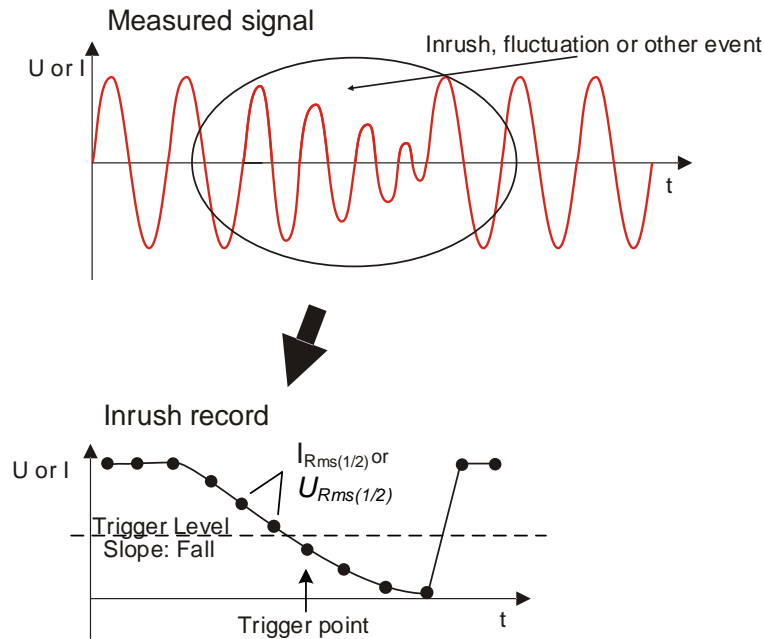


Figure 175: Level triggering

Triggering slope

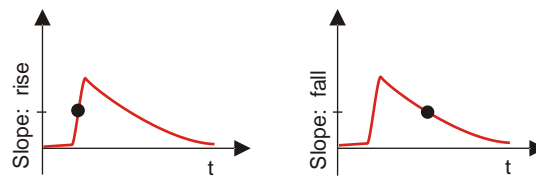


Figure 176: Triggering slope

5.1.20 Transient recorder

Transient recorder is similar to waveform recorder. It stores a selectable set of pre- and post-trigger samples on trigger activation, but with higher sampling rate:

- 1MHz for MI 2893
- 49 kHz for MI 2892/MI 2885

Recorder can be triggered on envelope or level.

Envelope trigger is activated if difference between same samples on two consecutive periods of triggering signal, is greater than given limit.

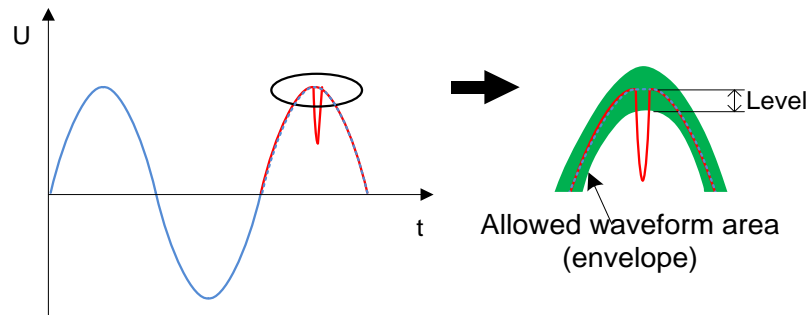


Figure 177: Transients trigger detection (envelope)

Level trigger is activated if sampled voltage/current is greater than given limit.

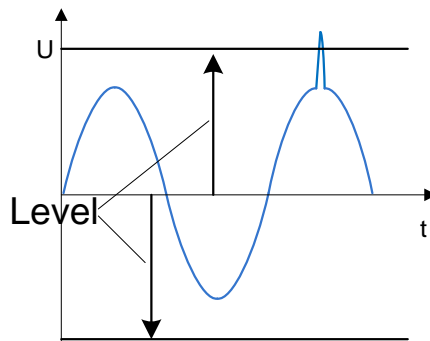


Figure 178: Transients trigger detection (level)

Note: Saving to the instrument data memory induces dead time between consecutive transient records up to 8 seconds, before new transient can be captured.

5.2 EN 50160 Standard Overview

EN 50160 standard defines, describes and specifies the main characteristics of the voltage at a network user's supply terminals in public low voltage and medium voltage distribution networks under normal operating conditions. This standard describes the limits or values within which the voltage characteristics can be expected to remain over the whole of the public distribution network and do not describe the average situation usually experienced by an individual network user. An overview of EN 50160 Low voltage limits are presented on table below.

Table 143: EN 50160 standard LV limits (continuous phenomena)

| Supply voltage phenomenon | Acceptable limits | Meas. Interval | Monitoring Period | Acceptance Percentage |
|--------------------------------------|----------------------------------|----------------|-------------------|-----------------------|
| Power frequency | 49.5 ÷ 50.5 Hz 47.0 ÷ 52.0 Hz | 10 s | 1 Week | 99,5% 100% |
| Supply voltage variations, U_{Nom} | 230V ± 10% | 10 min | 1 Week | 95% |

| | | | | |
|---|---|--------|--------|------|
| | 230V +10% -15% | | | 100% |
| Flicker severity Plt | Plt ≤ 1 | 2 h | 1 Week | 95% |
| Voltage unbalance u- | 0 ÷ 2 %, occasionally 3% | 10 min | 1 Week | 95% |
| Total harm. distortion, THD _U | 8% | 10 min | 1 Week | 95% |
| Harmonic Voltages, U _{h_n} | See Table 144: Values of individual harmonic voltages at the supply | 10 min | 1 Week | 95% |
| Mains signalling | See Figure 179: Mains signalling voltage level limits according to EN50160 | 3 s | 1 Day | 99% |

5.2.1 Power frequency

The nominal frequency of the supply voltage shall be 50 Hz, for systems with synchronous connection to an interconnected system. Under normal operating conditions the mean value of the fundamental frequency measured over 10 s shall be within a range of:

50 Hz ± 1 % (49,5 Hz .. 50,5 Hz) during 99,5 % of a year;

50 Hz + 4 % / - 6 % (i.e. 47 Hz .. 52 Hz) during 100 % of the time.

5.2.2 Supply voltage variations

Under normal operating conditions, during each period of one week 95 % of the 10 min mean U_{Rms} values of the supply voltage shall be within the range of $U_{Nom} \pm 10 \%$, and all U_{Rms} values of the supply voltage shall be within the range of $U_{Nom} + 10 \%$ / - 15 %.

5.2.3 Supply voltage unbalance

Under normal operating conditions, during each period of one week, 95 % of the 10 min mean RMS values of the negative phase sequence component (fundamental) of the supply voltage shall be within the range 0 % to 2 % of the positive phase sequence component (fundamental). In some areas with partly single phase or two-phase connected network users' installations, unbalances up to about 3 % at three-phase supply terminals occur.

5.2.4 THD voltage and harmonics

Under normal operating conditions, during each period of one week, 95 % of the 10 min mean values of each individual harmonic voltage shall be less or equal to the value given in table below.

Moreover, THD_U values of the supply voltage (including all harmonics up to the order 50) shall be less than or equal to 8 %.

Table 144: Values of individual harmonic voltages at the supply

| Odd harmonics | | | | Even harmonics | |
|-------------------------------|------------------------------------|---------------------------|------------------------------------|----------------|------------------------------------|
| Not Multiples of 3 Order h | Relative voltage (U _N) | Multiples of 3 Order h | Relative voltage (U _N) | Order h | Relative voltage (U _N) |
| 5 | 6,0 % | 3 | 5,0 % | 2 | 2,0 % |
| 7 | 5,0 % | 9 | 1,5 % | 4 | 1,0 % |

| | | | | | |
|----|-------|----|--------|-------|-------|
| 11 | 3,5 % | 15 | 1,0 % | 6..24 | 0,5 % |
| 13 | 3,0 % | 21 | 0,75 % | | |
| 17 | 2,0 % | | | | |
| 19 | 1,5 % | | | | |
| 23 | 1,5 % | | | | |
| 25 | 1,5 % | | | | |

5.2.5 Interharmonic voltage

The level of interharmonics is increasing due to the development of frequency converters and similar control equipment. Levels are under consideration, pending more experience. In certain cases interharmonics, even at low levels, give rise to flickers (see 5.2.7), or cause interference in ripple control systems.

5.2.6 Mains signalling on the supply voltage

In some countries the public distribution networks may be used by the public supplier for the transmission of signals. Over 99 % of a day the 3 s mean of signal voltages shall be less than or equal to the values given in the following figure.

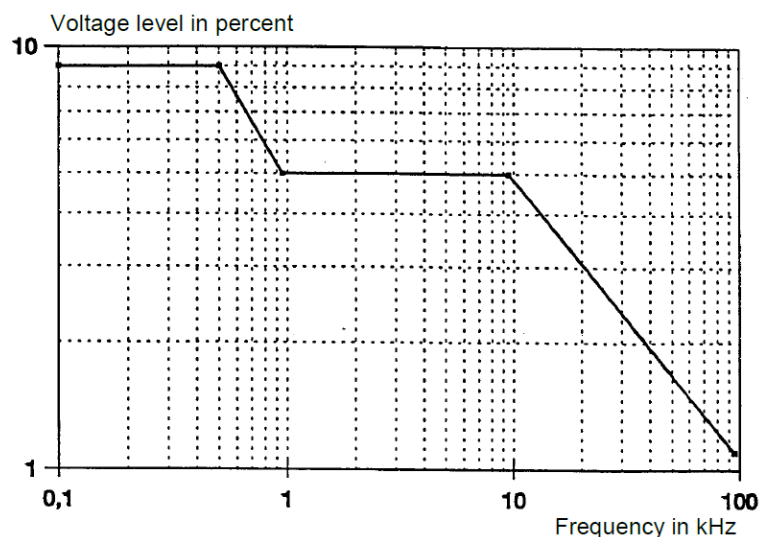


Figure 179: Mains signalling voltage level limits according to EN50160

5.2.7 Flicker severity

Under normal operating conditions, in any period of one week the long-term flicker severity caused by voltage fluctuation should be $P_{lt} \leq 1$ for 95 % of the time.

5.2.8 Voltage dips

Voltage dips are typically originated by faults occurring in the public network or in network users' installations. The annual frequency varies greatly depending on the type of supply system and on the point of observation. Moreover, the distribution over the year can be very irregular. The majority of voltage dips have duration less than 1 s and a retained voltage greater than 40 %. Conventionally, the dip start threshold is equal to 90 % of the nominal voltage of the nominal voltage. Collected voltage dips are classified according to the following table.

Table 145: Voltage dips classification

| Residual voltage | Duration (ms) | | | | |
|------------------|----------------------|--------------------|---------------------|----------------------|-----------------------|
| | $10 \leq t \leq 200$ | $200 < t \leq 500$ | $500 < t \leq 1000$ | $1000 < t \leq 5000$ | $5000 < t \leq 60000$ |
| $90 > U \geq 80$ | Cell A1 | Cell A2 | Cell A3 | Cell A4 | Cell A5 |
| $80 > U \geq 70$ | Cell B1 | Cell B2 | Cell B3 | Cell B4 | Cell B5 |
| $70 > U \geq 40$ | Cell C1 | Cell C2 | Cell C3 | Cell C4 | Cell C5 |
| $40 > U \geq 5$ | Cell D1 | Cell D2 | Cell D3 | Cell D4 | Cell D5 |
| $U < 5$ | Cell E1 | Cell E2 | Cell E3 | Cell E4 | Cell E5 |

5.2.9 Voltage swells

Voltage swells are typically caused by switching operations and load disconnections. Conventionally, the start threshold for swells is equal to the 110 % of the nominal voltage. Collected voltage swells are classified according to the following table.

Table 146: Voltage swell classification

| Swell voltage | Duration (ms) | | |
|-----------------|----------------------|---------------------|-----------------------|
| | $10 \leq t \leq 500$ | $500 < t \leq 5000$ | $5000 < t \leq 60000$ |
| $U \geq 120$ | Cell A1 | Cell A2 | Cell A3 |
| $120 > U > 110$ | Cell B1 | Cell B2 | Cell B3 |

5.2.10 Short interruptions of the supply voltage

Under normal operating conditions the annual occurrence of short interruptions of the supply voltage ranges from up to a few tens to up to several hundreds. The duration of approximately 70 % of the short interruptions may be less than one second.

5.2.11 Long interruptions of the supply voltage

Under normal operating conditions the annual frequency of accidental voltage interruptions longer than three minutes may be less than 10 or up to 50 depending on the area.

5.2.12 MI 2893/MI 2892/MI 2885 recorder setting for EN 50160 survey

MI 2893/MI 2892/MI 2885 is able to perform EN 50160 surveys on all values described in previous sections. In order to simplify procedure, MI 2893/MI 2892/MI 2885 has predefined recorder configuration (EN 50160) for it. By default, all current parameters (RMS, THD, etc.) are also included in survey, which can provide additional survey information. Additionally, during voltage quality survey user can simultaneously record other parameters too, such as power, energy and current harmonics. In order to collect voltage events during recording, **Include events** option in recorder should be enabled. See section 3.23.2 for voltage events settings.



Figure 180: Predefined EN50160 recorder configuration

After recording is finished, EN 50160 survey is *performed* on PowerView v3.0 software. See PowerView v3.0 manual for details.

6 Technical specifications

6.1 General specifications

| | |
|--|--|
| Working temperature range: | -20 °C ÷ +55 °C |
| Storage temperature range: | -40 °C ÷ +70 °C |
| Max. humidity: | 5 ÷ 98 % RH (0 °C ÷ 40 °C), non-condensing |
| Pollution degree: | 2 |
| Protection classification: | Reinforced insulation |
| Measuring category - MI 2893 | CAT IV / 600 V; For three phase connection CAT III / 1000 V; up to 3000 meters above sea level |
| Measuring category - MI 2892/MI 2885 | CAT IV / 600 V; CAT III / 1000 V; up to 3000 meters above sea level |
| Protection degree: | IP 40 |
| Dimensions: | 23 cm x 14cm x 8 cm |
| Weight (with batteries): MI 2893 | 1.1 kg |
| Weight (with batteries): MI 2892/MI 2885 | 0.96 kg |
| Display: | Colour 4.3 TFT liquid crystal display (LCD) with backlight, 480 x 272 dots. |
| Memory: | 8 GB microSD card provided, max. 32 GB supported |
| Batteries: | 6 x 1.2 V NiMH rechargeable batteries type HR 6 (AA) |
| External DC supply - charger: | 100-240 V~, 50-60 Hz, 0.4 A~, CAT II 300 V 12 V DC, min 1.2 A |
| Maximum supply consumption: MI 2893 | 12 V / 410 mA – without batteries 12 V / 1.2 A – while charging batteries |
| Maximum supply consumption: MI 2892/MI 2885 | 12 V / 300 mA – without batteries 12 V / 1 A – while charging batteries |
| Battery charging time: | 3 hours* |
| Communication: | USB 2.0 Standard USB Type B |
| | Ethernet 10Mb |

* The charging time and the operating hours are given for batteries with a nominal capacity of 2400 mAh without display illumination and switching off the transient recorder during the powering via the batteries (valid for MI 2893).

6.2 Measurements

6.2.1 General description

| | |
|--|---|
| Max. input voltage (Phase – Neutral): MI 2893 | Three phase connection: 50 ... 1000 V _{RMS} Phase connection: 50 ... 500 V _{RMS} |
| Max. input voltage (Phase – Neutral): MI 2892/MI 2885 | Three phase connection: 50 ... 1000 V _{RMS} |
| Max. input voltage (Phase – Phase): | 87 ... 1730 V _{RMS} |
| Max. transient peak voltage | ±6 kV |
| Max. transient peak current | Depends on used current clamps (check specification for current clamps) |

| | |
|--|--|
| | For transient detection use fixed current range. |
| Phase - Neutral input impedance: MI 2893 | 2.45 M Ω |
| Phase - Neutral input impedance: MI 2892/MI 2885 | 6 M Ω |
| Phase – Phase input impedance: MI 2893 | 2.45 M Ω |
| Phase – Phase input impedance: MI 2892/MI 2885 | 6 M Ω |
| AD converter | 16 bit 8 channels, simultaneous sampling |
| Sampling frequency: | |
| 50Hz / 60 Hz System frequency Antialiasing filter | 7 kSamples/sec Passband (-3dB): 0 ÷ 3.4 kHz Stopband (-80dB): > 3,8 kHz |
| 400 Hz System frequency Antialiasing filter | 12,2 kSamples/sec Passband (-3dB): 0 ÷ 5,7kHz Stopband (-80dB): > 6,44 kHz |
| VFD -Variable Frequency Drive mode Antialiasing filter | 1,7 kSamples/sec Passband (-3dB): 0 ÷ 782 Hz Stopband (-80dB): > 883 Hz |
| Transient mode Antialiasing filter (MI 2893) | 1 MSamples/sec Passband (-3dB): 0 ÷ 600 kHz |
| Transient mode Antialiasing filter (MI 2892/MI 2885) | 49 kSamples/sec Passband (-3dB): 0 ÷ 24 kHz Stopband (-80dB): > 26 kHz |
| Reference temperature | 23 °C \pm 2 °C |
| Temperature influence: MI 2893 | 35 ppm/°C |
| Temperature influence: MI 2892/MI 2885 | 30 ppm/°C |
| Warmup time | Recommended warmup time 30 minutes |

NOTE: Instrument has 3 internal voltage ranges. Range is chosen automatically, according to the chosen Nominal Voltage parameter. See tables below for details.

| Nominal phase (L-N) voltage: U_{Nom} | Voltage range |
|--|---------------|
| 50 V ÷ 136 V (L-N) | Range 1 |
| 137 V ÷ 374 V (L-N) | Range 2 |
| 375 V ÷ 1000 V (L-N) | Range 3 |

| Nominal phase-to-phase (L-L) voltage: U_{Nom} | Voltage range |
|---|---------------|
| 50 V ÷ 235 V (L-L) | Range 1 |
| 236 V ÷ 649 V (L-L) | Range 2 |
| 650V ÷ 1730 V (L-L) | Range 3 |

NOTE: Assure that all voltage clips are connected during measurement and logging period. Unconnected voltage clips are susceptible to EMI and can trigger false events. It is advisable to short them with instrument neutral voltage input.

6.2.2 Phase Voltages

10/12 cycle phase RMS voltage: U_{1Rms} , U_{2Rms} , U_{3Rms} , U_{NRms} , AC+DC

| Measuring Range | Resolution* | Accuracy | Nominal Voltage U_{NOM} |
|--------------------------------|--------------|----------------------------|---------------------------|
| 10% U_{NOM} ÷ 150% U_{NOM} | 10 mV, 100mV | $\pm 0.1 \% \cdot U_{NOM}$ | 50 ÷ 1000 V (L-N) |

* - depends on measured voltage

Half cycle RMS voltage (events, min, max): $U_{1Rms(1/2)}$, $U_{2Rms(1/2)}$, $U_{3Rms(1/2)}$, U_{1Min} , U_{2Min} , U_{3Min} , U_{1Max} , U_{2Max} , U_{3Max} , AC+DC

| Measuring Range | Resolution* | Accuracy | Nominal Voltage U_{NOM} |
|-------------------------------|--------------|----------------------------|---------------------------|
| 3% U_{NOM} ÷ 150% U_{NOM} | 10 mV, 100mV | $\pm 0.2 \% \cdot U_{NOM}$ | 50 ÷ 1000 V (L-N) |

* - depends on measured voltage

NOTE: Voltage events measurements are based on half cycle RMS voltage.

Crest factor: CF_{U1} , CF_{U2} , CF_{U3} , CF_{UN}

| Measuring range | Resolution* | Accuracy |
|-----------------|-------------|-----------------------|
| 1.00 ÷ 2.50 | 0.01 | $\pm 5 \% \cdot CF_U$ |

* - depends on measured voltage

Peak voltage: U_{1Pk} , U_{2Pk} , U_{3Pk} , AC+DC

| Measuring range | Resolution* | Accuracy |
|-------------------------------|---------------|---------------------------|
| Range 1: 20.00 ÷ 255.0 Vpk | 10 mV, 100 mV | $\pm 0.5 \% \cdot U_{Pk}$ |
| Range 2: 50.0 V ÷ 510.0 Vpk | 10 mV, 100 mV | $\pm 0.5 \% \cdot U_{Pk}$ |
| Range 3: 200.0 V ÷ 2250.0 Vpk | 100 mV, 1V | $\pm 0.5 \% \cdot U_{Pk}$ |

* - depends on measured voltage

6.2.3 Line voltages

10/12 cycle line to line RMS voltage: U_{12Rms} , U_{23Rms} , U_{31Rms} , AC+DC

| Measuring Range | Resolution* | Accuracy | Nominal Voltage range |
|--------------------------------|--------------|---|-----------------------|
| 10% U_{NOM} ÷ 150% U_{NOM} | 10 mV, 100mV | $\pm 0.1 \% \cdot U_{NOM}$ VFD mode: $\pm 1 \% \cdot U_{NOM}$ | 50 ÷ 1730 V (L-L) |

Half cycle RMS voltage (events, min, max): $U_{12Rms(1/2)}$, $U_{23Rms(1/2)}$, $U_{31Rms(1/2)}$, U_{12Min} , U_{23Min} , U_{31Min} , U_{12Max} , U_{23Max} , U_{31Max} , AC+DC

| Measuring Range | Resolution* | Accuracy | Nominal Voltage range |
|--------------------------------|--------------|----------------------------|-----------------------|
| 10% U_{NOM} ÷ 150% U_{NOM} | 10 mV, 100mV | $\pm 0.2 \% \cdot U_{NOM}$ | 50 ÷ 1730 V (L-L) |

Crest factor: CF_{U21} , CF_{U23} , CF_{U31}

| Measuring range | Resolution | Accuracy |
|-----------------|------------|-----------------------|
| 1.00 ÷ 2.50 | 0.01 | $\pm 5 \% \cdot CF_U$ |

Peak voltage: U_{12Pk} , U_{23Pk} , U_{31Pk} , AC+DC

| Measuring range | Resolution | Accuracy |
|-----------------------------|---------------|---------------------------|
| Range 1: 20.00 ÷ 422 Vpk | 10 mV, 100 mV | $\pm 0.5 \% \cdot U_{Pk}$ |
| Range 2: 47.0 V ÷ 884.0 Vpk | 10 mV, 100 mV | $\pm 0.5 \% \cdot U_{Pk}$ |
| Range 3: 346.0 V ÷ 3700 Vpk | 100 mV, 1 V | $\pm 0.5 \% \cdot U_{Pk}$ |

6.2.4 Current

Input impedance: 65 k Ω ; MI 2893

Input impedance: 100 k Ω ; MI 2892/MI 2885

10/12 cycle RMS current I_{1Rms} , I_{2Rms} , I_{3Rms} , I_{NRms} , AC+DC.

| Clamps | Range | Measuring range | Overall current accuracy |
|------------|---------------------------------|---|----------------------------|
| A 1281 | 1000 A 100 A 5 A 0.5 A | 100 A \div 1200 A 10 A \div 175 A 0.5 A \div 10 A 50 mA \div 1 A | $\pm 0.5 \% \cdot I_{RMS}$ |
| A 1588 | 50 A 5 A 0.5 A | 5 A \div 100 A 0.5 A \div 10 A 50 mA \div 1 A | $\pm 0.5 \% \cdot I_{RMS}$ |
| A 1398 PQA | 10 A | 0.5 A \div 20 A | $\pm 0.5 \% \cdot I_{RMS}$ |
| A 1033 | 1000 A 100 A | 20 A \div 1000 A 2 A \div 100 A | $\pm 1.3 \% \cdot I_{RMS}$ |
| A 1069 | 100 A 10 A | 5 A \div 200 A 500 mA \div 20 A | $\pm 1.3 \% \cdot I_{RMS}$ |
| A 1391 PQA | 100 A 10 A | 5 A \div 200 A 500 mA \div 20 A | $\pm 1.3 \% \cdot I_{RMS}$ |
| A 1636 | DC: 2000 A AC: 1000 A | 40 A \div 2000 A 20 A \div 1000 A | $\pm 1.3 \% \cdot I_{RMS}$ |
| A 1227 | 3000 A 300 A 30 A | 300 A \div 6000 A 30 A \div 600 A 3 A \div 60 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| A 1227 5M | 3000 A 300 A 30 A | 300 A \div 6000 A 30 A \div 600 A 3 A \div 60 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| A 1445 | 3000 A 300 A 30 A | 300 A \div 6000 A 30 A \div 600 A 3 A \div 60 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| A 1582 | 3000 A 300 A 30 A | 300 A \div 6000 A 30 A \div 600 A 3 A \div 60 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| A 1501 | 3000 A 300 A 30 A | 300 A \div 6000 A 30 A \div 600 A 3 A \div 60 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| A 1502 | 3000 A 300 A 30 A | 300 A \div 6000 A 30 A \div 600 A 3 A \div 60 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| A 1503 | 6000 A 600 A 60 A | 600 A \div 12 000 A 60 A \div 1200 A 6 A \div 120 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| A 1446 | 6000 A 600 A 60 A | 600 A \div 12 000 A 60 A \div 1200 A 6 A \div 120 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| A 1037 | 6 A 0.5 A | 0.5 A \div 10 A 10 mA \div 10 A | $\pm 0.3 \% \cdot I_{RMS}$ |

Note: Overall current accuracy (as percent of measured value), is provided as guideline. For exact measuring range and accuracy please check user manual of related current clamps. Overall accuracy is calculated as:

$$\text{Overall Accuracy} = 1,15 \cdot \sqrt{\text{Instrument Accuracy}^2 + \text{Clamp Accuracy}^2}$$

Half cycle RMS current (inrush, min, max) $I_{1Rms(1/2)}$, $I_{2Rms(1/2)}$, $I_{3Rms(1/2)}$, $I_{NRms(1/2)}$, AC+DC

| Clamps | Range | Measuring range | Overall current accuracy |
|------------|---------------------------------|---|---------------------------|
| A 1281 | 1000 A 100 A 5 A 0.5 A | 100 A ÷ 1200 A 10 A ÷ 175 A 0.5 A ÷ 10 A 50 mA ÷ 1 A | ±0.8 % · I _{RMS} |
| A 1588 | 50 A 5 A 0.5 A | 5 A ÷ 100 A 0.5 A ÷ 10 A 50 mA ÷ 1 A | ±0.8 % · I _{RMS} |
| A 1398 PQA | 10 A | 0.5 A ÷ 20 A | ±0.8 % · I _{RMS} |
| A 1033 | 1000 A 100 A | 20 A ÷ 1000 A 2 A ÷ 100 A | ±1.3 % · I _{RMS} |
| A 1069 | 100 A 10 A | 5 A ÷ 200 A 500 mA ÷ 20 A | ±1.3 % · I _{RMS} |
| A 1391 PQA | 100 A 10 A | 5 A ÷ 200 A 500 mA ÷ 20 A | ±1.5 % · I _{RMS} |
| A 1636 | DC: 2000 A AC: 1000 A | 40 A ÷ 2000 A 20 A ÷ 1000 A | ±1.5 % · I _{RMS} |
| A 1227 | 3000 A 300 A 30 A | 300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A | ±1.6 % · I _{RMS} |
| A 1227 5M | 3000 A 300 A 30 A | 300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A | ±1.6 % · I _{RMS} |
| A 1445 | 3000 A 300 A 30 A | 300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A | ±1.6 % · I _{RMS} |
| A 1582 | 3000 A 300 A 30 A | 300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A | ±1.6 % · I _{RMS} |
| A 1501 | 3000 A 300 A 30 A | 300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A | ±1.6 % · I _{RMS} |
| A 1502 | 3000 A 300 A 30 A | 300 A ÷ 6000 A 30 A ÷ 600 A 3 A ÷ 60 A | ±1.6 % · I _{RMS} |
| A 1503 | 6000 A 600 A 60 A | 600 A ÷ 12 000 A 60 A ÷ 1200 A 6 A ÷ 120 A | ±1.6 % · I _{RMS} |
| A 1446 | 6000 A 600 A 60 A | 600 A ÷ 12 000 A 60 A ÷ 1200 A 6 A ÷ 120 A | ±1.6 % · I _{RMS} |
| A 1037 | 6 A 0.5 A | 0.5 A ÷ 10 A 10 mA ÷ 10 A | ±0.4 % · I _{RMS} |

Note: Overall current accuracy (as percent of measured value), is provided as guideline. For exact measuring range and accuracy please check user manual of related current clamps. Overall accuracy is calculated as:

$$\text{OverallAccuracy} = 1,15 \cdot \sqrt{\text{InstrumentAccuracy}^2 + \text{ClampAccuracy}^2}$$

Peak value I_{1Pk} , I_{2Pk} , I_{3Pk} , I_{NPK} , AC+DC

| Measurement accessory | | Peak value | Overall current accuracy |
|-----------------------|------------|------------------|----------------------------|
| A 1281 | 1000 A | 100 A ÷ 1700 A | $\pm 0.8 \% \cdot I_{RMS}$ |
| | 100 A | 10 A ÷ 250 A | |
| | 5 A | 0.5 A ÷ 14 A | |
| | 0.5 A | 50 mA ÷ 1.4 A | |
| A 1588 | 50 A | 5 A ÷ 150 A | $\pm 0.8 \% \cdot I_{RMS}$ |
| | 5 A | 0.5 A ÷ 15 A | |
| | 0.5 A | 50 mA ÷ 1.5 A | |
| A 1398 PQA | 10 A | 0.5 A ÷ 20 A | $\pm 0.8 \% \cdot I_{RMS}$ |
| A 1033 | 1000 A | 20 A ÷ 1400 A | $\pm 1.3 \% \cdot I_{RMS}$ |
| | 100 A | 2 A ÷ 140 A | |
| A 1069 | 100 A | 5 A ÷ 280 A | $\pm 1.3 \% \cdot I_{RMS}$ |
| | 10 A | 500 mA ÷ 28 A | |
| A 1391 PQA | 100 A | 5 A ÷ 280 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| | 10 A | 500 mA ÷ 28 A | |
| A 1636 | DC: 2000 A | 40 A ÷ 2800 A | $\pm 1.5 \% \cdot I_{RMS}$ |
| | AC: 1000 A | 20 A ÷ 1400 A | |
| A 1227 | 3000 A | 300 A ÷ 8500 A | $\pm 1.6 \% \cdot I_{RMS}$ |
| | 300 A | 30 A ÷ 850 A | |
| | 30 A | 3 A ÷ 85 A | |
| A 1227 5M | 3000 A | 300 A ÷ 8500 A | $\pm 1.6 \% \cdot I_{RMS}$ |
| | 300 A | 30 A ÷ 850 A | |
| | 30 A | 3 A ÷ 85 A | |
| A 1445 | 3000 A | 300 A ÷ 8500 A | $\pm 1.6 \% \cdot I_{RMS}$ |
| | 300 A | 30 A ÷ 850 A | |
| | 30 A | 3 A ÷ 85 A | |
| A 1582 | 3000 A | 300 A ÷ 8500 A | $\pm 1.6 \% \cdot I_{RMS}$ |
| | 300 A | 30 A ÷ 850 A | |
| | 30 A | 3 A ÷ 85 A | |
| A 1501 | 3000 A | 300 A ÷ 8500 A | $\pm 1.6 \% \cdot I_{RMS}$ |
| | 300 A | 30 A ÷ 850 A | |
| | 30 A | 3 A ÷ 85 A | |
| A 1502 | 3000 A | 300 A ÷ 8500 A | $\pm 1.6 \% \cdot I_{RMS}$ |
| | 300 A | 30 A ÷ 850 A | |
| | 30 A | 3 A ÷ 85 A | |
| A 1503 | 6000 A | 600 A ÷ 17 000 A | $\pm 1.6 \% \cdot I_{RMS}$ |
| | 600 A | 60 A ÷ 1700 A | |
| | 60 A | 6 A ÷ 170 A | |
| A 1446 | 6000 A | 600 A ÷ 17 000 A | $\pm 1.6 \% \cdot I_{RMS}$ |
| | 600 A | 60 A ÷ 1700 A | |
| | 60 A | 6 A ÷ 170 A | |
| A 1037 | 5 A | 0.5 A ÷ 14 A | $\pm 0.4 \% \cdot I_{RMS}$ |
| | 0.5 A | 10 mA ÷ 1.4 A | |

Note: Overall current accuracy (as percent of measured value), is provided as guideline. For exact measuring range and accuracy please check user manual of related current clamps. Overall accuracy is calculated as:

$$\text{Overall Accuracy} = 1,15 \cdot \sqrt{\text{Instrument Accuracy}^2 + \text{Clamp Accuracy}^2}$$

Crest factor CF_{Ip} p : [1, 2, 3, 4, N], AC+DC

| Measuring range | Resolution | Accuracy |
|-----------------|------------|----------------|
| 1.00 ÷ 10.00 | 0.01 | ± 5 % · CF_I |

Accuracy of 10/12 cycle RMS voltage measured on current input

| Measuring range (Intrinsic instrument accuracy) | Accuracy |
|---|----------------------|
| Range 1: 10.0 mV _{RMS} ÷ 300.0 mV _{RMS} | ± 0.25 % · U_{RMS} |
| Range 2: 50.0 mV _{RMS} ÷ 3.000 V _{RMS} | |

| Measuring range | Accuracy | Crest factor |
|---|----------------------|--------------|
| Range 1: 10.0 mV _{RMS} ÷ 150.0 mV _{RMS} | ± 0.25 % · U_{RMS} | 3.0 |
| Range 2: 50.0 mV _{RMS} ÷ 1.500 V _{RMS} | | |

U_{RMS} – RMS voltage measured on current input

Accuracy of half cycle RMS voltage measured on current input

| Measuring range (Intrinsic instrument accuracy) | Accuracy |
|---|---------------------|
| Range 1: 10.0 mV _{RMS} ÷ 300.0 mV _{RMS} | ± 0.5 % · U_{RMS} |
| Range 2: 50.0 mV _{RMS} ÷ 3.000 V _{RMS} | ± 0.5 % · U_{RMS} |

| Measuring range (Intrinsic instrument accuracy) | Accuracy | Crest factor |
|---|---------------------|--------------|
| Range 1: 10.0 mV _{RMS} ÷ 150.0 mV _{RMS} | ± 0.5 % · U_{RMS} | 3.0 |
| Range 2: 50.0 mV _{RMS} ÷ 1.500 V _{RMS} | ± 0.5 % · U_{RMS} | |

6.2.5 Frequency

| Measuring range | Resolution | Accuracy |
|--|------------|-----------|
| 50 Hz system frequency: 42.500 Hz ÷ 57.500 Hz 60 Hz system frequency: 51.000 Hz ÷ 69.000 Hz | 1 mHz | ± 10 mHz |
| 400 Hz system frequency: 335.0 Hz ÷ 465.0 Hz | 10 mHz | ± 100 mHz |

6.2.6 Flickers

| Flicker type | Measuring range | Resolution | Accuracy* |
|--------------|-----------------|------------|--------------------|
| P_{inst} | 0.200 ÷ 10.000 | 0.001 | ± 5 % · P_{inst} |
| P_{st} | 0.200 ÷ 10.000 | | ± 5 % · P_{st} |
| P_{lt} | 0.200 ÷ 10.000 | | ± 5 % · P_{lt} |

6.2.7 Transients

| Type | Measuring range | Resolution | Accuracy |
|--------------------|---------------------------------------|------------|----------|
| Voltage Transients | ± 6 kV | 5V | ± 5 % |
| Current Transients | Depends on the selected current clamp | | ± 10 % |

Note: Overall current transient accuracy (as percent of measured value), is provided as guideline. For exact measuring range and accuracy please check user manual of related current clamps.

6.2.8 Combined power

| Combined Power | Measuring range | | Accuracy |
|---|-----------------------------------|--|----------------------|
| Active power* (W) P_1, P_2, P_3, P_{tot} | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) | $\pm 0.2 \% \cdot P$ |
| | | With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A | $\pm 1.7 \% \cdot P$ |
| | | With iron clamps A 1281 / 1000 A A 1588 / 150 A | $\pm 0.7 \% \cdot P$ |
| | | | |
| Nonactive power** (var) $N_1, N_2, N_3, N_{tot}, N_{a_{tot}}$ | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) | $\pm 0.2 \% \cdot Q$ |
| | | With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A | $\pm 1.7 \% \cdot Q$ |
| | | With iron clamps A 1281 / 1000 A A 1588 / 150 A | $\pm 0.7 \% \cdot Q$ |
| | | | |
| Apparent power*** (VA) $S_1, S_2, S_3, S_{e_{tot}}, S_{v_{tot}}, S_{a_{tot}}$ | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) | $\pm 0.5 \% \cdot Q$ |
| | | With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A | $\pm 1.8 \% \cdot S$ |
| | | With iron clamps A 1281 / 1000 A A 1588 / 150 A | $\pm 0.8 \% \cdot S$ |
| | | | |

*Accuracy values are valid if $\cos \varphi \geq 0.80$, $I \geq 10 \% I_{Nom}$ and $U \geq 80 \% U_{Nom}$

**Accuracy values are valid if $\sin \varphi \geq 0.50$, $I \geq 10 \% I_{Nom}$ and $U \geq 80 \% U_{Nom}$

***Accuracy values are valid if $\cos \varphi \geq 0.50$, $I \geq 10 \% I_{Nom}$ and $U \geq 80 \% U_{Nom}$

6.2.9 Fundamental power

| Fundamental power | Measuring range | | Accuracy |
|-------------------------------|-------------------|---------------------------------------|-----------------------------|
| Active fundamental power* (W) | 0.000 k ÷ 999.9 M | Excluding clamps (Instrument only) | $\pm 0.2 \% \cdot P_{fund}$ |

| | | | |
|--|-----------------------------------|---|----------------|
| Pfund ₁ , Pfund ₂ , Pfund ₃ , P ⁺ _{tot} | 4 digits | With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A | ±1.7 % · Pfund |
| | | With iron clamps A 1281 / 1000 A A 1588 / 150 A | ±0.7 % · Pfund |
| Reactive fundamental power** (var) Qfund ₁ , Qfund ₂ , Qfund ₃ , Q ⁺ _{tot} | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) | ±0.2 % · Qfund |
| | | With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A | ±1.7 % · Qfund |
| | | With iron clamps A 1281 / 1000 A A 1588 / 150 A | ±0.7 % · Qfund |
| Apparent fundamental power*** (VA) Sfund ₁ , Sfund ₂ , Sfund ₃ , S ⁺ _{tot} | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) | ±0.2 % · Sfund |
| | | With flex clamps A 1227/A 1445/A 1501/A 1502 / 3000A A 1446/A 1503 / 6000A | ±1.7 % · Sfund |
| | | With iron clamps A 1281 / 1000 A A 1588 / 150 A | ±0.7 % · Sfund |

*Accuracy values are valid if $\cos \varphi \geq 0.80$, $I \geq 10 \% I_{Nom}$ and $U \geq 80 \% U_{Nom}$

**Accuracy values are valid if $\sin \varphi \geq 0.50$, $I \geq 10 \% I_{Nom}$ and $U \geq 80 \% U_{Nom}$

***Accuracy values are valid if $\cos \varphi \geq 0.50$, $I \geq 10 \% I_{Nom}$ and $U \geq 80 \% U_{Nom}$

6.2.10 Nonfundamental power

| Nonfundamental power | Measuring range | Conditions | Accuracy |
|--|-----------------------------------|--|------------|
| Active harmonic power* (W) Ph ₁ , Ph ₂ , Ph ₃ , Ph _{tot} | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) Ph > 1% · P | ±1.0% · Ph |

| | | | |
|--|-------------------------------|--|-----------------------|
| Current distortion power* (var) $D_{I1}, D_{I2}, D_{I3}, De_I$ | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) $D_I > 1\% \cdot S$ | $\pm 2.0\% \cdot D_I$ |
| Voltage distortion power* (var) $D_{V1}, D_{V2}, D_{V3}, De_V$ | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) $D_V > 1\% \cdot S$ | $\pm 2.0\% \cdot D_V$ |
| Harmonics distortion power* (var) $D_{H1}, D_{H2}, D_{H3}, De_H$ | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) $D_H > 1\% \cdot S$ | $\pm 2.0\% \cdot D_H$ |
| Apparent nonfundamental power* (VA) $S_{N1}, S_{N2}, S_{N3}, Se_N$ | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) $S_N > 1\% \cdot S$ | $\pm 1.0\% \cdot S_N$ |
| Apparent harmonic power* (VA) $S_{H1}, S_{H2}, S_{H3}, Se_H$ | 0.000 k ÷ 999.9 M 4 digits | Excluding clamps (Instrument only) $S_H > 1\% \cdot S$ | $\pm 2.0\% \cdot S_H$ |

*Accuracy values are valid if $I \geq 10\% I_{Nom}$ and $U \geq 80\% U_{Nom}$

6.2.11 Power factor (PF, PFe, PFv, PFa)

| Measuring range | Resolution | Accuracy |
|-----------------|------------|------------|
| -1.00 ÷ 1.00 | 0.01 | ± 0.02 |

6.2.12 Displacement factor (DPF) or Cos ϕ

| Measuring range | Resolution | Accuracy |
|-----------------|------------|------------|
| -1.00 ÷ 1.00 | 0.01 | ± 0.02 |

6.2.13 Energy

| | | Measuring range (kWh, kvarh, kVAh) | Resolution | Accuracy |
|--------|---------------------------------------|---------------------------------------|------------|-----------------------|
| Active | Excluding clamps (Instrument only) | 000,000,000.001 ÷ 999,999,999.999 | 12 digits | $\pm 0.5\% \cdot E_p$ |

| | | | | |
|----------------------|--|-----------------------------------|-----------|------------------------|
| Reactive energy Eq** | With A 1227/A 1445/A 1446/A 1501/A 1502/A 1503 Flex clamps | 000,000,000.001 ÷ 999,999,999.999 | | $\pm 1.8 \% \cdot E_p$ |
| | With A 1281/A 1588 Multirange iron clamps | 000,000,000.001 ÷ 999,999,999.999 | | $\pm 0.8 \% \cdot E_p$ |
| | With A 1033 1000 A | 000,000,000.001 ÷ 999,999,999.999 | | $\pm 1.6 \% \cdot E_p$ |
| | Excluding clamps (Instrument only) | 000,000,000.001 ÷ 999,999,999.999 | 12 digits | $\pm 0.5 \% \cdot E_q$ |
| | With A 1227/A 1445/A 1446/A 1501/A 1502/A 1503 Flex clamps | 000,000,000.001 ÷ 999,999,999.999 | | $\pm 1.8 \% \cdot E_q$ |
| | With A 1281/A 1588 Multirange clamps | 000,000,000.001 ÷ 999,999,999.999 | | $\pm 0.8 \% \cdot E_q$ |
| | With A 1033 1000 A | 000,000,000.001 ÷ 999,999,999.999 | | $\pm 1.6 \% \cdot E_q$ |

*Accuracy values are valid if $\cos \varphi \geq 0.80$, $I \geq 10 \% I_{Nom}$ and $U \geq 80 \% U_{Nom}$

**Accuracy values are valid if $\sin \varphi \geq 0.50$, $I \geq 10 \% I_{Nom}$ and $U \geq 80 \% U_{Nom}$

6.2.14 Voltage harmonics and THD

| Measuring range | Harmonic component N | System frequency | Resolution | Accuracy |
|---|----------------------|------------------|------------|-----------------------------|
| $U_{hN} < 1 \% U_{Nom}$ | $0 \div 50^{th}$ | 50/60Hz | 10 mV | $\pm 0.05 \% \cdot U_{Nom}$ |
| $1 \% U_{Nom} < U_{hN} < 20 \% U_{Nom}$ | | | 10 mV | $\pm 5 \% \cdot U_{hN}$ |
| $U_{hN} < 1 \% U_{Nom}$ | $0 \div 13^{th}$ | 400Hz | 10 mV | $\pm 0.05 \% \cdot U_{Nom}$ |
| $1 \% U_{Nom} < U_{hN} < 20 \% U_{Nom}$ | | | 10 mV | $\pm 5 \% \cdot U_{hN}$ |
| $U_{hN} < 1 \% U_{Nom}$ | $0 \div 20^{th (1)}$ | VFD* | 10 mV | $\pm 0.2 \% \cdot U_{Nom}$ |
| $1 \% U_{Nom} < U_{hN} < 20 \% U_{Nom}$ | $0 \div 13^{th (2)}$ | | 10 mV | $\pm 5 \% \cdot U_{hN}$ |
| | $0 \div 5^{th (3)}$ | | | |

U_{Nom} : Nominal voltage (RMS)

U_{hN} : measured harmonic voltage

N: harmonic component

(1): If fundamental voltage frequency is within 5÷16Hz range

(2): If fundamental voltage frequency is within 16÷33Hz range

(3): If fundamental voltage frequency is within 33 ÷ 120Hz

| Measuring range | Resolution | Accuracy |
|--|------------|-----------|
| $0 \% U_{Nom} < THD_U < 20 \% U_{Nom}$ | 0.1 % | ± 0.3 |

U_{Nom} : nominal voltage (RMS)

6.2.15 Current harmonics, THD and k-factor

| Measuring range | Harmonic component N | System frequency | Resolution | Accuracy |
|-----------------|----------------------|------------------|------------|----------|
|-----------------|----------------------|------------------|------------|----------|

| | | | | |
|-----------------------------------|----------------------|---------|-------|-----------------------------|
| $I_{hN} < 10 \% I_{Nom}$ | $0 \div 50^{th}$ | 50/60Hz | 10 mV | $\pm 0.15 \% \cdot I_{Nom}$ |
| $10 \% I_{Nom} < I_{hN} < 100 \%$ | | | 10 mV | $\pm 5 \% \cdot I_{hN}$ |
| $I_{hN} < 10 \% I_{Nom}$ | $0 \div 13^{th}$ | 400Hz | 10 mV | $\pm 0.15 \% \cdot I_{Nom}$ |
| $10 \% I_{Nom} < I_{hN} < 100 \%$ | | | 10 mV | $\pm 5 \% \cdot I_{hN}$ |
| $I_{hN} < 10 \% I_{Nom}$ | $0 \div 20^{th (1)}$ | VFD* | 10 mV | $\pm 0.2 \% \cdot I_{Nom}$ |
| $10 \% I_{Nom} < I_{hN} < 100 \%$ | $0 \div 13^{th (2)}$ | | 10 mV | $\pm 5 \% \cdot I_{hN}$ |
| | $0 \div 5^{th (3)}$ | | | |

I_{Nom} : Nominal voltage (RMS)

I_{hN} : measured harmonic current

N : harmonic component

(1): If fundamental voltage frequency is within 5÷16Hz range

(2): If fundamental voltage frequency is within 16÷33Hz range

(3): If fundamental voltage frequency is within 33 ÷ 120Hz

| Measuring range | Resolution | Accuracy |
|---|------------|-----------|
| $0 \% I_{Nom} < THD_I < 100 \% I_{Nom}$ | 0.1 % | ± 0.6 |
| $100 \% I_{Nom} < THD_I < 200 \% I_{Nom}$ | 0.1 % | ± 0.3 |

I_{Nom} : Nominal current (RMS)

| Measuring range | Resolution | Accuracy |
|-----------------|------------|-----------|
| $0 < k < 200$ | 0.1 | ± 0.6 |

6.2.16 Voltage interharmonics

| Measuring range | Harmonic component N | System frequency | Resolution | Accuracy |
|--|----------------------|------------------|------------|-----------------------------|
| $U_{ihN} < 1 \% U_{Nom}$ | $0 \div 50^{th}$ | 50/60Hz | 10 mV | $\pm 0.05 \% \cdot U_{Nom}$ |
| $1 \% U_{Nom} < U_{ihN} < 20 \% U_{Nom}$ | | | 10 mV | $\pm 5 \% \cdot U_{hN}$ |
| $U_{ihN} < 1 \% U_{Nom}$ | $0 \div 20^{th (1)}$ | VFD* | 10 mV | $\pm 0.2 \% \cdot U_{Nom}$ |
| $1 \% U_{Nom} < U_{ihN} < 20 \% U_{Nom}$ | $0 \div 13^{th (2)}$ | | 10 mV | $\pm 5 \% \cdot U_{hN}$ |
| | $0 \div 5^{th (3)}$ | | | |

U_{Nom} : Nominal voltage (RMS)

U_{ihN} : measured harmonic voltage

N : interharmonic component

(1): If fundamental voltage frequency is within 5÷16Hz range

(2): If fundamental voltage frequency is within 16÷33Hz range

(3): If fundamental voltage frequency is within 33 ÷ 120Hz

6.2.17 Current interharmonics

| Measuring range | Harmonic component N | System frequency | Resolution | Accuracy |
|------------------------------------|----------------------|------------------|------------|-----------------------------|
| $I_{ihN} < 10 \% I_{Nom}$ | $0 \div 50^{th}$ | 50/60Hz | 10 mV | $\pm 0.15 \% \cdot I_{Nom}$ |
| $10 \% I_{Nom} < I_{ihN} < 100 \%$ | | | 10 mV | $\pm 5 \% \cdot I_{ihN}$ |
| $I_{ihN} < 10 \% I_{Nom}$ | $0 \div 20^{th (1)}$ | VFD* | 10 mV | $\pm 0.2 \% \cdot I_{Nom}$ |
| $10 \% I_{Nom} < I_{ihN} < 100 \%$ | $0 \div 13^{th (2)}$ | | 10 mV | $\pm 5 \% \cdot I_{ihN}$ |
| | $0 \div 5^{th (3)}$ | | | |

I_{Nom} : Nominal current (RMS)

I_{ihN} : measured interharmonic current

N : interharmonic component $0^{th} \div 50^{th}$

(1): If fundamental voltage frequency is within 5÷16Hz range

- (2): If fundamental voltage frequency is within 16÷33Hz range
 (3): If fundamental voltage frequency is within 33 ÷ 120Hz

6.2.18 Signalling

| Measuring range | Resolution | Accuracy |
|---|------------|------------------------------------|
| $1 \% U_{\text{Nom}} < U_{\text{Sig}} < 3 \% U_{\text{Nom}}$ | 10 mV | $\pm 0.15 \% \cdot U_{\text{Nom}}$ |
| $3 \% U_{\text{Nom}} < U_{\text{Sig}} < 20 \% U_{\text{Nom}}$ | 10 mV | $\pm 5 \% \cdot U_{\text{Sig}}$ |

U_{Nom} : Nominal current (RMS)

U_{Sig} : Measured signalling voltage

6.2.19 Unbalance

| | Unbalance range | Resolution | Accuracy |
|-------|-----------------|------------|---------------|
| u^- | 0.5 % ÷ 5.0 % | 0.1 % | $\pm 0.15 \%$ |
| u^0 | | | $\pm 0.15 \%$ |
| i^- | 0.0 % ÷ 20 % | 0.1 % | $\pm 1 \%$ |
| i^0 | | | $\pm 1 \%$ |

6.2.20 Overdeviation and Underdeviation

| | Measuring range | Resolution | Accuracy |
|--------------------|-------------------------------|------------|-----------------------------|
| U_{Over} | $0 \div 50 \% U_{\text{Nom}}$ | 0.001 % | $\pm 0.1 \% U_{\text{Nom}}$ |
| U_{Under} | $0 \div 90 \% U_{\text{Nom}}$ | 0.001 % | $\pm 0.1 \% U_{\text{Nom}}$ |

6.2.21 Time and duration uncertainty

Standard compliance: IEC 61000-4-30 Class A (Section 4.6)

Real time clock (RTC) temperature uncertainty

| Operating range | Accuracy | |
|-----------------|-----------------------|------------|
| -20 °C ÷ 70 °C | $\pm 3.5 \text{ ppm}$ | 0.3 s/day |
| 0 °C ÷ 40 °C | $\pm 2.0 \text{ ppm}$ | 0.17 s/day |

Real time clock (GPS) temperature uncertainty

| Operating range | Accuracy |
|-----------------|--|
| -20 °C ÷ 70 °C | $\pm 2 \text{ ms}$ / indefinitely long |

Event duration and recorder time-stamp and uncertainty

| | Measuring Range | Resolution | Error |
|-----------------------------|-----------------|------------|-----------------------|
| Event Duration | 10 ms ÷ 7 days | 1 ms | $\pm 1 \text{ cycle}$ |
| Record and Event Time stamp | N/A | 1 ms | $\pm 1 \text{ cycle}$ |

6.2.22 Temperature probe

| Measuring range | Resolution | Accuracy |
|--|------------|-------------------------|
| -10.0 °C ÷ 85.0 °C | 0.1 °C | $\pm 0.5^\circ\text{C}$ |
| -20.0 °C ÷ -10.0 °C and 85.0 °C ÷ 125.0 °C | | $\pm 2.0^\circ\text{C}$ |

6.2.23 Phase angle

| Measuring range | Resolution | Accuracy |
|------------------|------------|----------|
| -180.0° ÷ 180.0° | 0.1° | ± 0.6° |

6.2.24 400Hz systems specification

| | | |
|---------------------|---|--|
| Sampling frequency: | Normal operation Antialiasing filter | 12,2 kSamples/sec Passband (-3dB): 0 ÷ 5,7kHz Stopband (-80dB): > 6,44 kHz |
| Cycle aggregation: | 50 cycles | |

6.2.25 VFD (Variable frequency drive) systems specification

| | | |
|---------------------|---|---|
| Sampling frequency: | Normal operation Antialiasing filter | 1,7 kSamples/sec Passband (-3dB): 0 ÷ 782 Hz Stopband (-80dB): > 883 Hz |
| Cycle aggregation: | 5 cycles | |

6.2.26 Differences in specification between 400Hz, VFD and 50/60 Hz systems

| Measurement / Recording | 400Hz | VFD | 50 Hz / 60Hz |
|-----------------------------|----------------------|-------------------------------------|----------------------|
| Voltage | • ⁽¹⁾ | • ⁽¹⁾ | • |
| Current | • ⁽¹⁾ | • ⁽¹⁾ | • |
| Frequency | 335 Hz ÷ 465 Hz | 5 Hz ÷ 120 Hz | • |
| Power | • ⁽¹⁾ | • ⁽¹⁾ | • |
| Energy | • ⁽¹⁾ | • ⁽¹⁾ | • |
| Unbalance | • ⁽¹⁾ | • ⁽¹⁾ | • |
| Flicker | - | - | • |
| THD | • | • | • |
| Voltage Harmonics | 0 ÷ 13 th | 0 ÷ 20 th ⁽³⁾ | 0 ÷ 50 th |
| Current Harmonics | 0 ÷ 13 th | 0 ÷ 20 th ⁽³⁾ | 0 ÷ 50 th |
| Voltage Interharmonics | - | 0 ÷ 20 th ⁽³⁾ | 1 ÷ 50 th |
| Current Interharmonics | - | 0 ÷ 20 th | 1 ÷ 50 th |
| Events | • ⁽¹⁾ | • ⁽¹⁾ | • |
| RVC - Rapid Voltage Changes | - | • ⁽¹⁾ | • |
| Signalling | - | - | • |
| Network Configurations | • ⁽¹⁾ | • ⁽¹⁾ | • |
| General recorder | • ⁽¹⁾ | • ⁽¹⁾ | • |
| Waveform / inrush recorder | • ⁽¹⁾ | • ⁽¹⁾ | • |
| Transient recorder | • ⁽¹⁾ | • ⁽¹⁾ | • |
| Waveform Snapshot | • ⁽¹⁾ | • ⁽¹⁾ | • |
| Cycle aggregation | 50 cycles | 5 cycles | 10/12 cycles |

⁽¹⁾ Identical technical specification (accuracy, measurement ranges, etc) as on 50Hz/60Hz systems

⁽²⁾ On 3-phase 4-wire systems measurement are performed on 3 voltage and 4 current channels, channel U_{N-GND} is not used.

⁽³⁾ Number of harmonics depends on voltage/current frequency 5÷16Hz – 20 harmonics, 16÷33Hz 13 harmonics, 33 ÷ 120Hz 5 harmonics

6.3 Recorders

6.3.1 General recorder

| | |
|------------------------------|---|
| Sampling | According to the IEC 61000-4-30 Class A requirements. The basic measurement time interval for voltage, harmonics, interharmonics and unbalance is 10-cycle time interval for a 50 Hz power system and 12-cycle time interval for a 60 Hz power system. Instrument provides approximately 3 readings per second, continuous sampling. All channels are sampled simultaneously. For harmonics measurement input samples are resampled, in order to assure that sampling frequency is continuously synchronized with main frequency. |
| Recording quantities | Voltage, current, frequency, crest factors, power, energy, 50 harmonics, 50 interharmonics, flickers, signalling, unbalance, under and over deviation. See section 4.4 for details which minimum, maximum, average and active average values are stored for each parameter. |
| Recording interval | 1 s, 3 s (150 / 180 cycles), 5 s, 10 s, 1 min, 2 min, 5 min, 10 min, 15 min, 30 min, 60 min, 120 min. |
| Events | All events, without limitation can be stored into record. |
| Alarms | All alarms, without limitation can be stored into record. |
| Signalling | Signalling events, without limitation can be stored into record. |
| Transients (MI 2893 only) | Transients, without limitation can be stored into record. MI 2893 only; MI 2892/MI 2885 have realized transient recorder as independent recorder. |
| Inrush | Inrush currents, without limitation can be stored into record. |
| RVC | RVC, without limitation can be stored into record. |
| 200 ms U/I/f | 200 ms U/I/f Snapshot can be stored into record (every 60 minutes). |
| Trigger | Predefined start time or manual start. |

Note: If during record session instrument batteries are drained, due to long interruption for example, instrument will shut down and after electricity comes back, it will automatically restart recording session.

Table 147: General recording max. duration

| Recording interval | Max. record duration* |
|------------------------|-----------------------|
| 1 s | 12 hours |
| 3 s (150 / 180 cycles) | 2 days |
| 5 s | 3 days |
| 10 s | 7 days |
| 1 min | 30 days |
| 2 min | 60 days |
| 5 min | |
| 10 min | |
| 15 min | |
| 30 min | > 60 days |
| 60 min | |
| 120 min | |

*At least 2 GB of free space should be available on microSD card.

In case, that record duration is set to "Manual", that instrument automatically start new recorder after the first one is finished due to reach the maximum file length. Instrument perform so many recorders, as it is available memory on the SD card.

In this manner a single microSD card with a capacity of 7.566 GB (nominal 8 GB) can save 4 entire recording sessions (each 12 hours long) and an additional 6 hours (all together 4x12 hours + 6 hours, i.e. 2 days and 6 hours of recordings). This approach also works for other time intervals (not just 1 second), maximizing usage of storage capacity on the selected microSD card.

Figure 181: General Recorder setup to allow auto-recording restart, when reaches maximum file length

Note: In case of recording with the interval shorter than 5 seconds, we recommend not to record additional network events simultaneously with the recorder due to saving large files to SD card and lot of processes needs to be done.

Note: Recorder file size is limited to 2 GB due to the FAT32 SD card formatting.

6.3.2 Waveform/inrush recorder

| | |
|----------------------|--|
| Sampling | 7 kSamples/s, continuous sampling per channel. All channels are sampled simultaneously. |
| Recording time | From 1 sec to 60 seconds. |
| Recording type | Continuous – consecutive waveform recording until user stops the measurement or instrument runs out of storage memory. Max. 1500 records can be stored per session. Default setting is 200 records, more than 200 records can slow down the instrument. |
| Recording quantities | Waveform samples of: $U_1, U_2, U_3, U_N, (U_{12}, U_{23}, U_{31}), I_1, I_2, I_3, I_N$ |
| Trigger | Voltage or current level, voltage events, alarms defined in alarm table or manual trigger. |

6.3.3 Waveform snapshot

| | |
|----------------------|---|
| Sampling | 7 kSamples/s, continuous sampling per channel. All channels are sampled simultaneously. |
| Recording time | 10/12 cycle period. |
| Recording quantities | Waveform samples of: $U_1, U_2, U_3, U_N, (U_{12}, U_{23}, U_{31}), I_1, I_2, I_3, I_N$, all measurements. |
| Trigger | Manual; every 60 minutes if option is selected in General recorder; at Start/End of General recorder |

6.3.4 Transient recorder

| | |
|----------|-----------------|
| Sampling | MI 2893: |
|----------|-----------------|

| | |
|----------------------|---|
| | <p>1 MSamples/s, continuous sampling per channel. All channels are sampled simultaneously.</p> <p>MI 2892/MI 2885:</p> <p>49 kSamples/s, continuous sampling per channel. All channels are sampled simultaneously.</p> |
| Recording time | <p>MI 2893: One cycle period.</p> <p>MI 2892/MI 2885: programmable Pretrigger/Duration... up to 50 periods max.</p> |
| Recording quantities | Waveform samples of: $U_1, U_2, U_3, U_N, (U_{12}, U_{23}, U_{31}), I_1, I_2, I_3, I_N$ |
| Trigger: | <p>MI 2893:</p> <p>Transient selection measurement between N/GND</p> <p>Envelope and level trigger simultaneously- for details see section 5.1.20</p> <p>MI 2892/MI 2885:</p> <p>Transient measurements related to Neutral line; single trigger selection only.</p> |

6.4 Standards compliance

6.4.1 Compliance to the IEC 61557-12

General and essential characteristics

| | |
|-----------------------------------|--|
| Power quality assessment function | -A |
| Classification according to 4.3 | SD Indirect current and direct voltage measurement |
| | SS Indirect current and indirect voltage measurement |
| Temperature | K50 |
| Humidity + altitude | Standard |

Measurement characteristics

| Function symbols | Class according to IEC 61557-12 | Measuring range |
|------------------|---------------------------------|---------------------------------|
| P | 1 | 2 % ÷ 200% $I_{Nom}^{(1)}$ |
| Q | 1 | 2 % ÷ 200% $I_{Nom}^{(1)}$ |
| S | 1 | 2 % ÷ 200% $I_{Nom}^{(1)}$ |
| Ep | 1 | 2 % ÷ 200% $I_{Nom}^{(1)}$ |
| Eq | 2 | 2 % ÷ 200% $I_{Nom}^{(1)}$ |
| eS | 1 | 2 % ÷ 200% $I_{Nom}^{(1)}$ |
| PF | 0.5 | - 1 ÷ 1 |
| I, I_{Nom} | 0.2 | 2 % I_{Nom} ÷ 200 % I_{Nom} |
| I_{h_n} | 1 | 0 % ÷ 100 % I_{Nom} |
| THDi | 2 | 0 % ÷ 100 % I_{Nom} |

(1) – Nominal current depends on current sensor.

6.4.2 Compliance to the to the IEC 61000-4-30

| IEC 61000-4-30 Section and Parameter | MI 2893/MI 2892 Measurement | Class |
|---|------------------------------------|-------|
| 4.4 Aggregation of measurements in time intervals* <ul style="list-style-type: none"> aggregated over 150/180-cycle aggregated over 10 min aggregated over 2 h | Timestamp, Duration | A |
| 4.6 Real time clock (RTC) uncertainty | | A |
| 4.7 Flagging | | A |
| 5.1 Frequency | Freq | A |
| 5.2 Magnitude of the Supply | U | A |
| 5.3 Flicker | P_{st} , P_{It} | A |
| 5.4 Dips and Swells | U_{Dip} , U_{Swell} , duration | A |
| 5.5 Interruptions | duration | A |
| 5.7 Unbalance | u^- , u^0 | A |
| 5.8 Voltage Harmonics | $U_{h0\div50}$ | A |
| 5.9 Voltage Interharmonics | $U_{ih0\div50}$ | A |
| 5.10 Mains signalling voltage | U_{Sig} | A |
| 5.12 Underdeviation and overdeviation | U_{Under} , U_{Over} | A |

| IEC 61000-4-30 Section and Parameter | MI 2885 Measurement | Class |
|---|------------------------------------|-------|
| 4.4 Aggregation of measurements in time intervals* <ul style="list-style-type: none"> aggregated over 150/180-cycle aggregated over 10 min aggregated over 2 h | Timestamp, Duration | A |
| 4.6 Real time clock (RTC) uncertainty | | A |
| 4.7 Flagging | | A |
| 5.1 Frequency | Freq | A |
| 5.2 Magnitude of the Supply | U | S |
| 5.3 Flicker | P_{st} , P_{It} | A |
| 5.4 Dips and Swells | U_{Dip} , U_{Swell} , duration | S |
| 5.5 Interruptions | duration | S |
| 5.7 Unbalance | u^- , u^0 | S |
| 5.8 Voltage Harmonics | $U_{h0\div50}$ | S |
| 5.9 Voltage Interharmonics | $U_{ih0\div50}$ | S |
| 5.10 Mains signalling voltage | U_{Sig} | S |
| 5.12 Underdeviation and overdeviation | U_{Under} , U_{Over} | A |

* Instrument aggregate measurement according to selected **Interval:** parameter in GENERAL RECORDER. Aggregated measurements are shown in TREND screens, only if GENERAL RECORDER is active.

7 Maintenance

7.1 Inserting batteries into the instrument

1. Make sure that the power supply adapter/charger and measurement leads are disconnected and the instrument is switched off before opening battery compartment cover.
2. Insert batteries as shown in figure below (insert batteries correctly, otherwise the instrument will not operate and the batteries could be discharged or damaged).



Figure 182: Battery compartment

| | |
|---|---------------------|
| 1 | Battery cells |
| 2 | Serial number label |

3. Turn the instrument upside down (*see figure below*) and put the cover on the batteries.



Figure 183: Closing the battery compartment cover

4. Screw the cover on the instrument.



Warnings!

- Hazardous voltages exist inside the instrument. Disconnect all test leads, remove the power supply cable and turn off the instrument before removing battery compartment cover.
- Use only power supply adapter/charger delivered from manufacturer or distributor of the equipment to avoid possible fire or electric shock.
- Do not use standard batteries while power supply adapter/charger is connected, otherwise they may explode!
- Do not mix batteries of different types, brands, ages, or charge levels.
- When charging batteries for the first time, make sure to charge batteries for at least 24 hours before switching on the instrument.

Notes:

- Rechargeable NiMH batteries, type HR 6 (size AA), are recommended. The charging time and the operating hours are given for batteries with a nominal capacity of 2400 mAh.
- If the instrument is not going to be used for a long period of time remove all batteries from the battery compartment. The enclosed batteries can supply the instrument for approx. 5 to 7 hours (MI 2892/2885); and 3 to 5 hours (MI 2893) (depends on the battery state, environmental conditions etc).

7.2 Batteries

Instrument contains rechargeable NiMH batteries. These batteries should only be replaced with the same type as defined on the battery placement label or in this manual.

If it is necessary to replace batteries, all six have to be replaced. Ensure that the batteries are inserted with the correct polarity; incorrect polarity can damage the batteries and/or the instrument.

Precautions on charging new batteries or batteries unused for a longer period

Unpredictable chemical processes can occur during charging new batteries or batteries that were unused for a longer period of time (more than 3 months). NiMH and NiCd batteries are affected to a various degree (sometimes called as memory effect). As a result, the instrument operation time can be significantly reduced at the initial charging/discharging cycles.

Therefore, it is recommended:

- To completely charge the batteries
- To completely discharge the batteries (can be performed with normal working with the instrument).
- Repeating the charge/discharge cycle for at least two times (four cycles are recommended).

When using external intelligent battery chargers one complete discharging /charging cycle is performed automatically.

After performing this procedure, a normal battery capacity is restored. The operation time of the instrument now meets the data in the technical specifications.

Notes:

The charger in the instrument is a pack cell charger. This means that the batteries are connected in series during the charging so all batteries have to be in similar state (similarly charged, same type and age).

Even one deteriorated battery (or just of another type) can cause an improper charging of the entire battery pack (heating of the battery pack, significantly decreased operation time).

If no improvement is achieved after performing several charging/discharging cycles the state of individual batteries should be determined (by comparing battery voltages, checking them in a cell charger etc). It is very likely that only some of the batteries are deteriorated.

The effects described above should not be mixed with normal battery capacity decrease over time. All charging batteries lose some of their capacity when repeatedly charged/discharged. The actual decrease of capacity versus number of charging cycles depends on battery type and is provided in the technical specification of batteries provided by battery manufacturer.

7.3 Firmware upgrade

Metrel as manufacturer is constantly adding new features and enhance existing. In order to get most of your instrument, we recommend periodic check for software and firmware updates. In this section firmware upgrade process is described.

7.3.1 Requirements

Firmware upgrade process has following requirements:

- **PC computer** with installed latest version of PowerView software. If your PowerView is out of date, please update it, by clicking on “Check for PowerView updates” in Help menu, and follow the instructions
- **USB cable**

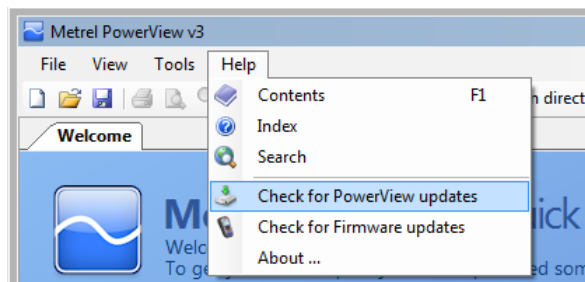


Figure 184: PowerView update function

7.3.2 Upgrade procedure

1. Connect PC and instrument with USB cable
2. Establish USB communication between them. In PowerView, go to Tools→Options menu and set USB connection as shown on figure below.

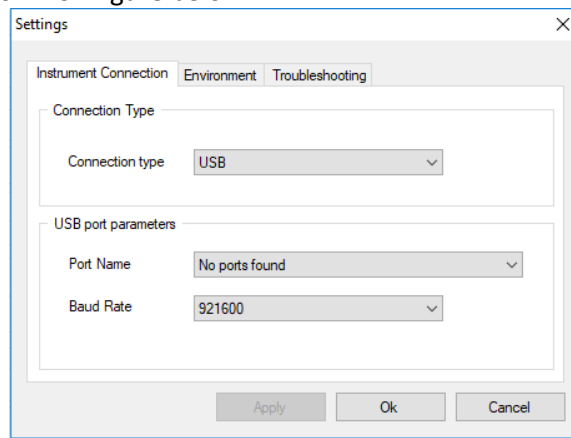


Figure 185: Selecting USB communication

3. Click on Help → Check for Firmware updates.

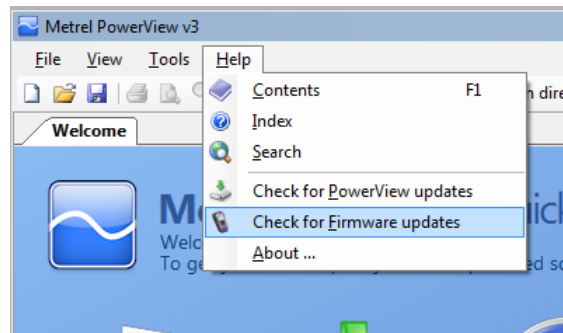


Figure 186: Check for Firmware menu

4. Version checker window will appear on the screen. Click on Start button.

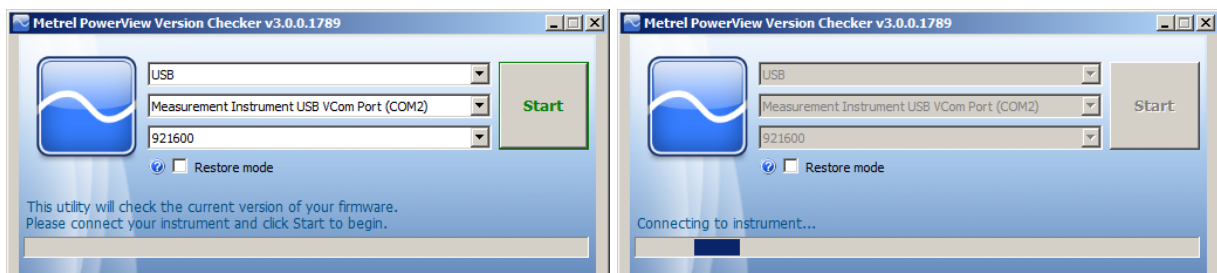


Figure 187: Check for Firmware menu

5. If your instrument has older FW, PowerView will notify you that new version of FW is available. Click on Yes to proceed.

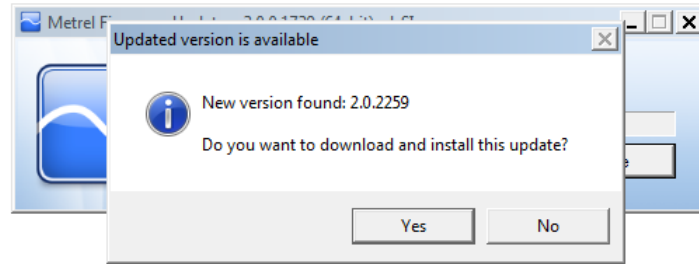


Figure 188: New firmware is available for download

6. After update is downloaded, FlashMe application will be launched. This application will actually upgrade instrument FW. Click on RUN to proceed.

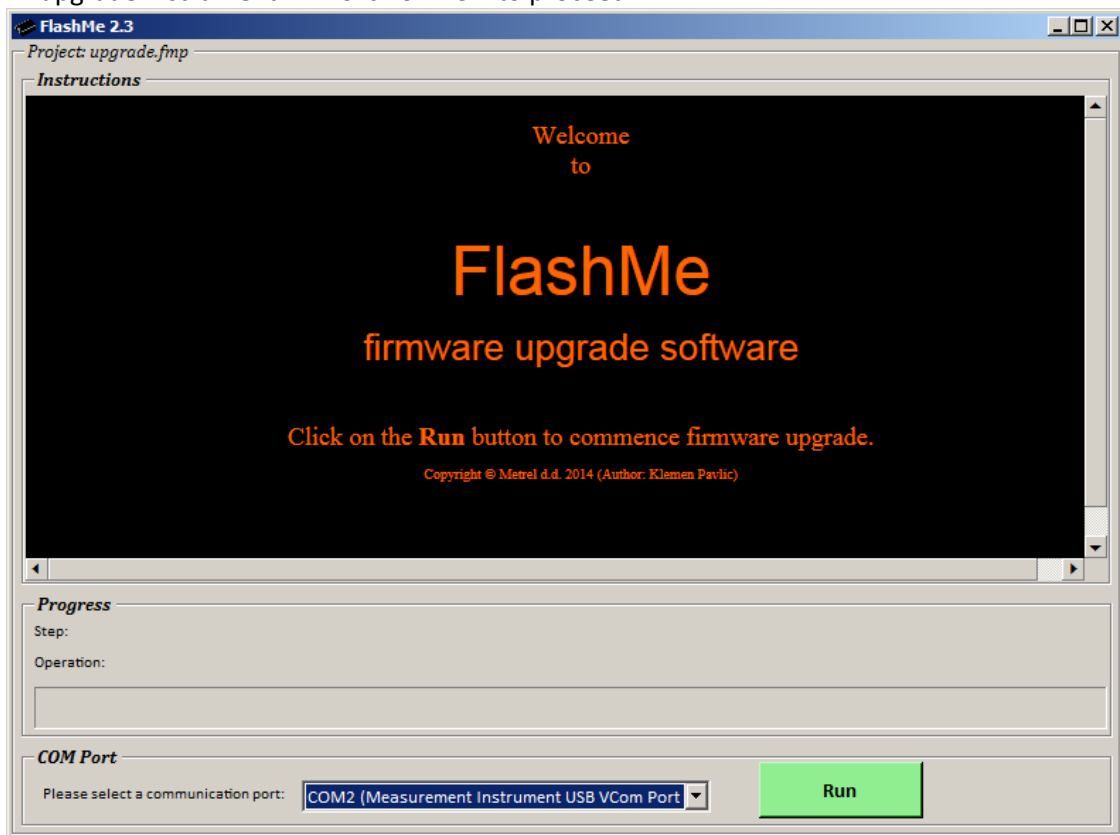


Figure 189: FlashMe firmware upgrade software

7. FlashMe will automatically detect MI 2893/MI 2892/MI 2885 instrument, which can be seen in COM port selection menu. In some rare cases user should point FlashMe manually to COM port where instrument is connected. Click then on Continue to proceed.



Figure 190: FlashMe configuration screen

8. Instrument upgrade process should begin. Please wait until all steps are finished. Note that this step should not be interrupted; as instrument will not work properly. If upgrade process goes wrong, please contact your distributor or Metrel directly. We will help you to resolve issue and recover instrument.



Figure 191: FlashMe programming screen

7.4 Power supply considerations



Warnings

- Use only charger supplied by manufacturer.
- Disconnect power supply adapter if you use standard (non-rechargeable) batteries.

When using the original power supply adapter/charger the instrument is fully operational immediately after switching it on. The batteries are charged at the same time, nominal charging time is 3.5 hours. The batteries are charged whenever the power supply adapter/charger is connected to the instrument. Inbuilt protection circuit controls the charging procedure and assure maximal battery lifetime. Batteries will be charged only if their temperature is less than 40 °C.

If the instrument is left without batteries and charger for more than 2 minutes, time and date settings are reset.

7.5 Cleaning

To clean the surface of the instrument, use a soft cloth slightly moistened with soapy water or alcohol. Then leave the instrument to dry totally before use.



Warnings

- Do not use liquids based on petrol or hydrocarbons!
- Do not spill cleaning liquid over the instrument!

7.6 Periodic calibration

To ensure correct measurement, it is essential that the instrument is regularly calibrated. If used continuously on a daily basis, a six-month calibration period is recommended, otherwise annual calibration is sufficient.

7.7 Service

For repairs under or out of warranty please contact your distributor for further information.

7.8 Troubleshooting

If ESC button is pressed while switching on the instrument, the instrument will not start. Batteries have to be removed and inserted back. After that the instrument will start normally.

8 Version of document

| # | Document version | Description of changes |
|---|------------------|--|
| 3 | 1.3.1 | <ul style="list-style-type: none"> - Storage temperature increased to -40°C - Added E-Meter measurement on the primary transformer side - Added info about recorder auto-restart – when recorder file reaches maximum file length - Added A 1398 PQA current clamps - Added note, related to recording with integration period less than 10 seconds |
| 2 | 1.2.1 | <ul style="list-style-type: none"> - Added E-Meter recorder - Added Backlight functionality - Added GPS coordinates - Energy Recorder improvement - Added R.F. |
| 1 | 1.1.1 | - First official version |

Manufacturer address:

METREL d.d.
Ljubljanska 77,
SI-1354 Horjul,
Slovenia

Tel: +(386) 1 75 58 200
Fax: +(386) 1 75 49 095
Email: metrel@metrel.si
<http://www.metrel.si>